




# operator's manual supplement

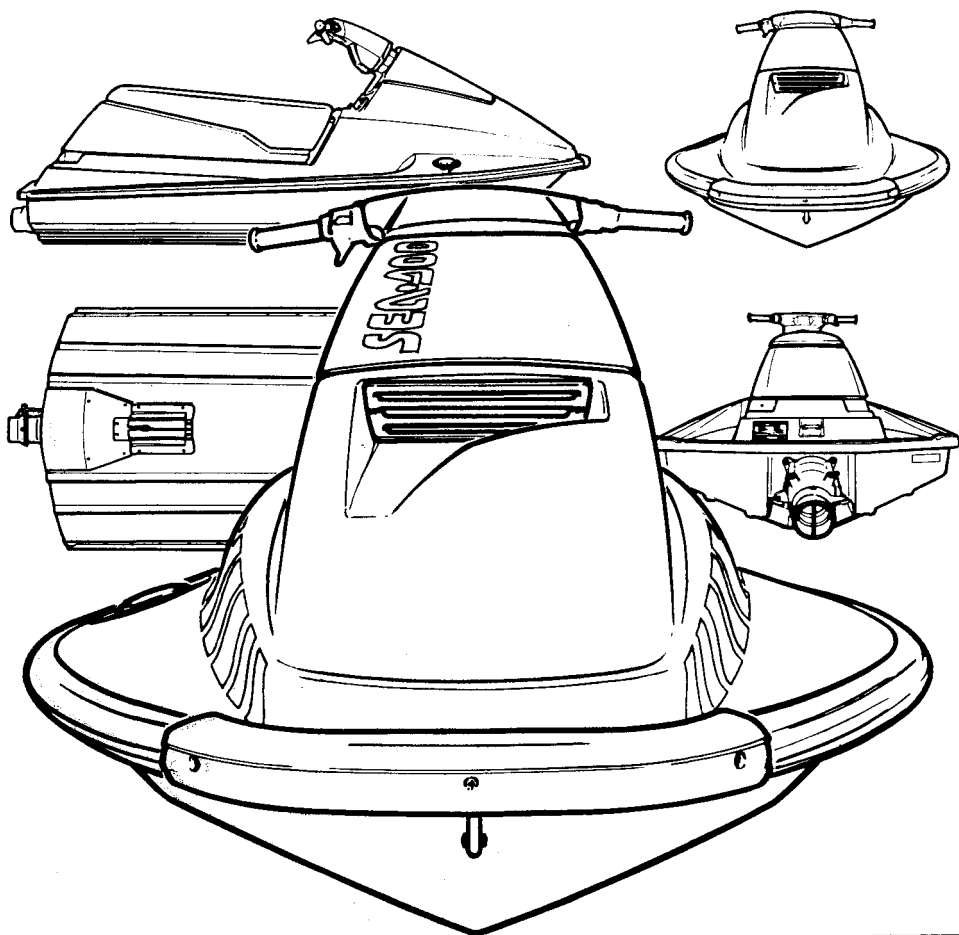

THIS BOOKLET MUST BE USED IN CONJUNCTION WITH THE  
SEA-DOO OPERATOR'S MANUAL (P/N 219 000 087)






# Controls and Components


## CONTROLS AND COMPONENTS LOCATION

(TYPICAL)

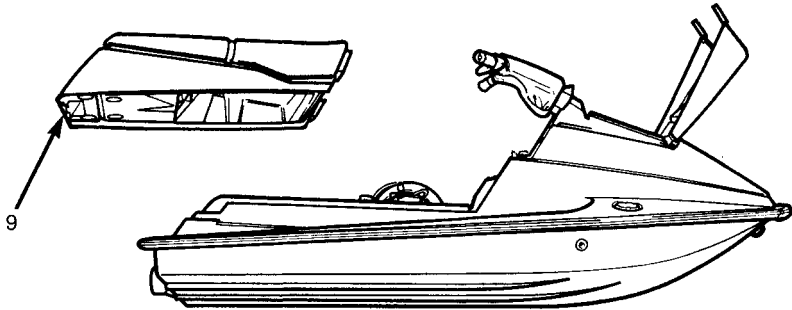

F001 011 042

(TYPICAL)

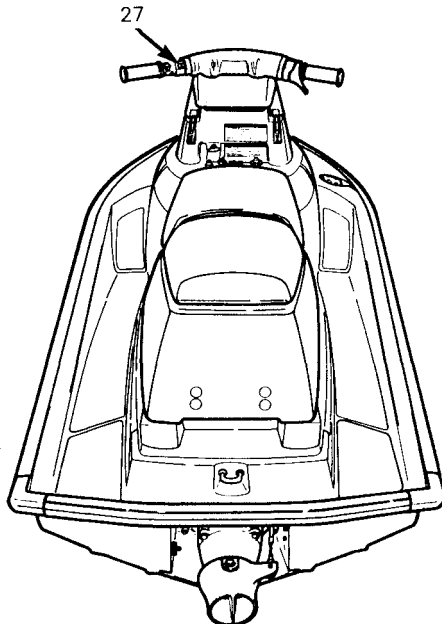

F001 011 005

## 9) Seat Opening

**(Replace text of item 9 on page 15)**

Removing the seat allows access to the engine compartment and to oil reservoir cap and dipstick.

The seat latch is located at the rear end and underneath the seat.

To remove seat, pull the latch lever upward and hold. Lift and pull the seat rearward.

When re-installing the seat, insert seat front tab into body hook.

Pull latch to insert it over the rear hook. Release latch lever then firmly push on rear of the seat to re-latch.


**▼ CAUTION : Make sure seat is securely latched.**

## 27) Engine Stop Button

**(New text to be added on page 18)**

Located on left side of handlebar, this button is intended to stop engine when necessary. To use, fully release throttle lever then press the Button AND HOLD until engine stops.

**○ NOTE :** Since it is a momentary switch, the button must be held until the engine has completely stopped.

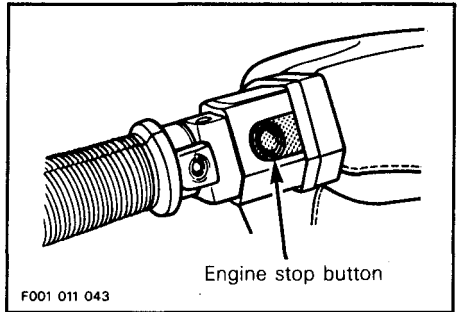

**◆ WARNING :** When the engine is stopped, watercraft directional control is not available.