

# SEA-DOO®



## SWITCH FISH SERIES TRAILERS

# USER'S GUIDE

Includes Safety, Use and Maintenance Information

### **WARNING**

Read this user's guide thoroughly. It contains important safety information.  
Keep this user's guide for reference.

---

All rights reserved. No parts of this Manual may be reproduced in any form without the prior written permission of Bombardier Recreational Products Inc.  
©Bombardier Recreational Products Inc. (BRP) 2024

# TABLE OF CONTENTS

## GENERAL INFORMATION

<b>GENERAL INFORMATION</b> .....	<b>6</b>
Know Before You Go .....	6
About this User's Guide .....	6
Safety Messages .....	6

## SAFETY INFORMATION

<b>SPECIAL SAFETY MESSAGES</b> .....	<b>8</b>
Important Warnings .....	8
Important Information .....	8
<b>LOCATION OF THE IMPORTANT LABELS</b> .....	<b>10</b>
Safety Labels (All Models) .....	10
Technical Information Labels .....	14
<b>REPORTING SAFETY DEFECTS</b> .....	<b>15</b>

## OPERATING INSTRUCTIONS

<b>TRAILER SET-UP</b> .....	<b>18</b>
Tongue Weight .....	18
<b>BEFORE GETTING UNDERWAY</b> .....	<b>19</b>
Attaching the Trailer to the Tow Vehicle .....	19
Pre-Use Inspection .....	22
<b>TOWING THE TRAILER</b> .....	<b>23</b>
Maneuvering in Reverse .....	23
<b>LAUNCHING THE WATERCRAFT</b> .....	<b>24</b>
<b>LOADING THE WATERCRAFT</b> .....	<b>25</b>

## MAINTENANCE

<b>MAINTENANCE SCHEDULE</b> .....	<b>28</b>
At Storage .....	28
At Preseason .....	28
<b>MAINTENANCE AND INSPECTION PROCEDURES</b> .....	<b>29</b>
Tongue Safety Cable .....	29
Coupler .....	29
Brakes (if equipped) .....	29
Tires .....	30
Wheels .....	30
Hubs, bearing and seals .....	30
Lights .....	33
Winch .....	33
Jack .....	33
Wooden Bunks .....	33
<b>TRAILER CARE</b> .....	<b>34</b>
Salt Water Use .....	34
Trailer Cleaning .....	34

**TECHNICAL INFORMATION**

**TRAILER IDENTIFICATION NUMBER.....36**  
**TECHNICAL SPECIFICATIONS .....37**

**WARRANTY**

**KARAVAN TRAILERS LLC. LIMITED WARRANTY POLICY: SEA-DOO®**  
**SWITCH TRAILER .....40**  
.....40

**CUSTOMER INFORMATION**

**DATA PRIVACY INFORMATION .....44**  
**CONTACT US .....46**  
    Asia Pacific .....46  
    Europe, Middle East and Africa .....46  
    Latin America .....47  
    North America .....47  
**CHANGE OF ADDRESS/OWNERSHIP .....48**

# GENERAL INFORMATION

# GENERAL INFORMATION

Congratulations on your purchase of your new BRP Sea-Doo® SWITCH® trailer. It is backed by the KARAVAN warranty and a network of authorized KARAVAN dealers ready to provide the parts or service you may require.

## Know Before You Go

To learn how to reduce the risk of accident for you or bystanders, read this user's guide before using this trailer.

Also, read all safety labels on the trailer and watch the safety video: SEA-DOO HOW TO SERIES - PROPER WATERCRAFT TRAILERING available here <https://www.youtube.com/watch?v=mXtHWldt7yl>.

Or using this QR code.



Failure to follow the warnings contained in this user's guide can result in **SERIOUS INJURY** or **DEATH**.

## About this User's Guide

The following guide will help you become better acquainted with your new trailer and its safe operation.

Keep this User's Guide in the tow vehicle so you can refer to it.

If you want to view and/or print an extra copy of this User's Guide, simply visit the following website:

[www.operatorsguides.brp.com](http://www.operatorsguides.brp.com)

It is understood that this User's Guide may be translated into another language. In the event of any discrepancy, the English version shall prevail.


The information and components/system descriptions contained in this document are correct at the time of


publication. Bombardier Recreational Products Inc., however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured. Due to late changes, some differences between the manufactured product and the descriptions and/or specifications in this guide may occur. BRP reserves the right at any time to discontinue or change specifications, designs, features or equipment without incurring any obligation upon itself.


The illustrations in this document show the typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts. However, they represent parts that have the same or similar function.

## Safety Messages

This user's guide utilizes the following symbols and words to emphasize particular information:

The safety alert symbol  indicates a potential injury hazard.

 <b>WARNING</b>
<b>Indicates a potential hazard which, if not avoided, could result in serious injury or death.</b>

 <b>CAUTION</b>
<b>Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.</b>

<b>NOTICE</b>
<b>Indicates an instruction which, if not followed, could severely damage watercraft components or other property.</b>

# **SAFETY INFORMATION**

# SPECIAL SAFETY MESSAGES

## Important Warnings

Always perform the *Pre-Use Inspection* for safe driving.

Always follow the guidelines in *Towing the Trailer*.

Maintain your trailer as per the *Maintenance Schedule*.

Make sure to always secure your trailer with wheel blocks when not in use.

## Important Information

### Trailer

This BRP Sea-Doo SWITCH® trailer has been specially designed to carry the watercraft it was sold with.

### Winch Support Ladder

Use the winch support ladder to access the watercraft on the trailer. Before use, the trailer must be fixed to a tow vehicle and on level surface. Make sure the watercraft is secured on the trailer, and secure the tow vehicle and trailer from rolling (with wheel blocks).

The watercraft's boarding ladder should not be used out of the water. Boarding from the back of the trailer may shift weight balance and cause the tongue to lift upward.

### WARNING

**Avoid personal injury from the trailer tilting backward when walking or standing on the back of the watercraft. If the trailer is not attached to the tow vehicle, support the back of the trailer adequately by putting jack stands under the two longitudinal frame members before getting on the watercraft.**

### Hitch

### WARNING

**The use of a hitch with an insufficient load rating can result in hitch breakdown.**

Be sure the hitch ball size matches the coupler size.

Inspect the hitch for wear, corrosion and cracks before coupling. Replace the required components if any of the above conditions is observed.

### WARNING

**Do not tow whenever a component is defective.**

### NOTICE

**The coupling socket should not be allowed to rest on the ground where dirt and sand can enter the socket. This will lead to excessive wear or cause the locking mechanism to malfunction.**

Ensure the hitch is properly secured before coupling the trailer to the vehicle.

### WARNING

**An improperly coupled trailer can result in a loss of control or a serious road hazard. Never use the trailer until the pre-use inspection has been completed.**

### Tow Vehicle

Some vehicles are not intended to tow a trailer. Make sure your vehicle is designed to tow a trailer and its towing capacity is sufficient.

### WARNING

**Never tow this trailer with a vehicle not intended for trailer towing or with an insufficient towing capacity.**



### ***Accessories and Modifications***

We recommend to use replacement parts and accessories from BRP. They've been especially designed for your trailer and manufactured to meet BRP's demanding standards.


Do not make unauthorized modifications, or use accessories that are not approved by BRP. Since these changes have not been tested by BRP, they may increase the risk of accidents or injuries, and they can make the trailer illegal for use.

# LOCATION OF THE IMPORTANT LABELS

The following labels are on your trailer. If missing or damaged, they can be replaced free of charge. See an authorized Sea-Doo dealer.

Please read the following labels carefully before using your trailer.

## Safety Labels (All Models)

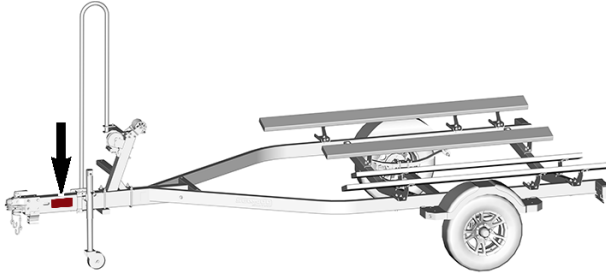

### ▲ WARNING

Serious injury or death can result if this trailer is towed before familiarizing yourself with the manufacturer's operating instructions listed on these labels.


Do not exceed the vehicle's "tow rating" or exceed the GVWR or GVWR.

### ▲ WARNING

#### Before towing this trailer check that:

- Coupler hitch and trailer ball are the same size. Coupler is latched. Safety chains are crisscrossed under tongue and attached to towing vehicle.
  - All trailer lighting is working correctly.
  - Load is secured to trailer (front and rear).
  - Tongue jack (if trailer is equipped) is retracted.
  - Wheel lug bolts are properly tightened.
  - Tires are inflated to pressure indicated on the "Tire and Loading Information" label.
  - Load is within trailer capacity and distributed properly to maintain proper tongue weight.
  - Trailer brakes (if trailer is equipped) are properly adjusted and break-away device is attached to the towing vehicle.
- You are required to comply with local and state requirements regarding brakes, licensing and any additional equipment that contact your state motor vehicle department for more information.

6229

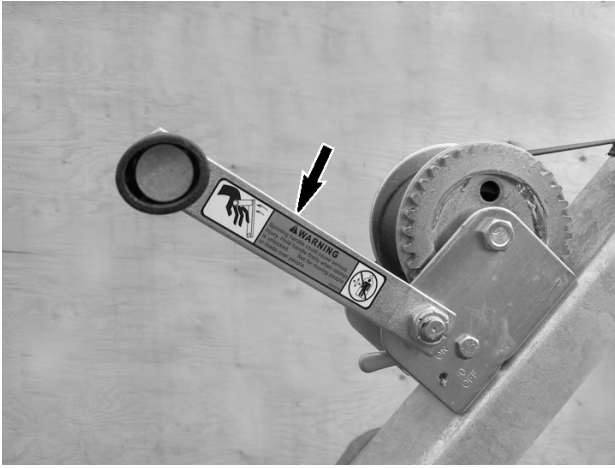


**⚠ WARNING**

Spinning handle could cause serious injury. Hold handle firmly when ratchet is unlocked. Not for moving people or loads over people.

204457B



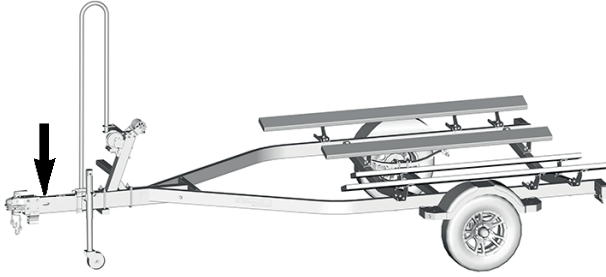

◇ **WARNING** ◇

**ACTUATOR CAPACITY MAXIMUM**

TRAILER GVWR/ATM

50mm BALL 3500lbs (2,000 KG)

2" BALL MTP 8500 LBS (3,855 KG)

TONGUE LOAD RATING

MINIMUM 5% GVWR

MAXIMUM 840 lbs

COUPLER RATING TO MEET

OR EXCEED TRAILER GVWR

ALWAYS USE SAFETY CHAINS

CHECK FLUID LEVEL

USE ONLY DOT 3 BRAKE FLUID

FROM A SEALED CONTAINER

BRAKES NOT EFFECTIVE WHILE

MOVING IN REVERSE


READ OWNERS MANUAL BEFORE USE

SAE & V5 CLASS 4

MODEL MTP 8500



  
**MARINE TRAILER**  
PERFORMANCE  
Houston TX

**PATENT PENDING**

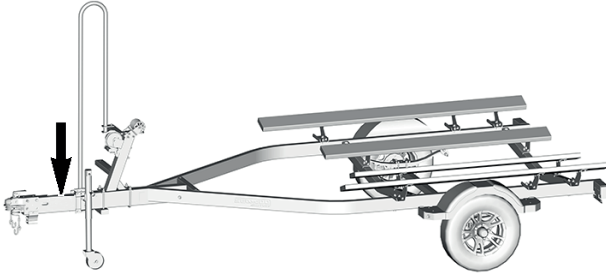

# -ATTENTION-



**TRAILER IS EQUIPPED WITH DISC BRAKES. THE TOW VEHICLE MUST BE EQUIPPED WITH A 5-POLE WIRE HARNESS TO ENABLE TRAILER TO BACK-UP PROPERLY.**

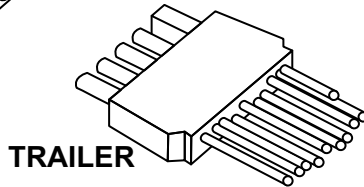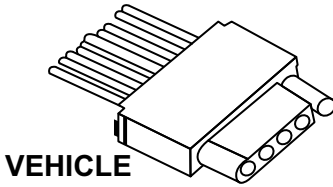

# Technical Information Labels

## NOTICE

The following information may differ from the labels on the trailer. Refer to the labels on the trailer or refer to the *Specifications* section for additional information.

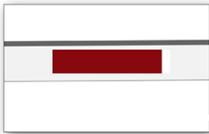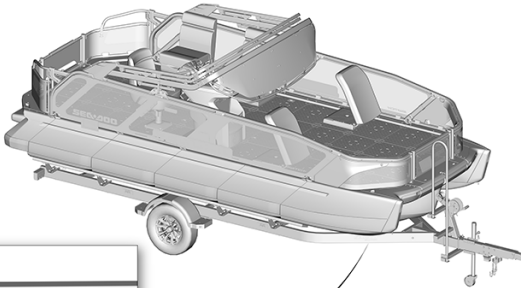

TYPICAL - LABELS LOCATION

MFD BY/FABRIQUE PAR - KARAVAN TRAILERS LLC									
DATE: 08/15/2024		MADE IN USA			JOB# J000065410				
ALL AXLES				COLD INFL. MAX. LOAD					
GVWR / PNBV		GAWR / PNB E		TIRE / PNEU		PRESSURE		CARRYING CAP	
KG	LBS	KG	LBS		KPA	PSI	KG	LBS	RIM
1632	3600	1905	3320	ST185/60R 13D	448	65	1347	2971	13X4.5

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS (FMVSS) IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. / CE VEHICULE EST CONFORME A TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU REGLEMENT SUR LA SECURITE DES VEHICULES AUTOMOBILES DU CANADA EN VIGUEUR A LA DATE DE SA FABRICATION.

SDS-2700-DB10-70-16



BS/Boat Trailer Square Tube

### SWITCH 16 FT.

MFD BY/FABRIQUE PAR - KARAVAN TRAILERS LLC									
DATE: 08/15/2024		MADE IN USA			JOB# J000065410				
ALL AXLES				COLD INFL. MAX. LOAD					
GVWR / PNBV		GAWR / PNB E		TIRE / PNEU		PRESSURE		CARRYING CAP	
KG	LBS	KG	LBS		KPA	PSI	KG	LBS	RIM
1905	4200	1905	4200	ST225/75R 15D	448	65	1547	3410	15X6

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS (FMVSS) IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. / CE VEHICULE EST CONFORME A TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU REGLEMENT SUR LA SECURITE DES VEHICULES AUTOMOBILES DU CANADA EN VIGUEUR A LA DATE DE SA FABRICATION.

SDS-2700-DB10-70-19



BS/Boat Trailer Square Tube

### SWITCH 19 FT.

TIRE AND LOADING INFORMATION  
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT  
The weight of cargo should never exceed 1347 KG 2971 LBS  
Le poids du chargement ne doit jamais dépasser 1347 KG 2971 LBS

# KARAVAN

TIRE / PNEU	SIZE / DIMENSIONS	COLD TIRE PRESSURE / PRESSION DES PNEUS A FROID
FRONT	ST185/60R 13D	448 KPA
AVANT	S0	65 PSI
OPTION		
OPTION		
OPTION		

SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION  
VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS

5K1BS1911SFXXXXXX

TIRE AND LOADING INFORMATION  
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT  
The weight of cargo should never exceed 1547 KG 3410 LBS  
Le poids du chargement ne doit jamais dépasser 1547 KG 3410 LBS

# KARAVAN

TIRE / PNEU	SIZE / DIMENSIONS	COLD TIRE PRESSURE / PRESSION DES PNEUS A FROID
FRONT	ST225/75R1	448 KPA
AVANT	S0	65 PSI
OPTION		
OPTION		
OPTION		

SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION  
VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS

5K1BS2211SFXXXXXX

---

# REPORTING SAFETY DEFECTS

Your safety is very important to Bombardier Recreational Products Inc. (BRP). If you have any concerns you should immediately contact BRP customer service.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the following authorities in addition to notifying Bombardier Recreational Products Inc.:

- In the USA, the National Highway Traffic Safety Administration (NHTSA)
- In Canada, Transport Canada
- In other countries, the competent authorities.

If any of these authorities receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, these authorities cannot become involved in any individual problems between you, your dealer or Bombardier Recreational Products Inc.

## To contact NHTSA:



888-327-4236



1 800-424-9153



National Highway Traffic Safety Administration  
1200 New Jersey Avenue, SE  
Washington, DC 20590



[www.safercar.gov](http://www.safercar.gov)

## To contact Transport Canada:



819-994-3328 (Gatineau-Ottawa area or internationally)  
Toll free : 1 800-333-0510 (in Canada)



Transport Canada - ASFAD  
330 Sparks Street  
Ottawa, ON  
K1A 0N5



<https://www.tc.gc.ca/recalls>

## To Contact Australian Authorities:



1-800-815-272 (Monday to Friday, 9am to 5pm AEST, within Australia)  
Calling from overseas : +61 2 6274 7444



The Director, Recalls Team Vehicle Safety Operations Branch  
Department of Infrastructure, Transport, Regional Development,  
Communications and the Arts GPO  
Box 594  
Canberra ACT  
2601



[recalls@infrastructure.gov.au](mailto:recalls@infrastructure.gov.au)



# **OPERATING INSTRUCTIONS**

---

# TRAILER SET-UP

Do not change the position of the axle.

The winch support has been adjusted to fit the watercraft it was purchased with.

The bunks are fixed to suit the shape of the watercraft hull. They can not be adjusted.


## Tongue Weight

If heavy accessories are added or removed from the pontoon, the winch support position may need to be readjusted.

Move the winch support towards the front or rear to move the watercraft mass. This changes the weight applied to the tongue.

The tongue weight should be from 7 to 12% of the total trailer and watercraft weight with tongue parallel to the ground.

To adjust, loosen the 4 nuts underneath the winch support U-bolts, move winch support to the desired position.

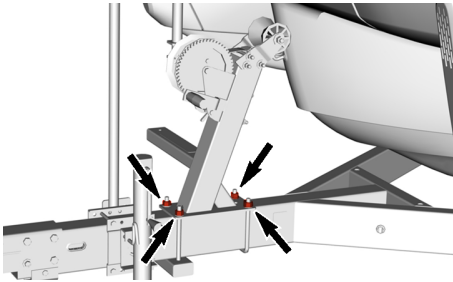


Tighten nuts to specified torque.

Tightening Torque	
Winch support U-bolt nuts	$27 \pm 3$ Nm ( $20 \pm 2$ lbf-ft)

# BEFORE GETTING UNDERWAY


## Attaching the Trailer to the Tow Vehicle

1. Make sure that the coupler and hitch ball are the same size (2 in / 50 mm).
2. Have someone guiding you and back the tow vehicle as close as possible to the trailer. This is easier and safer than pulling the trailer to the vehicle.
3. Be sure the coupler-locking mechanism is released.
4. Raise the front end of the trailer. Position the coupler directly over the hitch ball and lower until it is all the way down.

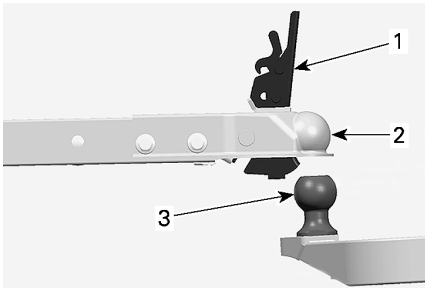

**TYPICAL, WITHOUT BRAKES**


1. Coupler-locking mechanism (released)
2. Coupler
3. Hitch ball

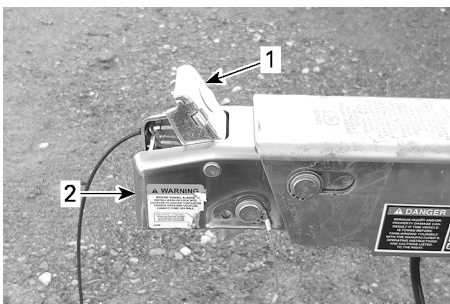

**TYPICAL WITH BRAKES**

1. Coupler-locking mechanism (released)
2. Coupler

5. Check under the coupling to be certain that the ball clamp is below the ball and not riding on top of the ball.

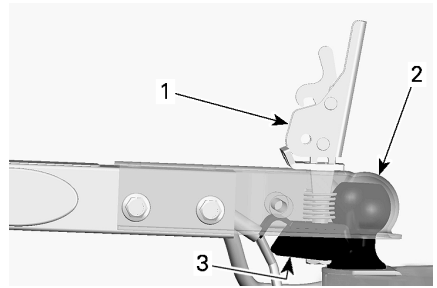


**TYPICAL, WITHOUT BRAKES**

1. Coupler-locking mechanism (released)
2. Hitch ball in coupler
3. Ball clamp
6. Close the coupler on the hitch ball.
7. Using the jack, lift the trailer tongue. If it comes loose from the ball, open the coupler, make sure the clamp is positioned correctly, then close it again.

### **⚠ WARNING**


If the coupler cannot be secured to hitch ball, do not tow the trailer. Refer to an authorized Sea-Doo dealer to inspect the trailer as soon as possible.

8. Lock the coupler using a locking pin.

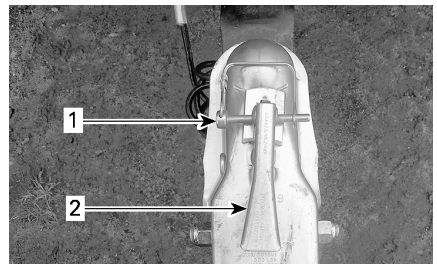

**TYPICAL, WITHOUT BRAKES**

1. Locking pin
2. Coupler-locking mechanism in locked position

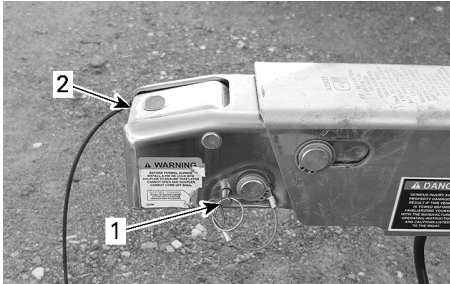

TYPICAL, WITH BRAKES

1. Locking pin
2. Coupler-locking mechanism in locked position


**NOTE:**

At this point the tow vehicle and the trailer should be level.

9. Attach the tongue safety cables or chains, in a crisscross pattern as shown.

**NOTICE**

To avoid damaging wiring harness, ensure the harness is not passed between the tongue safety cables.

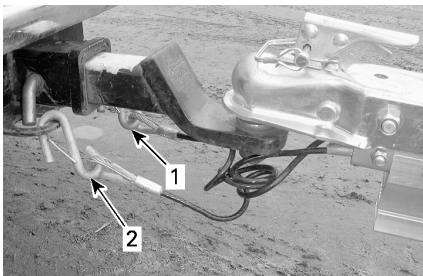

1. LH tongue safety cable attached to the RH side chains of hitch
2. RH tongue safety cable attached to the LH side chains of hitch

10. Connect the trailer connector.

**NOTE:** On brake-equipped trailers, the electrical connector is a 5 pin type. For Australia only, the electrical connector is 7 pin type.

11. Attach the breakaway cable to the tow vehicle as close to center as possible. Do not attach to the tongue safety cables.


**⚠ WARNING**

Never tow a trailer without the breakaway cable secured to tow vehicle. Should the trailer become completely detached from the towing vehicle, if the coupler and/or tow ball, and safety chains were to fail, the breakaway cable is pulled which will apply a braking force to the trailer.

**NOTICE**

Make sure the cable hangs clear of the trailer tongue and is long enough so sharp turns can be permitted without pulling the cable.

12. Ensure the back-up lock pin is not installed before taking the road.

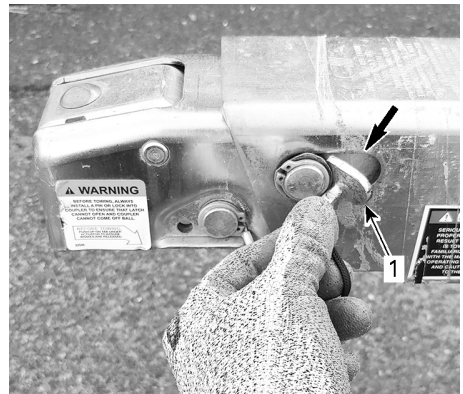

1. Back-up lock pin

 **WARNING**

The back-up lock pin will prevent the trailer brake to activate when needed. This may lead to a loss of control, causing injuries or death.

## Pre-Use Inspection

### **WARNING**

Perform a pre-use inspection before each use to detect potential problems during operation. The pre-use inspection can help you monitor wear and deterioration before they become a problem. Correct any problems that you discover to reduce the risk of a breakdown or crash. Visit an authorized Karavan trailer dealer as necessary.

Action	✓
Make sure the hitch ball size matches the coupler size (50 mm (2 in)).	
Check that the watercraft is ready to be towed according to the manufacturer's recommendations. Refer to the watercraft's operator's guide.	
Check that the jack is retracted.	
Check tires condition. Refer to <i>Maintenance procedures</i> for details.	
Check tires pressure. Refer to <i>Specifications</i> for values.	
Check of wheel lug nuts for tightness.	
Check that the load meets the specifications.	
Check that coupler is latched and locked. Refer to <i>Attaching the Trailer to the Tow Vehicle</i> .	
Check that tongue safety cables are crisscrossed under the tongue and attached to the hitch. Refer to <i>Attaching the Trailer to the Tow Vehicle</i> .	

Action	✓
Check lights operation.	
Clean all reflectors and lights lenses.	
Check if watercraft is properly secured to the trailer at rear.	
Make sure the watercraft is properly secured at front. Refer to <i>Loading the Watercraft</i> .	
Check the breakaway cable is secured. Refer to <i>Attaching the Trailer to the Tow Vehicle</i> .	
Check the back-up lock pin is off.	

# TOWING THE TRAILER

Follow the tow vehicle's manufacturer instructions regarding trailer towing.

**SEVERE INJURY OR DEATH** can result if you do not follow these instructions:

When towing the trailer, pay particular attention to the following:

- Maintain a safe distance between the vehicle ahead and your vehicle.
- When towing a trailer, more time and distance are needed when passing or stopping.
- Reduce your speed and slow down more than usual before turning. Avoid sharp turns.
- When cornering, do it on a larger radius. It takes more space to turn with a trailer.
- Always move slowly when backing up. Ask someone to guide you when possible. Practice in an open area at the first opportunity.
- If your trailer starts to sway you need to react right away. If you see (or feel) your trailer swaying do NOT accelerate. Reduce speed by removing your foot from the accelerator. Do not hit the brakes unless you need them to avoid a collision. Hold the steering wheel straight, do not try to correct the sway by turning. Maintaining a slower speed will help.

**⚠ WARNING**  
**Never use the cruise control, driving aids or autonomous driving when hauling a trailer.**

- When going downhill, reduce speed before starting the descent. Do not brake continuously. Apply and release brakes alternately to prevent brakes from overheating.

Loss of control of the trailer or trailer/vehicle combination can result in serious injury or death. The most common


causes of loss of control of the trailer are:

- Driving too fast for the conditions.
- Overloading the trailer or loading the trailer incorrectly.
- Trailer improperly coupled to the hitch.
- Inadequate towing hitch.
- Not maintaining proper tire pressure.
- Not keeping wheel lug nuts tight.
- Inadequate maintenance of the trailer.

## Maneuvering in Reverse

On brake-equipped models, it may be necessary to install the back-up lock pin to reverse the trailer when the trailer connector is disconnected. Proceed as follow.

1. Completely stop on level ground.
2. Install the back-up lock pin as shown.

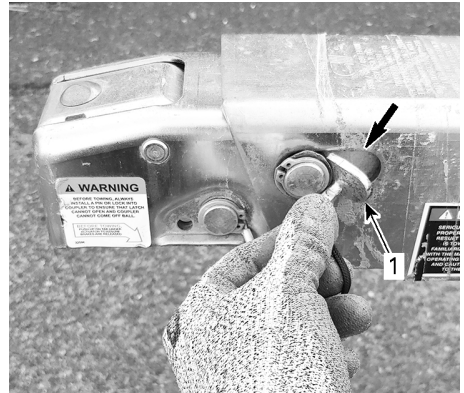

1. Back-up lock pin
3. Proceed to launching the watercraft.


---

# LAUNCHING THE WATERCRAFT

1. Prepare the watercraft for launching according to the manufacturer's recommendations.
2. Remove tie-downs from stern and trailer eyelets.
3. Disconnect trailer connector.
4. Make sure the way is clear behind the trailer (in and out of water).
5. Attach mooring cables to the watercraft mooring cleats and prevent them from hanging.
6. Have someone guiding you and back the vehicle until trailer reaches the desired depth into water.

**NOTE:** The watercraft must not float above the bunks.

7. Hold the winch handle firmly and set winch mechanism to "unwind".

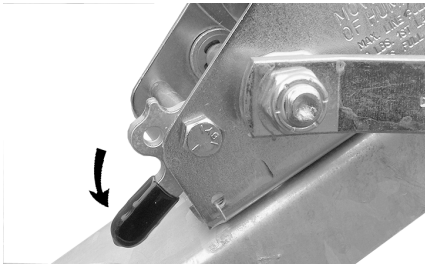

## **SET WINCH TO "UNWIND"**

8. Have someone on the watercraft and, if available, another person holding a mooring cable.
9. Unwind until watercraft slides off the trailer and floats. It may be necessary to push the watercraft a little.
10. Grab the mooring cables previously attached to the mooring cleats.
11. Detach the watercraft from the winch strap.
12. Moor the watercraft.
13. Drive the tow vehicle out of the ramp.
14. Connect trailer connector.



# LOADING THE WATERCRAFT

1. Disconnect trailer connector.
2. Have someone guiding you and back the vehicle until the trailer reaches the desired depth into water.

**NOTE:** Bunks should be immersed in water just enough for the watercraft to be dragged onto them without floating over them.

3. Unwind the winch strap to the appropriate length.
4. Align the watercraft with the trailer bunks.

**NOTICE**  
Although the boat requires only 30 cm (1 ft) of water to float, the engine should be started with at least 90 cm (3 ft) of water below the hull. If the depth of the water is less than 90 cm (3 ft) and the engine is running, the impeller is turning and debris can be drawn from the bottom and damage the propulsion system.

5. Attach the winch strap to the watercraft bow eyelet.


**NOTICE**  
Attach the strap as explained. Using another method may damage to the watercraft.

6. Set winch mechanism to "wind", then wind until the watercraft bow reaches the trailer bow stopper roller.




SET WINCH TO "WIND"


7. Drive the tow vehicle out of the ramp.
8. Secure watercraft on the trailer using suitable tie-downs attached to the stern eyelets and trailer eyelets together.

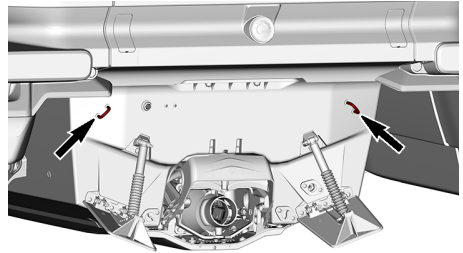

WATERCRAFT STERN EYELETS

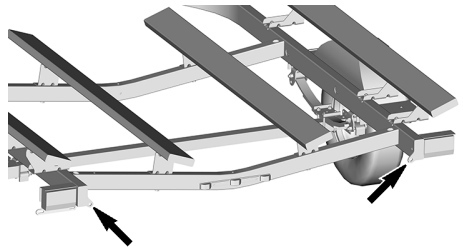


TRAILER EYELETS

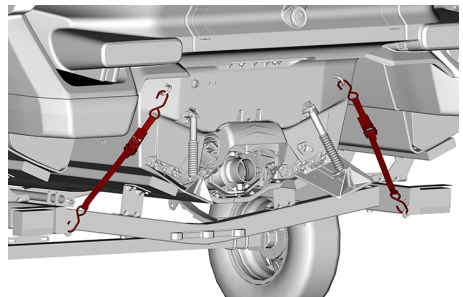

TIE-DOWNS

9. Hook the safety strap to the front eyelet.

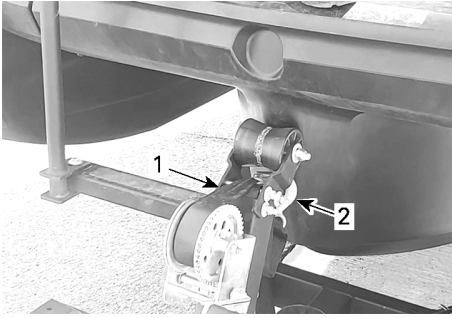

1. Winch strap

2. Safety strap

10. Connect trailer connector.

# MAINTENANCE

---

# MAINTENANCE SCHEDULE

Maintenance is very important for keeping your trailer in safe operating condition.

The maintenance schedule does not exempt the pre-use inspection.

## NOTE:

If your trailer is used all year round, carry out both *Storage* and *Pre-Season* maintenance operations once a year.

## At Storage

Carry out the following at trailer storage:

- Inflate tires to recommended pressure.
- Check coupler condition and lubricate.
- Lubricate jack.
- Apply Dielectric grease in all electric connectors and light bulb socket to prevent corrosion.
- Trailers with winch: Check winch and strap condition. Lubricate winch mechanism.
- If possible, park trailer in a protected area, garage, carport, etc.
- Raise trailer and place blocks under trailer frame to take most of the weight off the suspension and tires.

## At Preseason

Carry out the following before using the trailer after a storage period:

- Inspect wheels for damage.
- Check tightness of all fasteners.
- Check wheel bearing and seals.
- Check wiring harness and connector condition.
- Inspect tongue safety cables.
- Check brake fluid level.

# MAINTENANCE AND INSPECTION PROCEDURES

This section includes instructions for basic maintenance procedures. If you have the necessary mechanical skills and the required tools, you can perform these procedures. If not, see your authorized Sea-Doo dealer.

**⚠ WARNING**

**Torque wrench tightening specifications must be strictly adhered to.**

**Locking devices, when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.), must be replaced.**

Hoses, cables or locking ties removed during a procedure must be reinstalled as per factory standards.

## Tongue Safety Cable

**Tongue Safety Cable Inspection**  
Inspect for damage.

Discontinue use and contact an authorized Sea-Doo dealer if cable or its liner damage is found.

## Breakaway Cable

Inspect cable for damage, wear or frayed cable strands. Inspect end fittings for damage. Replace if necessary.

**⚠ WARNING**

**Do not use the trailer if safety cables are damaged.**

## Coupler

**Coupler Inspection and Lubrication**  
Check locking mechanism operation.

On brake equipped models, ensure back-up lock pin is present.

Check ball socket, ball clamp and lock mechanism for wear or damage.


Apply a thin coat of multipurpose grease to the inner surface of the ball socket.

Apply light oil to the pivot and sliding surface of the lock mechanism.


## Brakes (if equipped)

### Brake Fluid Inspection


1. Remove master cylinder protective cap on trailer tongue.

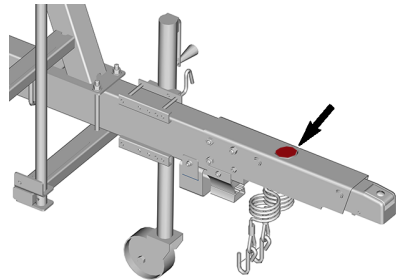

2. Removing master cylinder cap.

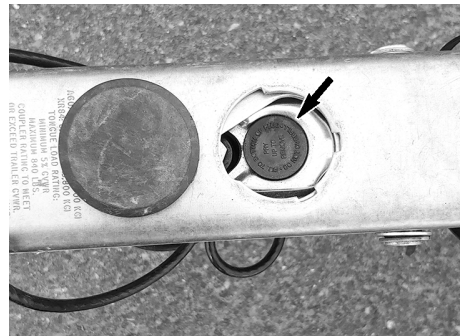

3. Check brake fluid level.

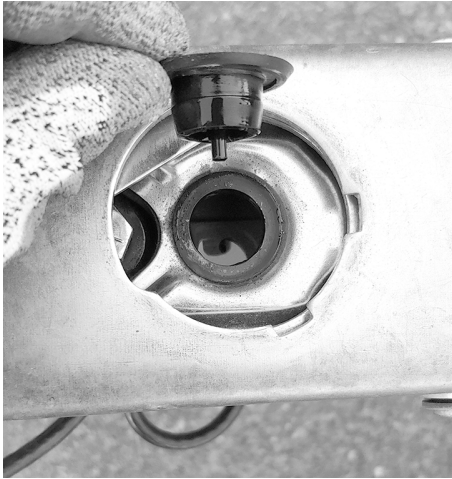

4. Reinstall master cylinder cap.

### **Verifying the Brake System**

The brakes are hydraulic disc types. These brakes are self-adjusting and do not require adjustment.

To keep brakes in good condition, check the following as per the *Maintenance Schedule*:

- Entire brake system for fluid leaks
- Brake discs for excessive wear and surface condition
- Brake pads for wear, damage or looseness.

See an authorized Sea Doo dealer if there are any problems with the brake system or for servicing.

Have the brake system servicing by an authorized Sea Doo dealer, a repair shop, or a person of your own choosing.

## **Tires**

### **Tire Pressure**

Check tire pressure. Tire pressure must be checked while the tire is cold.

### **NOTE:**

Do not check the tire pressure immediately after towing the trailer. Allow at least three hours for a tire to cool down, if the trailer has been towed for as much as 1.6 km (1 mi).

The required pressure varies according to the trailer model. Refer to *Specifications*.

### **Tire Inspection**

Replace the tire before towing the trailer if the tire tread has less than 1.6 mm (1/16 in) depth or if the built-in wear indicator bars are visible and flush with the remainder of the tire tread.

Always replace a tire with one of the same dimensions and load limit.

Inspect both sidewalls of each tire for any bubble, cut or bulge; and replace a damaged tire before towing the trailer.

### **⚠ WARNING**

**A bubble, cut or bulge in the sidewall can result in a tire blowout and loss of control.**

## **Wheels**

### **Wheel Inspection**

Check wheel for cracks, bumps or other damages. Replace wheel as required.

## **Hubs, bearing and seals**

### **Wheel Bearing Inspection**

Install a jack under the axle and raise until the tire gets off the ground. Push and pull the wheel from the upper edge to feel the play and rotate wheel. If any play is felt or if wheel does not turn smoothly, refer to the *Maintenance of hub and wheel bearing section* below.

### Wheel Bearing Seal Inspection

Inspect the wheel bearing seals periodically. A slight film of grease around the seal is normal. Have the seal replaced if an excessive leak or damage is noticed.

### Lubrication System

This trailer uses a Sure Lube system on all its axles. Its advantages are as follows:

- Check on hub and grease with ease.
- Change the grease in the hub and bearing (rotate slowly the hub while putting grease in).
- Grease the bearing without taking the hubs off.
- Grease the hub with ease, even during a long trip.

Under the rubber dust cap there is a grease fitting. The grease fitting presses grease into the hole that goes all the way through the center of the spindle and comes out by the back bearing. At that point, it greases the back bearing and fills the inside of the hub. It then greases the front bearing. When grease can be seen coming out of the castle nut, the hub and bearing are full.

### Maintenance of hub and wheel bearing

1. Once or twice a year (depending on usage), install a jack under the axle and raise until the tire gets off the ground.
2. Push and pull the wheel from the upper edge to feel the play and rotate the wheel. If any play is felt, then the castle nut needs to be adjusted or the bearings need to be changed. (Refer to *Bearing Adjustment* for the castle nut adjustment)
3. When greasing the bearings, look at the old grease that comes out. If small silver-like filings are present, it may indicate a problem with the

bearings. They should be replaced immediately.

**NOTE:** It is important to use a castle nut cotter pin the same size as the hole to make sure the Sure Lube system works properly.

### When and What to Check

Trailers are often stored for extended periods of time, so it is important to check all of these before any use.

- Bearings that have been re-checked and repacked before storage and after immersion in salt water will last longer.
- Check the lubricant level when the hub is warm.
- Since it is a boat trailer, it is recommended to check just prior to launching to be sure the hub is full of grease when the axle is submerged.

### Recommended Lubricant

Any good marine grade water-resistant grease is recommended. Different types of grease thickeners should not be mixed.

### Bearing Repacking

Since wheels and bearings are submerged in the water when loading and unloading, preventative maintenance is required. Considering the various ways this trailer might be used, follow these general guidelines.

1. When water gets in the bearing and in contact with the steel itself, it will rust. So the most important part is getting a good grade wheel bearing grease that will not break down when water is mixed with it.
2. Pack the bearings by forcing the grease into all its small cavities. Fill the cavity in the hub with grease.
3. Make sure the grease seals are in usable condition.

4. Keep the bearings and grease free of any dirt or foreign matter.
5. The wheel bearings should be repacked anytime the trailer is stored.
6. If the trailer is often moved in the water, the chances of getting water in the bearings increase. Bearings should then definitely be packed at least twice during the season.
7. Towing a trailer over long distances has its good points and bad points. Doing so may warm the hub and grease it up enough to remove any water it may have collected. However, moving the warm hubs into the water shortly after a long tow will cause them to take on water through condensation. It is therefore important to let them cool before backing into the water.
8. Be sure the bearings are properly adjusted (Refer to *Bearing Adjustment*). In most instances, if a good quality lubricant is used and the lubricant levels are maintained, it may not be necessary to completely repack the bearings. However, if the grease appears to be contaminated or broken down, completely repack to remove all of the old grease from the bearings and hubs. Removing the rear bearing will most likely damage the rear seal. Install a new one when reassembling.

## Bearing Adjustment

The wheel bearings have been preadjusted at the factory. However, checking the bearing adjustment after the first 80.5 km (50 miles) of use and checking again every time the bearings are repacked will maximize their life.

1. Using a jack, lift one side of the trailer.
2. Grip the edge of the wheel and try to rock it or move it. If there is a play, remove the dust cap and the cotter pin.

3. While rotating the wheel, tighten the spindle nut to specifications. Do not over tighten.

Tightening Torque	
Two 1-1/16" bearings set-up	2.3 Nm (20 lbf-in)
1-3/8" and 1-1/16" bearings set-up	3.4 Nm (30 lbf-in)

4. Look for the hole in the spindle through the slots in the spindle nut.
  - If you can see any part of the hole through the slot in the nut, turn the nut counterclockwise until the next slot in the nut lines up with the cross hole. Insert cotter pin.
  - If you cannot see any portion of the hole in the spindle through the slots in the nut, turn the nut counterclockwise until the hole lines up with the first slot available in the nut. Insert cotter pin.
  - This adjustment will give you from one-thousandths to ten thousandths end play, which is in tolerance for proper adjustment.
5. Check wheel again for the movement. If there is no lateral movement, spin the wheel. Wheel should turn easily and have no end play.
6. Bend the ends of the cotter pin to keep it from coming off.

**NOTE:** A large cotter pin must be used to fill the hole for the Sure Lube system to work properly.

7. Install the dust cover. Tap lightly on the edges to place the dust cover.
8. Use a screwdriver and a hammer to tap the dust cover until it is completely into the hub and the flange on the dust cover is tight against



the hub face. Alternate sides around the dust cover to avoid any bending.

9. Repeat on other wheels.

## Lights

All the lights are built with LEDs (light emitting diode) and this technology proved to be reliable. In the unlikely event they do not work, have them checked by an authorized Sea-Doo dealer.

## Winch

### *Winch Inspection*

Inspect gears, bushings and strap for wear or damage.

### *Winch Lubrication*


Apply a thin coat of multipurpose grease to the gearing teeth and pivot points. Rotate handle to distribute grease evenly.

Lubricate ratchet pivot point with light oil.

## Jack

### *Jack Lubrication*

Remove plastic cap to lubricate gears using multipurpose grease. Rotate handle to distribute grease evenly.

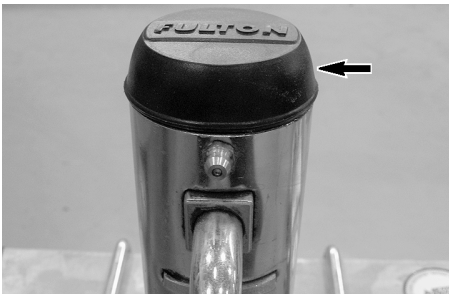

**TYPICAL**

Lubricate handle pivot point and wheel axle with light oil. Wipe excess

oil and rotate parts to distribute oil evenly.

## Wooden Bunks

Check wooden bunks carpet condition and wood hardness.

---

# TRAILER CARE

## Salt Water Use

If trailer used in salt water, thoroughly rinse trailer daily with fresh water.

## Trailer Cleaning

1. Rinse the trailer thoroughly with fresh water to remove loose dirt.
2. Using a soft, clean cloth, wash the trailer with water mixed with a mild detergent, such as soap specially formulated for motorcycles or automobiles.
3. While washing the trailer, check for grease or oil. An automotive grease remover can be used. Thoroughly follow the manufacturer's instructions.
4. Dry the trailer with a chamois or a soft towel.





### **CAUTION**

**Never use any kind of vinyl or plastic protector on the walk pads as they would get slippery.**

# TECHNICAL INFORMATION

# TRAILER IDENTIFICATION NUMBER

The trailer is identified by a serial number. It may sometimes become necessary to locate this number for warranty purposes or to trace the trailer in the event of theft. The serial number is located on the Technical Information label and is also engraved on the tongue of the trailer.

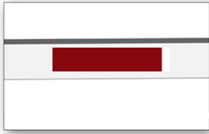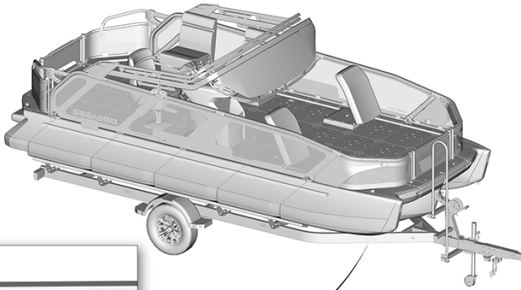

## TECHNICAL INFORMATION LABEL LOCATION

<b>MFD BY/FABRIQUE PAR - KARAVAN TRAILERS LLC</b>					
<b>DATE: 08/15/2024</b>		<b>MADE IN USA</b>		<b>JOB# J000065410</b>	
<b>ALL AXLES</b>			<b>COLD INFL. MAX. LOAD</b>		
<b>GVWR / PNBV</b>	<b>CAWR / PNBE</b>				
<b>KG LBS</b>	<b>KG LBS</b>	<b>TIRE/PNEU</b>	<b>PRESSURE</b>	<b>CARRYING CAP</b>	
			<b>KPA PSI</b>	<b>KG LBS RM</b>	

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS (FMVSS) IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. / CE VEHICULE EST CONFORME A TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU REGLEMENT SUR LA SECURITE DES VEHICULES AUTOMOBILES DU CANADA EN VIGUEUR A LA DATE DE SA FABRICATION.



**TIRE AND LOADING INFORMATION**  
**RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT**  
 The weight of cargo should never exceed  
 Le poids de chargement ne doit jamais dépasser



**TIRE/ PNEU**    **SIZE**    **COLD TIRE PRESSURE**  
**DIMENSIONS**    **PRESION DES PNEUS A FROID**

**FRONT AVANT**

**OPTION**

**OPTION**

**OPTION**

**OPTION**

**SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION**

**VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS**

5K7BS191S1PXXXXXX

## TYPICAL

# TECHNICAL SPECIFICATIONS

MODEL	Switch 16 with brakes	Switch 19 with brakes
<b>SUSPENSION</b>		
Type	Leaf spring	Leaf spring
<b>DIMENSIONS</b>		
Overall length	5.7 m (18.9 ft)	6.5 m (21.4 ft)
Overall width	2.3 m (7.5 ft)	2.4 m (7.7 ft)
Coupler ball size	5 cm (2 in)	
<b>WEIGHT AND LOAD LIMITS</b>		
Approximate dry weight	285 kg (629 lb)	358 kg 790 lb)
Carrying capacity	1347kg (2971 lb)	1547 kg (3410 lb)
<b>TIRES AND WHEELS</b>		
Tire size	ST185/80R13D	ST225/75R15D
Wheel size	13 x 4.5 (in)	15 x 6 (in)
Cold pressure	448 kPa (65 PSI)	
Lug nuts torque	100 ± 5Nm (74 ± 4 lbf-ft)	
Minimum thread depth	1.6 mm (1/16 in)	
(1) Maximum watercraft width (2) Tongue on the ground (3) Hitch coupler 50.8 cm (20.2 in) above the ground N.A.: Not Available		
<b>BRAKES</b>		
Type	Hydraulic, single piston floating caliper, solid discs	Hydraulic, single piston floating caliper, solid discs
Size	25.4 cm (10 in)	25.4 cm (10 in)
Brake fluid type	DOT 4	DOT 4
Brake pad min. thickness	8 mm (0.32 in)	
Brake rotor min. thickness	17 mm (0.67 in)	

This page is intentionally blank

# WARRANTY

---

# KARAVAN TRAILERS LLC. LIMITED WARRANTY POLICY: SEA-DOO® SWITCH TRAILER

All Warranty is supported directly by Karavan Trailers, LLC.

A complete Owner's Manual is available online

Contact us at:

- warranty@karavantrailers.com
- 920-928-6411
- Toll Free: 1-866-527-2826
- Australia: +61-2-8317-3180

**Karavan Trailers, LLC.** warrants each new **Karavan Trailers** trailer to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase.

**Karavan Trailers** shall repair or replace, without charge, any parts found to be defective because of imperfect workmanship or materials, within a reasonable time after the trailer is returned at purchaser's expense to any **Karavan Trailers** authorized distributor or dealer.

Who is covered?

This warranty is extended to the original purchaser only.

How do I make a claim?

1. Your claim must be filed on the Karavan website at: <http://www.karavan-trailers.com> or in writing to: Karavan Trailers, LLC., 100 Karavan Drive, Fox Lake, WI, 53933.
2. Claim must provide true and complete information when filed.
3. You must cooperate with Karavan when attempting to resolve the claim.
4. Only Karavan and authorized dealers may be used to fulfill the warranty claim.
5. Karavan may elect to repair or replace your product, or in some cases, offer you a refund.
6. Karavan will inform you whether your claim is covered by warranty within thirty days of receiving the trailer.
7. Any disputes must be resolved in state or federal court.

What is not covered?

Although you may use the parts and maintenance, and repair services of your choosing, we recommend using authorized dealers and parts for any repairs or maintenance, because improper or incorrect use of parts, maintenance, or repairs will void this warranty. Authorized parts are recommended for replacement of winches, lights, couplers, brakes, tongue jacks, and springs. Authorized dealers are listed on the Karavan website.

The warranty will not cover defects or damage caused by unauthorized modifications or alterations.



The warranty does not apply to any defect or malfunction caused by damage, unreasonable use, or failure to provide reasonable and necessary maintenance.

The warranty will not cover damage caused by overloading the trailer beyond stated capacities or the use of improperly installed weight distribution hitches in conjunction with hydraulic surge brakes.

Rust formation is not covered because the trailer is exposed to highly corrosive conditions.

Tires are not covered. Warranty on tires shall be made through the nearest tire representative.

Bearing cups, bearings and seals are covered for 180 days from date of purchase.

The use of any unit as part of a rental fleet or use for commercial purposes voids this warranty.

#### Other limitations

Any implied warranties, obligations, or liabilities including, but not limited to, any implied warranty of merchantability or implied warranty of fitness for a particular purpose, shall be limited in duration to the one-year duration of the written limited warranty.

**Karavan Trailers, LLC.** shall not be liable for incidental expenses of the consumer including, without limitation: loss of time, inconvenience, towing charges, travel expenses, lodging, telephone, gas, or loss or damage to personal property or loss of wages.

**Karavan Trailers, LLC.** shall not be liable for any incidental or consequential damages for breach of this or any other warranty expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Some States do not allow limitations on how long an implied warranty lasts, and/or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Karavan Trailers, LLC.** will follow any controlling warranty laws for trailers purchased in countries outside the United States.

#### Bow Eye Safety Chain

**WARNING:** Failure to tie down the bow independently from the winch strap could allow your boat to shift while traveling, causing loss of control of the tow vehicle and result in serious injury or property damage.

**Karavan Trailers, LLC.** starts using bow eye safety chains on trailers with a 1200-lb winch rating and over. It is very important that you use the bow eye safety chain at all times when loading and unloading.

The bow eye safety chain is an added protection should the winch or winch strap fail.

## Brakes

In most states, trailers with a Gross Vehicle Weight Rating of 3,000 pounds or more are required by law to have brakes on all wheels.

Upon special request, you can order axles with brake flanges to be able to install brakes. Brakes are becoming more of a necessity especially since the introduction of the small size car.

Most trailer brakes are designed to operate automatically when the towing vehicle's brakes are applied.

When the towing vehicle slows down or stops, the forward momentum of the trailer against the ball hitch applies pressure to a master cylinder in the trailer coupler.

This pressure activates the trailer brakes through a hydraulic brake system.

**Caution:** Weight equalizing or sway control devices inhibit the performance of surge brake actuators and must not be used.

Air shocks on the rear axle of the tow vehicle offer a good means of leveling the vehicle and trailer when necessary.

## Reporting Safety Defects

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Karavan Trailers, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer, or Karavan Trailers, LLC.

To contact NHTSA, call the Vehicle Safety Hotline toll-free at: 1-800-327-4236 (TTY 1-800-424-9153),

<http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue S.E., Washington, DC 20590

You can also obtain other information about motor vehicle safety from <http://safercar.gov>.

# **CUSTOMER INFORMATION**

---

# DATA PRIVACY INFORMATION

Bombardier Recreational Products Inc., its affiliates and subsidiaries (“BRP”) is committed to protecting your privacy and support a general policy of openness about how we collect, use and disclose your personal information in the course of managing our relationship with you. **More details can be found by visiting BRP’s Privacy Policy at: <https://brp.com/en/privacy-policy.html> or by scanning the QR Code below.**

Please be assured that we have appropriate security measures in place to ensure that your personal information is protected against loss and unauthorized access.

Your personal information that may be collected by BRP, directly from you or from authorized dealers or authorized third parties, includes:

- **Contact, Demographic & Registration Information** (e.g., name, full address, phone number, email, gender, ownership history, language of communication)
- **Vehicle Information** (e.g., serial number, purchase and delivery date, unit usage, vehicle location and movements)
- **Third Party Information** (e.g., information received from BRP partners, joint marketing activities information, social media)
- **Technological Information** (e.g., IP address, type of device, operating system, browser type, webpages you view, cookies and similar technologies when you use BRP or dealers’ websites or mobile application)
- **Interaction with BRP Information** (e.g., information collected when you call BRP’s in-house sales representatives, buy items on a BRP website, sign up for BRP emails, participate in BRP-sponsored contests and sweepstakes or attend BRP-sponsored events)
- **Transactional Information** (e.g., information necessary to handle returns, payment information when you purchase our products or services through our websites or mobile applications and other issues related to your purchase of BRP products)

This information may be used and processed for the following purposes:

- Safety & Security
- Customer Support for Sales and After Sales (e.g., complete or follow up with you about your purchase or maintenance)
- Registration & Warranty
- Communication (e.g., sending you a BRP satisfaction survey)
- Online Behavioural Advertising, Profiling and Location-Based Services (e.g., offer customized experience)
- Compliance & Dispute Resolution
- Marketing & Advertising
- Assistance (e.g., help with any delivery issues, handle returns, and other issues related to your purchase of BRP products).

We also may use personal information to generate aggregated or statistical data that no longer identifies you personally.

**Your personal information may be disclosed to the following: BRP, BRP’s authorized dealerships, distributors, service providers, advertising and market research partners and other authorized third parties.**

We may receive information about you from diverse sources, including third parties, such as BRP’s authorized dealerships and partners, with whom we offer

services or engage in joint-marketing activities. We may also receive information about you from social media platforms when you interact with us on those platforms.

Depending on the circumstances, your personal information may be communicated outside the region where you reside. Your personal information is retained only for as long as necessary for the purpose for which we obtained it and according to our retention policies.

To exercise your data privacy rights (e.g. right of access, right of rectification), to withdraw your consent in order to be removed from the address list for marketing purposes or for the satisfaction survey or for general data privacy questions, please contact BRP's Data Protection Officer at or by mail at **privacyofficer@brp.com** or by mail at:

BRP Legal Service, 726 St-Joseph, Valcourt, Quebec, Canada, J0E 2L0.

**When BRP processes your personal information, they do so in compliance with its Privacy Policy available at: <https://www.brp.com/en/privacy-policy.html> or by using the following QR Code.**



---

# CONTACT US

*www.brp.com*

## **Asia Pacific**

### **BRP Asia**

107D and 107E, 17/F, Tower 1,  
Grand Century Place, Mongkok,  
Kowloon, Hong Kong

### **Australia**

Level 26  
477 Pitt Street  
Sydney, NSW 2020

### **China**

上海市徐汇区衡山路10号6号楼301  
Rm 301, Building 6,  
No.10 Heng Shan Rd,  
Shanghai, China

### **Japan**

21F Shinagawa East One Tower  
2-16-1 Konan, Minato-ku-ku,  
Tokyo 108-0075

### **New Zealand**

Suite 1.6, 2-8 Osborne Street,  
Newmarket, Auckland 2013

## **Europe, Middle East and Africa**

### **Belgium**

Oktrooi plein 1  
9000 Gent

### **Czech Republic**

Stefanikova 43a  
Prague 5  
150 00

### **Germany**

Alte Papierfabrik 16  
D-40699 Erkrath

### **Finland**

Isoaavantie 7  
PL 8040  
96101 Rovaniemi

### **France**

Arteparc Bâtiment B  
Route de la côte d'Azur,

13 590 Meyreuil

**Norway**

Ingvald Ystgaardsvei 15  
N-7484 Trondheim  
Salg, marketing, ettermarked

**Sweden**

Spinnvägen 15  
903 61 Umeå  
Sweden 90821

**Switzerland**

Avenue d'Ouchy 4-6  
1006 Lausanne

**Latin America**

**Brazil**

Av. James Clerck Maxwell, 230  
Campinas, Sao Paulo  
CEP 13069-380

**Mexico**

Av. Ferrocarril 202  
Parque Industrial Querétaro  
Santo Rosa Jauregui, Querétaro  
C.P. 76220

**North America**

**Canada**

3200A, rue King Ouest,  
Suite 300  
Sherbrooke (Québec) J1L 1C9

**United States of America**

10101 Science Drive  
Sturtevant, Wisconsin  
53177

---

## CHANGE OF ADDRESS/OWNERSHIP

If your address has changed or if you are the new owner of the boat, be sure to notify BRP by either:


- Notifying an authorized Sea-Doo dealer.
- **North America Only:** calling at 1 888 272-9222.
- Mailing one of the change of address cards on the following pages at one of the BRP addresses indicated in the *Contact Us* section of this guide.


In case of change of ownership, please join a proof that the former owner agreed to the transfer.

Notifying BRP, even after the expiration of the limited warranty, is very important as it enables BRP to reach the boat owner if necessary, like when safety recalls are initiated. It is the owner's responsibility to notify BRP.

**STOLEN UNITS:** In the event that your boat is stolen, you should notify your area's distributor warranty department of such. We will ask you to provide your name, address, phone number, Hull Identification Number and date it was stolen.



CHANGE OF ADDRESS <input type="checkbox"/>	CHANGE OF OWNERSHIP <input type="checkbox"/>	
VEHICLE IDENTIFICATION NUMBER		
Model Number	Vehicle Identification Number (V.I.N.)	
<b>OLD ADDRESS OR PREVIOUS OWNER:</b>	NAME	
	NO.	STREET APT
	CITY	STATE/PROVINCE ZIP/POSTAL CODE
	COUNTRY	TELEPHONE
<b>NEW ADDRESS OR NEW OWNER:</b>	NAME	
	NO.	STREET APT
	CITY	STATE/PROVINCE ZIP/POSTAL CODE
	COUNTRY	TELEPHONE
	E-MAIL ADDRESS	

CHANGE OF ADDRESS <input type="checkbox"/>	CHANGE OF OWNERSHIP <input type="checkbox"/>	
VEHICLE IDENTIFICATION NUMBER		
Model Number	Vehicle Identification Number (V.I.N.)	
<b>OLD ADDRESS OR PREVIOUS OWNER:</b>	NAME	
	NO.	STREET APT
	CITY	STATE/PROVINCE ZIP/POSTAL CODE
	COUNTRY	TELEPHONE
<b>NEW ADDRESS OR NEW OWNER:</b>	NAME	
	NO.	STREET APT
	CITY	STATE/PROVINCE ZIP/POSTAL CODE
	COUNTRY	TELEPHONE
	E-MAIL ADDRESS	

This page is  
intentionally blank

CHANGE OF ADDRESS <input type="checkbox"/>	CHANGE OF OWNERSHIP <input type="checkbox"/>	
VEHICLE IDENTIFICATION NUMBER		
Model Number	Vehicle Identification Number (V.I.N.)	
OLD ADDRESS OR PREVIOUS OWNER:		
NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
COUNTRY	TELEPHONE	
NEW ADDRESS OR NEW OWNER:		
NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
COUNTRY	TELEPHONE	
E-MAIL ADDRESS		

CHANGE OF ADDRESS <input type="checkbox"/>	CHANGE OF OWNERSHIP <input type="checkbox"/>	
VEHICLE IDENTIFICATION NUMBER		
Model Number	Vehicle Identification Number (V.I.N.)	
OLD ADDRESS OR PREVIOUS OWNER:		
NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
COUNTRY	TELEPHONE	
NEW ADDRESS OR NEW OWNER:		
NAME		
NO.	STREET	APT
CITY	STATE/PROVINCE	ZIP/POSTAL CODE
COUNTRY	TELEPHONE	
E-MAIL ADDRESS		

This page is  
intentionally blank











**NOTE:** \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**NOTE:** \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**Trailer**

Model No. \_\_\_\_\_

**Vehicle**

Identification Number (V.I.N.) \_\_\_\_\_

**OWNER:** \_\_\_\_\_  
NAME

\_\_\_\_\_  
No. STREET APT

\_\_\_\_\_  
CITY STATE/PROVINCE ZIP/POSTAL CODE

**Purchase Date**    |    |    |  
YEAR    MONTH    DAY

**Warranty Expiry Date**    |    |    |  
YEAR    MONTH    DAY

To be completed by the authorized Sea-Doo dealer at the time of the sale.

DEALER IMPRINT AREA

This page is intentionally blank



## **⚠ WARNING**

Disregarding any of the safety precautions and instructions contained in this user's guide, safety video and on product safety labels could cause injury including the possibility of death.



®TM and the BRP logo are trademarks of BOMBARDIER RECREATIONAL PRODUCTS INC. or its affiliates.

©2024 BOMBARDIER RECREATIONAL PRODUCTS INC. ALL RIGHTS RESERVED.

[www.brp.com](http://www.brp.com)

**ALUMACRAFT®**

**MANITOU®**

**SEA-DOO®**

**CAN-AM®**

**QUINTREX®**

**SKI-DOO®**

**LYNX®**

**ROTAX®**

219002500