

**S U P P L E M E N T F O R M O D E L :  
31871**

**REFERENCE: CONTRACT DAAE07-84-C-A011**


**This correction sheet must be used in correlation with  
the 1984 Skandic operator's manual (P/N 414 5071 00)**

**SKANDIC \* 371**

**OPERATOR'S  
MANUAL**

**1984**

## CONTROLS/INSTRUMENTS

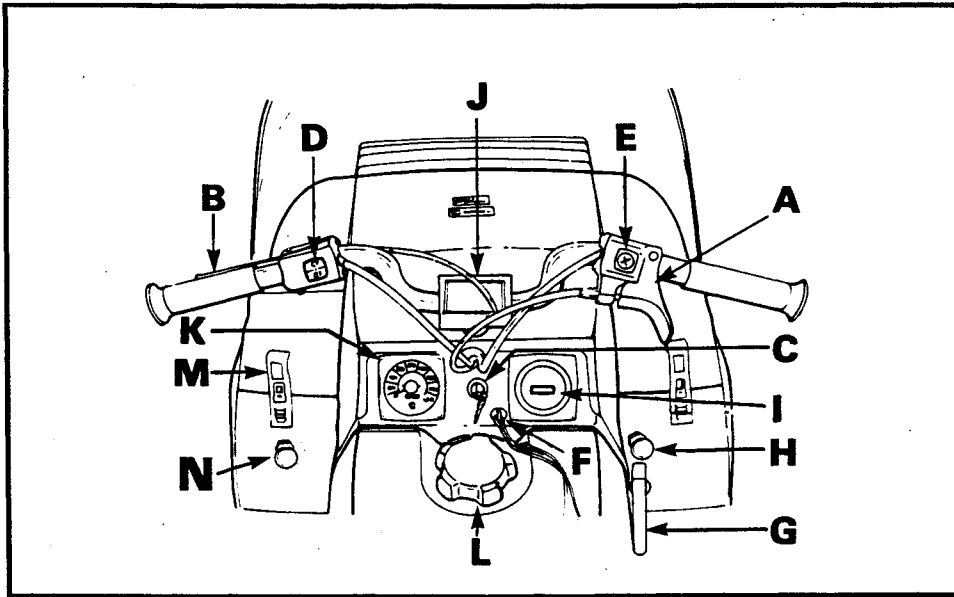

- |                             |                               |
|-----------------------------|-------------------------------|
| A) Throttle Control Lever   | I) Hour-Meter                 |
| B) Brake Control Lever      | J) Adjustable Steering Handle |
| C) Ignition/Light Switch    | K) Speedometer                |
| D) Headlamp Dimmer Switch   | L) Fuel Gauge/Tank Cap        |
| E) Emergency Cut-Out Switch | M) Hood Opening               |
| F) Tether Cut-Out Switch    | N) Black-Out Switch           |
| G) Rewind Starter Handle    |                               |
| H) Primer                   |                               |

### I) HOUR-METER

The hour-meter indicates the total number of engine running hours.

### N) BLACK-OUT SWITCH

The black-out switch turns off all lights on the vehicle.

◆ **WARNING:** The engines and the corresponding components identified in the operator's manual should not be utilized on product(s) other than that mentioned on the cover page of the operator's manual.

# ELECTRIC CHART

