

can-am



SPYDER F3 SERIES

OPERATOR'S GUIDE

Includes Safety, Use and Maintenance Information

NON

WARNING

Learn how the vehicle is different.

Read this operator's guide and watch the safety video on:

[HTTPS://CAN-AM.BRP.COM/ON-ROAD/US/EN/OWNER-ZONE/SAFETY-INFORMATION.
HTML](https://can-am.brp.com/on-road/us/en/owner-zone/safety-information.html)

Complete a training course (if available), practice and become proficient with the controls.

Consult local laws - license requirements vary by location.

Keep this guide in the vehicle at all times.

219002580

Original Instructions

CALIFORNIA PROPOSITION 65 WARNING

 **WARNING**

Operating, servicing and maintaining a passenger vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to WWW.P65WARNINGS.CA.GOV/PRODUCTS/PASSENGER-VEHICLE

 **WARNING**

Disregarding any of the safety precautions and instructions contained in the Operators’s Guide, Safety Video and on product safety labels could cause injury including the possibility of death.

TM® Trademarks of BRP or its affiliates.
This is a non-exhaustive list of trademarks that are the property of Bombardier Recreational Products Inc. or its affiliates.
Trademarks may not be registered in every jurisdictions.

ACE™	Can-Am®	D.E.S.S.™
ROTAX®	Spyder®	XPS®

All rights reserved. No parts of this operator's guide may be reproduced in any form without the prior written permission of Bombardier Recreational Products Inc.
©Bombardier Recreational Products Inc. (BRP) 2026

Deutsch	Dieses Handbuch ist möglicherweise in Ihrer Landessprache verfügbar. Bitte wenden Sie sich an Ihren Händler oder besuchen Sie: www.operatorsguides.brp.com
English	This guide may be available in your language. Check with your dealer or go to: www.operatorsguides.brp.com
Español	Es posible que este manual esté disponible en su idioma. Consulte a su distribuidor o visite: www.operatorsguides.brp.com
Français	Ce guide peut être disponible dans votre langue. Vérifier avec votre concessionnaire ou aller à: www.operatorsguides.brp.com
Italiano	Questa guida potrebbe essere disponibile nella propria lingua. Contattare il concessionario o consultare: www.operatorsguides.brp.com
中文	本手册可能有您的语种的翻译版本。请向经销商询问，或者登录 www.operatorsguides.brp.com 查询。
日本語	このガイドは、言語によって翻訳版が用意されています。ディーラーに問い合わせるか、次のアドレスでご確認ください： www.operatorsguides.brp.com
Nederlands	Deze handleiding kan beschikbaar zijn in uw taal. Vraag het aan uw dealer of ga naar: www.operatorsguides.brp.com
Norsk	Denne boken kan finnes tilgjengelig på ditt eget språk. Kontakt din forhandler eller gå til: www.operatorsguides.brp.com
Português	Este manual pode estar disponível em seu idioma. Fale com sua concessionária ou visite o site: www.operatorsguides.brp.com
Русский	Воспользуйтесь руководством на вашем языке. Узнайте о его наличии у дилера или на странице по адресу www.operatorsguides.brp.com
Suomi	Käyttöohjekirja voi olla saatavissa omalla kielelläsi. Tarkista jälleenmyyjältä tai käy osoitteessa: www.operatorsguides.brp.com
Svenska	Denna bok kan finnas tillgänglig på ditt språk. Kontakta din återförsäljare eller gå till: www.operatorsguides.brp.com

Covered Models
Spyder F3-S
Spyder F3-T
Spyder F3 Limited
Spyder F3 Limited Special Series

In Canada, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP).

In the USA, products are distributed and serviced by BRP US Inc.

In the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein), the Commonwealth of the Independent States (including Ukraine and Turkmenistan) and Turkey, products are distributed and serviced by BRP European Distribution S.A. and other affiliates or subsidiaries of BRP.

For all other countries, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP) or its affiliates.

TABLE OF CONTENTS

GENERAL INFORMATION

GENERAL INFORMATION	10
Know Before you Go	10
Safety Messages	10
About this Operator's Guide	10
Refer to Other Sources of Information	11
Acknowledgment	11

GENERAL PRECAUTIONS

AVOID CARBON MONOXIDE POISONING	14
AVOID GASOLINE FIRES AND OTHER HAZARDS	15
AVOID BURNS FROM HOT PARTS	16
ACCESSORIES AND MODIFICATIONS	17

VEHICLE INFORMATION

PRIMARY CONTROLS	20
HANDLEBAR	22
THROTTLE	22
GEARSHIFT SELECTOR	22
PARKING BRAKE BUTTON	23
BRAKE PEDAL	23
SECONDARY CONTROLS	25
Ignition Switch	26
Driver's Heated Grip Button	26
RIGHT MULTIFUNCTION SWITCH	27
LEFT MULTIFUNCTION SWITCH	30
Passengers Heated Grip Button	32
EQUIPMENT	33
Adjustable Handlebar and Driver Footpegs	33
Mirrors	33
Glove Box	34
USB Ports (F3-S models)	34
USB Ports (F3-T and Limited models)	34
Front Storage Compartment	35
Tool Kit (If equipped)	35
Operator's Guide	35
DRIVER'S BACKREST	35
PASSENGER'S SEAT	37
Mono Seat Cowl (If Equipped)	37
Rear Storage Compartment (If equipped)	38
Saddlebags	38
Top Storage Compartment	39
Body Panels	41
Diagnostic Connector	44
Customer Accessory Circuits	45

10.25" TOUCHSCREEN DISPLAY	46
Safety Display Messages	46
Default Display	47
Navigating the Display	48
Center Display	48
Views Display	49
Applet Menu	51
Icons and Indicators	57
Messages in Touchscreen Display	59
Pairing Your Smartphone Through Bluetooth	59
OPERATING MODES	61
ECO Mode	61
Standard Mode	61
SPORT Mode (F3–S Only)	61
Mode Display	61
OPERATING THE VEHICLE	62
Starting and Stopping the Engine	62
Operating in Reverse	63
Operation During Break-In	64
Refueling	64
Adjusting Suspension	67
 SAFE OPERATING INSTRUCTIONS 	
WHAT'S DIFFERENT FROM OTHER VEHICLES	70
Stability	70
Response to Road Conditions	70
Brake Pedal	70
Parking Brake	70
Steering	70
Width	71
Vehicle Blind Spots	71
Reverse	71
Rear View Camera (If Equipped)	71
Driver's License and Local Laws	72
DRIVING AID TECHNOLOGIES	73
Vehicle Stability System (VSS)	73
Hill Hold Control (HHC)	74
Dynamic Power Steering (DPS)	74
UNDERSTANDING RISK ON THE ROAD	75
Type of Vehicle	75
Operator Skills and Judgment	75
Rider Condition	76
Vehicle Condition	76
Road and Weather Conditions	76
RIDING GEAR	77
Helmets	77
Other Riding Gear	77
REQUIRED RIDING SKILLS AND PRACTICE EXERCISES	80
Choosing a Practice Area	80
Preparing to Ride	81
Riding Posture	81

Practice Exercises	81
Developing Advanced Riding Skills	88
STREET STRATEGIES	90
Plan your Trip	90
Defensive Riding	90
Being Visible	91
Lane Position	92
Common Riding Situations	93
Road Conditions and Hazards	94
On-Road Emergencies	96
Tire Failure	96
CARRYING A PASSENGER OR CARGO	97
Weight Limits	97
Operating with Extra Weight	97
Carrying a Passenger	97
Where to Store Cargo	98
Towing a Trailer	99
KNOWLEDGE SELF-TEST	102
Questionnaire	102
Answers	105
SAFETY INFORMATION ON THE VEHICLE	107
Important Pre-Ride Safety Message	108
Hang Tag	109
Safety Labels	110
SAFETY COMPLIANCE HANG TAG	124
California Proposition 65 Warning Hang Tag	124
REPORTING SAFETY DEFECTS	125

PRE-RIDE INSPECTION

PRE-RIDE CHECKLIST	128
Before Starting the Vehicle, Inspect the Following:	128
Turn Ignition Key to the ON Position:	129

MAINTENANCE

MAINTENANCE SCHEDULE	132
EPA Regulation - Canadian and USA Vehicles	132
Severe Dusty or Wet Conditions – Air Filter Maintenance Guideline	132
Break-In Inspection	133
Maintenance Schedule	133
Maintenance Records	137
MAINTENANCE PROCEDURES	142
Engine Oil	142
Air Filter	145
Engine Coolant	146
Radiator Fan	147
Spark Plugs	147
Battery	147
Drive Belt	149
Wheels and Tires	150

Brakes	152
Headlights	153
VEHICLE CARE	156
Cleaning the Vehicle	156
Vehicle Protection	156
STORAGE AND PRESEASON PREPARATION	157
Storage	157
Preseason Preparation	157

ROAD SIDE REPAIRS

DIAGNOSTIC GUIDELINES	160
Will not Shift into Neutral	160
Will not Shift	160
Engine Does Not Start	160
MESSAGES IN MULTIFUNCTION GAUGE	162
WHAT TO DO IN THE FOLLOWING CIRCUMSTANCES	165
Lost Keys	165
Flat Tire	165
Dead Battery	165
LIGHTS LOCATION	167
Australian Models	167
Japanese Models	167
North American Models	168
All Other Countries	170
REAR TURN SIGNAL LIGHT BULB REPLACEMENT	172
S Models	172
T and Limited Models	172
REPLACING THE TAILLIGHT/BRAKE LIGHT BULB (S MODELS)	173
REPLACING THE BACK-UP LIGHT BULB (S MODELS)	174
REPLACING THE BACK-UP LIGHT BULB (T MODELS)	175
REPLACING THE BACK-UP LIGHT BULB (LIMITED MODELS)	176
HOW TO REPLACE A FUSE	177
Fuse Locations	177
Fuse Description	177
Inspecting a Fuse	178
Replacing a Fuse	178
HOW TO TRANSPORT THE VEHICLE	179

TECHNICAL INFORMATION

VEHICLE IDENTIFICATION	182
Vehicle Identification Number	182
Engine Identification Number	183
Vehicle Compliance Labels	183
NOISE EMISSION CONTROL SYSTEM REGULATION	185
BRP RF DESS POST	186
USA and Canada	186
Mexico	187
Japan	187
Europe	187

MULTIFUNCTION GAUGE REGULATORY INFORMATION	192
Technical Information	192
Manufacturer and Address	192
USA and Canada	192
Mexico	193
Brazil	193
Japan	194
Europe	194
BRP EUROPEAN DISTRIBUTION SA	199
REP France - TRIMAN	199

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS	202
ENGINE	202
GEARBOX	203
COOLING SYSTEM	203
ELECTRICAL SYSTEM	203
FUEL SYSTEM	204
DRIVE SYSTEM	205
STEERING	205
FRONT SUSPENSION	205
REAR SUSPENSION	205
BRAKES	206
TIRES	206
WHEELS	207
DIMENSIONS	207
WEIGHT AND LOADING CAPACITY	207

WARRANTY

BRP LIMITED WARRANTY – CANADA AND USA: 2027 CAN-AM® SPYDER® VEHICLE SERIES	212
1) Scope of the Limited Warranty	212
2) Limitations of Liability	212
3) EXCLUSIONS—Are Not Warranted	212
4) Warranty Coverage Period	213
5) Conditions to Have Warranty Coverage	214
6) What to Do to Obtain Warranty Coverage	214
7) What BRP Will Do	214
8) Transfer	215
9) Consumer Assistance	215
US EPA EMISSIONS PERFORMANCE WARRANTY	216
US EPA FEDERAL NOISE EMISSION WARRANTY	219
CALIFORNIA EMISSION CONTROL SYSTEM WARRANTY	220
California Emission Control System Warranty Statement	220
California Emission Control System Defects Warranty	220
BRP INTERNATIONAL LIMITED WARRANTY : 2027 CAN-AM® SPYDER® SERIES	224
1) Scope of the Limited Warranty	224
2) Limitation of Liability	224

3) EXCLUSIONS – Are Not Warranted	225
4) Warranty Coverage Period	225
5) Conditions to Have Warranty Coverage	226
6) What to Do to Obtain Warranty Coverage	226
7) What BRP Will Do	227
8) Transfer	227
9) Consumer Assistance	227
BRP LIMITED WARRANTY FOR THE EUROPEAN ECONOMIC AREA, THE COMMONWEALTH OF THE INDEPENDENT STATES AND TURKEY: 2027 CAN-AM® SPYDER® SERIES	228
1) Scope of the Limited Warranty	228
2) Limitations of Liability	228
3) EXCLUSIONS – Are Not Warranted	229
4) Warranty Coverage Period	229
5) For Products Sold In France Only	230
6) Conditions to Have Warranty Coverage	230
7) What to Do to Obtain Warranty Coverage	231
8) What BRP Will Do	231
9) Transfer	231
10) Consumer Assistance	232
 <i>CUSTOMER INFORMATION</i>	
DATA PRIVACY INFORMATION	234
CONTACT US	236
Asia Pacific	236
Europe, Middle East and Africa	236
Latin America	237
North America	237
CHANGE OF ADDRESS AND OWNERSHIP	238

GENERAL INFORMATION

GENERAL INFORMATION

Congratulations on your purchase of a new Can-Am® 3-wheel vehicle. It is backed by the Bombardier Recreational Products Inc. (BRP) warranty and a large network of authorized dealers ready to provide the parts, service or accessories you may require.

Your dealer is committed to your satisfaction. He has taken training to prepare, inspect and performed the final adjustment of your new vehicle before you took possession of it.

If you need more information concerning the servicing of your vehicle, please ask your dealer.

At delivery, you were informed about the warranty coverage and also, you signed the *PRE-DELIVERY CHECK LIST* to ensure your new vehicle was prepared to your entire satisfaction.

Know Before you Go

For your safety and the safety of passengers and bystanders, read the following sections before you operate this vehicle:

- *General Precautions*
- *Vehicle Information*
- *Safe Operating Instructions*
- *Pre-ride Inspection.*

Experienced motorcyclists should pay special attention to *What's Different From Other Vehicles*.

Safety Messages

The types of safety messages, what they look like and how they are used in this guide are explained as follows:

The safety alert symbol  indicates a potential injury hazard.

WARNING

Indicates a potential hazard which, if not avoided, could result in serious injury or death.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates an instruction which, if not followed, could result in severely damaged vehicle components or other property.

About this Operator's Guide

This Operator's Guide was written in North America in a right-lane driving environment. Please adapt your application of these maneuvers to your jurisdiction and rules of the road.

In this Operator's Guide, the word motorcycle typically refers to a two-wheeled motorcycle.

Keep this Operator's Guide in the vehicle at all time so that you can refer to it for things such as maintenance, road side repairs and instructing others.

If you want to view and/or print an extra copy of your Operator's Guide, simply visit the following web site:

- WWW.OPERATORSGUIDES.BRP.COM

The informations contained in this document are correct at the time of publication. BRP, however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured.

Due to late changes, some differences between the manufactured product and the descriptions and/or specifications in this guide may occur. BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring any obligation upon itself.

This Operator's Guide should remain with the vehicle when it is sold.

Refer to Other Sources of Information

In addition to reading this Operator's Guide, you should read the Safety Messages on the display, all on-product safety labels and watch the *safety video* located at:

[HTTPS://CAN-AM.BRP.COM/
ON-ROAD/US/EN/OWNER-ZONE/
SAFETY-INFORMATION.HTML](https://can-am.brp.com/on-road/us/en/owner-zone/safety-information.html)

Or, use the following QR code.



If possible, take a training course that is specifically designed for a 3-wheel vehicle.

For more information about upcoming training course availability, visit our web site at:

WWW.CAN-AM.BRP.COM

If a training course specifically designed for a 3-wheel vehicle is not available in your area, it could be a good idea to take a training course for motorcycles.

Many of the skills required are similar and also, the received information about managing the risk on the road are suitable for a 3-wheel vehicle.

Acknowledgment

BRP wishes to thank the Motorcycle Safety Foundation (MSF) for giving permission to BRP to use their material related to street motorcycle safety found in this Operator's Guide.

The MSF is an internationally recognized not for profit foundation and is supported by motorcycle manufacturers. It provides training, tools and partnerships to the motorcycle safety community. Visit its website at:

WWW.MSF-USA.ORG

This page is intentionally blank

GENERAL PRECAUTIONS

AVOID CARBON MONOXIDE POISONING

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion and eventually death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air and seek medical treatment.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas such as garages, carports or barns. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Never run the vehicle outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

AVOID GASOLINE FIRES AND OTHER HAZARDS

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Refuel outdoors in a well ventilated area away from flames, sparks, lit cigarettes and other sources of ignition.
- Never add fuel with engine running.
- Never top off the fuel tank. Leave some room for the fuel to expand with temperature changes.
- Wipe up any spilled fuel.
- Never start or operate the engine with the fuel filler door opened.
- Use only an approved red gasoline container to store fuel.
- Do not carry gasoline containers on the vehicle.

Gasoline is poisonous and can cause injury or death.

- Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye or inhale gasoline vapor, see your doctor immediately.
- If gasoline spills on you, wash your skin thoroughly with soap and water and change your clothes. To clean your gasoline-contaminated clothes, air them out to let the fuel evaporate and hand wash before air-drying. Do not use a washing machine or a dryer before the gasoline has been removed to avoid any risk of fire.

AVOID BURNS FROM HOT PARTS

The exhaust, oil, and cooling systems as well the engine become hot during operation. Other vehicle parts, such as multifunction gauge glass, can also be hot if exposed to sunlight. Temperature higher than 60 °C (140 °F) can be reached. Avoid contact during and shortly after operation to avoid burns.

ACCESSORIES AND MODIFICATIONS

Do not make unauthorized modifications, or use attachments or accessories that are not approved by BRP. Since these changes have not been tested by BRP, they may increase the risk of crashes on the road or injuries, and they can make the vehicle illegal for use on the road.

Unlike most motorcycles, this vehicle is equipped with a Vehicle Stability System (VSS), which is calibrated for the vehicle normal configuration. VSS may not function properly if the vehicle is modified, such as changing weight distribution, wheelbase, tires, suspension, brakes or steering.

See your authorized Can-Am On-Road dealer for available BRP accessories for your vehicle.

For safety reasons, some BRP accessories must be installed by a BRP dealer but if you decide to install the accessory by yourself, when not required to be done by the dealer, it is important to follow all the instructions carefully and, if applicable, understand all the information on how to use the product or for servicing.

If the accessory has been installed on your vehicle by another person than you, BRP strongly recommends you to read the corresponding instruction sheet as there may be more for information on how to use it safely or for the servicing.

The instruction sheets can be found at this address:

– [HTTPS://INSTRUCTIONS.BRP.COM](https://instructions.brp.com)

This page is intentionally blank

VEHICLE INFORMATION


PRIMARY CONTROLS

It is important to know the location and operation of all controls, and to develop and practice smooth and coordinated use of them.

Handlebar and driver footrests can be adjusted to meet the driver needs. It is however important for the person driving the vehicle to be able to use and


reach all controls adequately. For example, the brake pedal activation should be easily accessible, workable and go all the way through its function activation.

Adjustments must be made by an authorized Can-Am On-Road dealer to keep vehicle safety integrity.

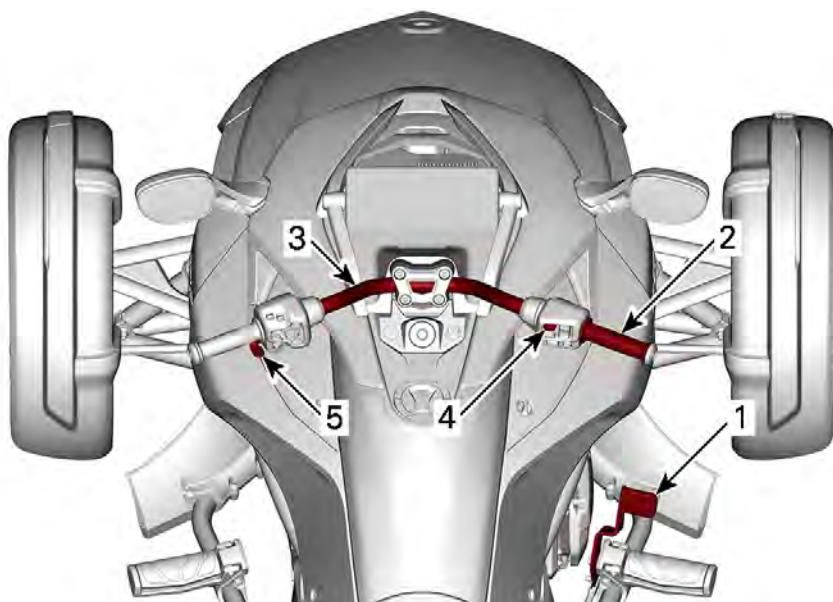

F3 S MODELS

1. Brake pedal
2. Throttle
3. Handlebar
4. Parking brake button
5. Gearshift selector

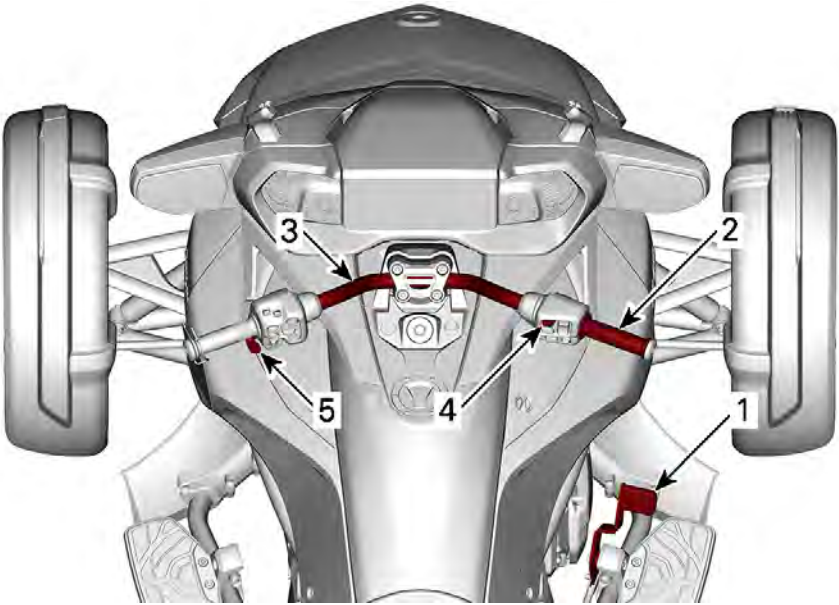**F3 T AND LIMITED MODELS**

1. *Brake pedal*
2. *Throttle*
3. *Handlebar*
4. *Parking brake button*
5. *Gearshift selector*

HANDLEBAR

Grip the handlebar with both hands. Steer the handlebar in the direction you want to go.

THROTTLE

Twist the right handle grip to operate the throttle. This controls the vehicle's speed by controlling engine torque request.

To speed up, twist the throttle backward (lower your wrist).

To slow down, release it or twist it forward (raise your wrist).



TO INCREASE SPEED



TO DECREASE SPEED

The throttle is spring loaded and should return to idle when you release your grip.

This vehicle is equipped with an Electronic Throttle Control (ETC). The throttle plates in the throttle body are controlled electronically and can be opened or closed irrespective of the throttle twist grip position when necessary.


It may happen that when you accelerate, the Vehicle Stability System (VSS) prevents engine acceleration in order to maintain vehicle stability. Then, when the vehicle is stabilized, the engine RPM would increase as requested if the throttle was maintained.

This would be felt as a "delayed" acceleration.

The VSS can never accelerate the vehicle. All it can do is decrease the amount of engine braking on slippery surfaces. This prevents the rear tire from slipping because of engine braking.

GEARSHIFT SELECTOR

The gearshift selector is underneath the left handle grip.

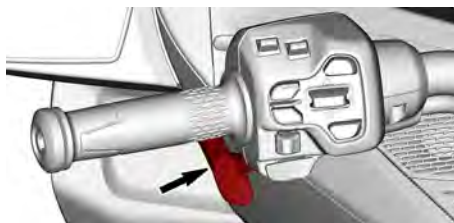


TYPICAL

The gear pattern is:

Reverse-Neutral-1-2-3-4-5-6

Press selector forward to upshift. Pull selector toward you to downshift.

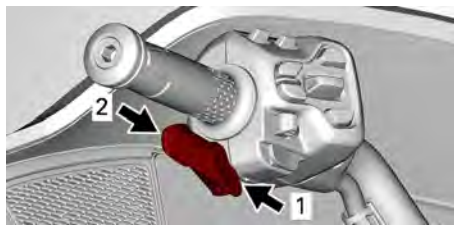

TYPICAL

1. Upshift
2. Downshift

This shifts sequentially from one gear to the next. Release the selector after shifting.

- To shift through multiple gears, use the selector multiple times.
- To shift into neutral from 1st gear, press the brake pedal and shift down.

- To shift from neutral to 1st gear, press the brake pedal and shift up.
- To shift into or out of reverse, refer to *OPERATING IN REVERSE*.

When the gearshift selector is released, the mechanism resets for the next shift up or down.

If operator does not downshift when slowing down and engine RPM drops below a threshold value, the gearbox will automatically downshift to the next available gear.

If the engine is started with the gearbox in gear, it will automatically shift to neutral position.

PARKING BRAKE BUTTON

The parking brake button is located on the RH side handlebar. It allows to engage or release the electric parking brake.

There will be a 20 second beep sound when stopping the engine while the parking brake is not engaged.



Applying Parking Brake

With the vehicle stopped and ignition key turned ON, press the button (P) to apply the parking brake. The brake indicator lamp will turn on.



NOTE:

A minimum of 11 V is required to activate the parking brake. If the battery voltage is below 11 V, the parking brake indicator lamp will flashing and a message will appear in the cluster display.

CAUTION

To avoid personal injury or vehicle damages, the parking brake cannot be activated when the vehicle is running above 10 km/h (6 MPH).

Check that the parking brake is fully engaged. Rock the vehicle back and forth.

Releasing Parking Brake

To release parking brake, press the button (P) and make sure brake indicator lamp will turn OFF.




BRAKE PEDAL

The brake pedal is in front of the right

footrest. Press it down to operate.
This pedal brakes all three wheels.

NOTICE


When riding, make sure not to lean your foot on brake pedal. Otherwise, the engine management will activate the limp home mode to protect the braking system.

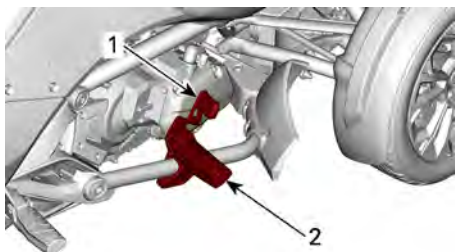

1. Brake pedal
2. Footrest

SECONDARY CONTROLS


Some features may not apply to your model or could be optional.

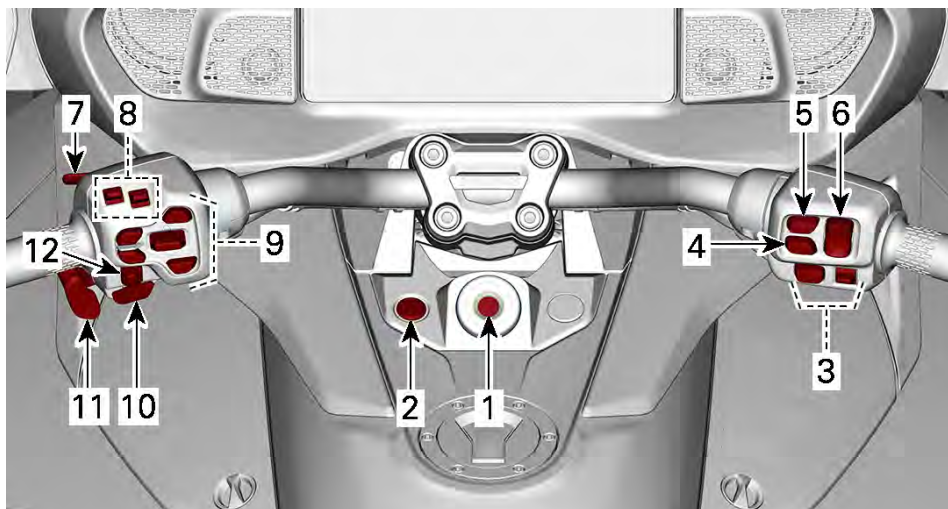

TYPICAL - LIMITED MODEL SHOWN

1. Ignition switch
2. Cluster buttons
3. Cruise control switches
4. Hazard warning switch
5. Parking brake button
6. Engine start/stop switch
7. Headlight switch
8. Audio controls
9. Multimedia controls
10. Horn button
11. Gear selector
12. Turn signal button

Ignition Switch

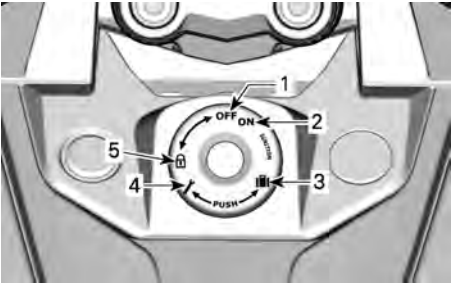

1. OFF
2. ON
3. Front storage compartment opening
4. Passenger seat opening
5. Steering lock position

The ignition switch is located in the center of the handlebar.

NOTICE

If the key does not turn easily, do not force it. Pull it out and reinsert.

⚠ WARNING

If you turn the ignition switch to OFF, it shuts off the engine and all the electrical systems including the VSS and DPS. If you do this while the vehicle is moving, you could lose control and crash.

Two keys are provided with your vehicle. Each key contains a transponder chip specifically pre-programmed that is read via radio frequency by the immobilizer system to allow starting the engine. The keys do not contain batteries. Do not take the key apart. If the immobilizer system cannot read the key, the engine will not start. For the conditions that can lead to the immobilizer system failing to read the key, refer to the *Diagnostic Guidelines*. Store the spare key in a safe place because you **must** have your spare key to have another one

made by an authorized Can-Am On-Road dealer.

Ignition Function

OFF

The key can be inserted or removed in this position.

In the OFF position, the electrical system of the vehicle is disabled.

The engine is shut down by turning the ignition switch to the OFF position.

ON

When the key is turned to this position, the electrical system of the vehicle is activated.

The gauge should wake-up.

The vehicle lights are turned on.

The engine can be started.

Locking the Handlebar/Glove Box

To lock the steering mechanism and the glove box:

1. Insert key in ignition switch.
2. Rotate the handlebar all the way to the right or to the left.
3. Turn the key 1/4 turn counterclockwise to the steering lock position then remove key.



1. Handlebar and glove box locking position

Driver's Heated Grip Button *Limited Models Only*

This button is located to the left of the ignition switch.



The heated grip button allows to turn ON and OFF the driver's heated grips and select the intensity.

Each press will lower the intensity by one level (5-4-3-2-1-OFF). Press and hold to go directly to level 5.

To turn off the heating grip, press the button repeatedly until the OFF level is selected.

NOTE:

The battery voltage must be at 11V minimum to activate these accessory buttons.

RIGHT MULTIFUNCTION SWITCH



1. Engine Start/Stop switch
2. Cruise control switches
3. Hazard warning button
4. Parking brake button (refer to Primary Controls)

ENGINE START/STOP SWITCH

The engine start switch is located at the top right of the right handlebar housing.

This toggle switch has multiple position.



1. Engine stop position
2. Run position
3. Engine start position

Engine Stop Position

The engine stop position is activated when the top of the toggle switch is pressed.

This position can also be used to stop the engine anytime without removing your hand from the handlebar.

RUN Position

The RUN position is activated when the toggle switch is placed to the center.

The toggle switch must be set to the run position before starting the engine.

Engine Start Position

The engine start position is activated when the bottom of the toggle switch is pressed.

Press and hold the bottom of the toggle switch until the engine is started.

Cruise Control Switches

The cruise control switches are located at the bottom of the right hand-lebar housing.



The button  is used to activate the cruise control function

NOTE:

The cruise control function can only be canceled, it cannot be completely deactivated when the engine is running.

The toggle switch is multifunctional. It allows to set, resume, increase or decrease the speed.

Also, the following icon  appears inside the touchscreen display when the cruise control is activated.

WARNING

It is not recommended to use the cruise control when towing a trailer.

When set, the cruise control allows to maintain a steady speed while riding the vehicle. It will increase or reduce engine speed as necessary.

NOTE:

The vehicle torque may vary slightly depending on the road conditions such as the wind, going downhill or uphill.

The cruise control is designed to be used for prolonged drives on low traffic highways. Never ride the vehicle with the cruise control activated in city streets, winding roads, in adverse weather or in any circumstances when you need the throttle control.

Cruise Control Limitations

The cruise control is not an automatic pilot, it will not drive the vehicle.

The cruise control is not aware of what is going on the road and it does not steer or apply the brakes for you.

WARNING

Improper use of the cruise control can lead the vehicle to a loss of control.

Activating the Cruise Control

To activate the cruise control function, press the button .

Cancelling the Cruise Control

Any of the following event will cancel the cruise control but do not deactivate it (complete stop of the feature).

- Pressing the brake pedal.
- Gear change.
- Any vehicle stability system intervention.
- Twisting the throttle grip forward.
- Pressing the button .

Setting the Cruise Control

To use the cruise control, the vehicle speed must be above approximately 40 km/h (25 MPH).

First, active the cruise control function.

NOTE:

The cruise control status will light in **gray** in the touchscreen display.

Bring the vehicle at the speed you want to maintain then press the toggle button downward to SET the speed.



NOTE:

The cruise control status will light in **green** in the touchscreen display.

You can now release the throttle.

⚠ WARNING

Always keep both hands on the handlebar while riding. Otherwise, this could cause a vehicle loss of control.

NOTE:

You can increase engine speed using the throttle grip if you need to go faster than the set speed. Releasing the throttle will allow the cruise control to recover the set speed.

Once the cruise control has been set, the speed setting may be increased or reduced by pushing the toggle button UP or DOWN.

Each press of the button will change the speed setting by increments of 1 km/h or 1 MPH (depending the units determined by the customer's preferences).

Holding the button will change the speed setting until released or the operating limit has been reached.

Resuming the Cruise Control

If the cruise control was cancelled and the cruise control feature is still activated, the cruise control operation can be resumed by pushing the toggle button upwards. The cruise control will then recover the previous set speed.



NOTE:

The cruise control status will show **CRUISE SET** in the touchscreen display.

Hazard Warning Button

The hazard warning button is located in the center of the right multifunction switch, beside of the engine start/stop switch.



Push the button to turn ON the hazard warning lights.

Press again to stop the hazard warning lights.

The hazard warning lights can be used with the ignition key to ON or OFF position.

LEFT MULTIFUNCTION SWITCH

Headlight Switch

The headlight switch is located on the back of the left multifunction switch.



One of the following icon ( ) appears inside the touchscreen display when the headlight are turn on.

The switch is used to select high or low beam for the headlight. The headlights automatically turn on when the engine reaches 800 RPM and turn off after approximately 20 seconds when engine has been stopped.

To select high beams, push the switch to the front position. To select low beams, push the switch to the back position.

To flash the high beams, press the switch fully in, then release it. The high beams will stay on as long as you hold down the switch.

Turn Signal Button

The turn signal button is located on the lower left portion of the multifunction switch.



One of the following icon ( ) appears inside the touchscreen display when the turn signal is activated.

The turn signal button turns off automatically after a normal turn, but you may have to turn it off manually after a shallow turn or lane change.

To turn the signal off, press the button in.

Turn signals will automatically turn off after 30 seconds while the vehicle is moving.

Horn Button

The horn button is located at the bottom of the left multifunction switch.




Press the button to activate the horn.

The horn can be used with the ignition key to ON or OFF position.

Audio Controls

The audio controls buttons are located on the top left portion of the multifunction switch.

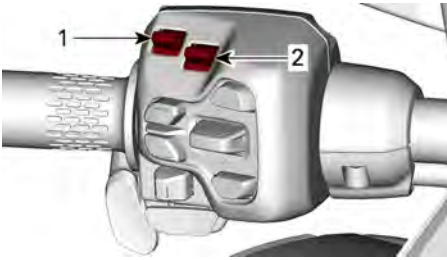

1. Volume Up / Down
2. Audio Prev / Next

Volume Up / Down

Use to adjust the volume of the vehicle audio system.




Audio Prev / Next

Use to go to the next or previous song or channel.



Multimedia Controls

The multimedia controls buttons are located in the center of the multifunction switch.

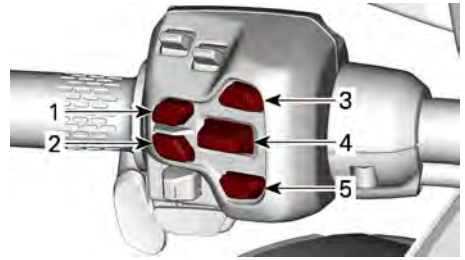

1. Back Button
2. Ride Settings Button
3. Voice Assistant Button
4. UP /DOWN / OK Button
5. Applet Switcher Button

Back Button



Used to return to the previous page/ menu.

Ride Settings Button



Quick access to change settings included in the Ride Settings manager. May include:

- Audio output selection
- Driving mode
- Heated grips

Voice Assistant Button



Used to trigger the voice assistant of the phone. The operator must have a phone and a headset connected via Bluetooth to use this function.

UP /DOWN / OK Button



Move the button up or down to navigate through the touchscreen options.

Press in the button to accept a choice or a command.

Applet Switcher Button



Used to change applets configured in the Applet Switcher manager menu.

- Phone (if paired via Bluetooth or Apple CarPlay)
- Media
- Statistics


- Full gauge
- Radio (if equipped)
- Navigation with Apple CarPlay or BRP GO! on-road navigation.

Passengers Heated Grip Button

Limited Models Only

The heated grip button allows to turn on and off the passenger's heated grips.

It is located under the front of the left grab handle.

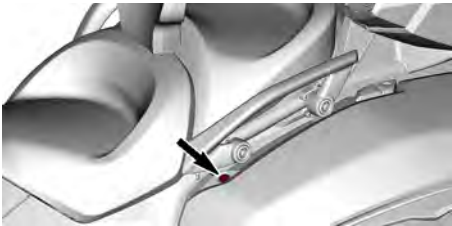

To activate or turn OFF the heating grip, press the button.



EQUIPMENT

Adjustable Handlebar and Driver Footpegs


Handlebar and driver footpegs can be adjusted to meet the driver needs (required parts available as accessories, see an authorized Can-Am On-Road dealer).

It is however important for the person driving the vehicle to be able to use and reach all controls adequately. For example, the brake pedal activation should be easily accessible, workable and go all the way through its function activation.

Adjustments should be made by an authorized Can-Am On-Road dealer to keep vehicle safety integrity.

WARNING

Controls should be properly and fully accessible to the driver at all times.

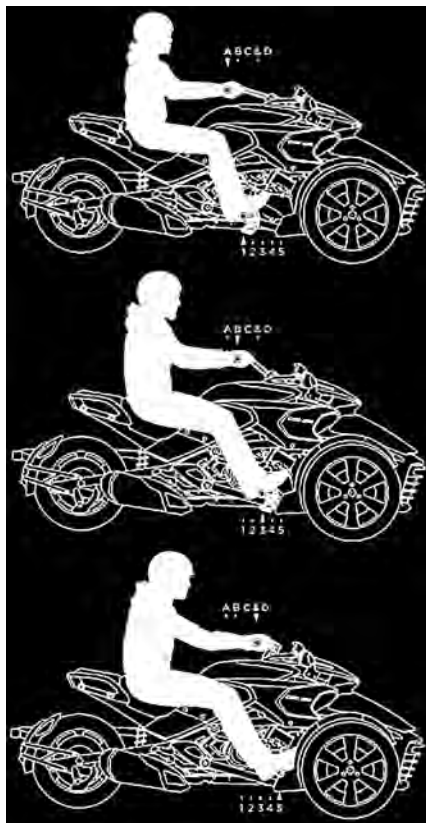

EXAMPLES OF HANDLEBAR AND FOOT-PEG POSITIONS


Mirrors

Adjusting Mirrors

With your fingers, press the mirror at the points shown below to adjust its position in the four directions.



MIRROR ADJUSTMENT POINTS - STD AND S MODELS

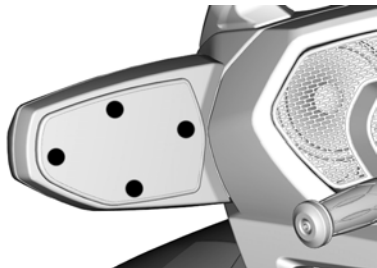

MIRROR ADJUSTMENT POINTS - T AND LIMITED MODELS

Glove Box

Some models come equipped with a glove box, over the touchscreen display, to carry small personal items.

Audio in jack and USB connector are also located here.

Pull on the rear cover tab of glove box to open.



TYPICAL

USB Ports (F3–S models)

The USB port is located in the front storage compartment.


- The USB port must be used to run Apple CarPlay and charge a smartphone.



USB Ports (F3–T and Limited models)

An USB port is located in the glove box and a second one in the top storage compartment.

- The front USB port must be used to run Apple CarPlay.
- The rear USB ports located inside the top storage compartment are only used to charge a smartphone. No data is transferred through these USB ports.

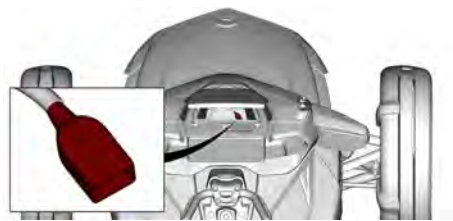

GLOVE BOX



TOP STORAGE COMPARTMENT

Front Storage Compartment

Opening the Front Storage Compartment


1. Insert key in ignition switch.
2. **Push** and turn the key 1/4 turn counterclockwise to the front storage compartment position and hold while lifting cover.

NOTE:

It is possible to open the front storage compartment with the engine running.



1. Front storage compartment opening position

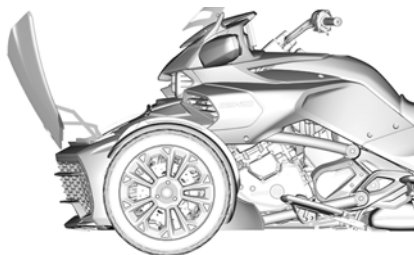


TYPICAL

Tool Kit (If equipped)


S Models

The tool kit is located underneath the passenger seat.

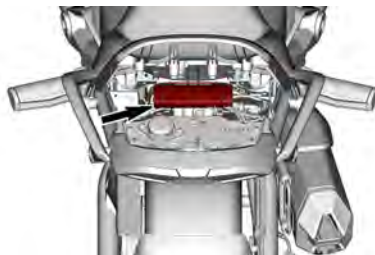

T and Limited Models

The tool kit is located in the front storage compartment.

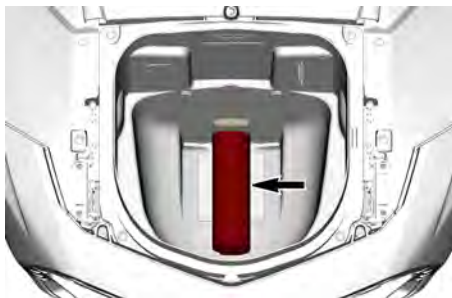

Operator's Guide

The operator's guide is located in the front storage compartment.




Always keep the operator's guide in the vehicle.

DRIVER'S BACKREST

Removing the Driver's Backrest

1. Remove the passenger's seat.

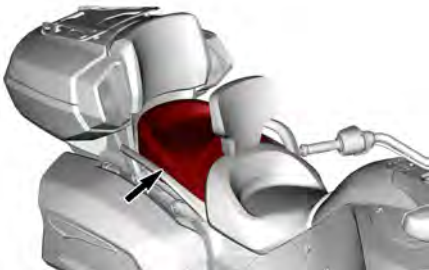

2. Slightly pull backrest forward to unlock it and lift to remove.



Step 1. Pull forward


Step 2. Lift

Installing the Driver's Backrest


1. Lower the backrest in place.

CAUTION

The backrest has two height positions. Make sure the backrest is properly positioned in one of the two positions.

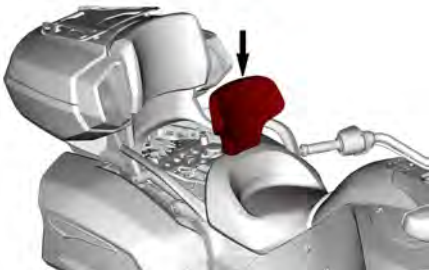

2. Install passenger seat.

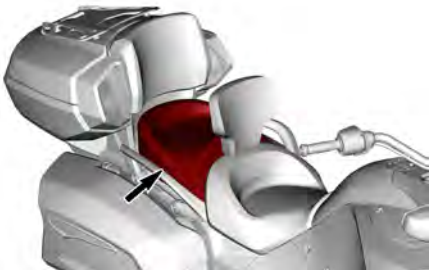

Adjusting the Driver's Backrest


1. Slightly pull backrest forward to unlock it and lift to adjust.



Step 1. Pull forward

Step 2. Lift

2. Tilt forward the backrest and slightly pull up the cover. Turn the adjustment screw to adjust the backrest angle in the desired position.
- By turning it clockwise it will slightly incline the backrest towards the back.
 - By turning it counter clockwise it will slightly incline the backrest towards the front.

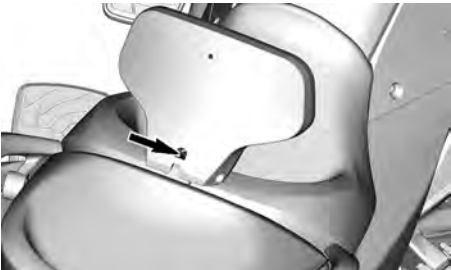

PASSENGER'S SEAT

Opening the Passenger Seat (If equipped)

1. Insert key in ignition switch.
2. **Push** and turn the key 1/4 turn clockwise to the seat opening position and hold while lifting passenger seat.



1. Passenger's seat opening position



1. Passenger seat

3. Detach seat tether cord from retaining clip.



TYPICAL


1. Tether cord
2. Retaining clip

⚠ WARNING

Part detachment could result in a road hazard. To avoid a potential road hazard, always attach tether cord to the part that covers this compartment.

Mono Seat Cowl (If Equipped)

Mounts on passenger seat in seconds to transform your vehicle into a sporty 1-UP configuration.

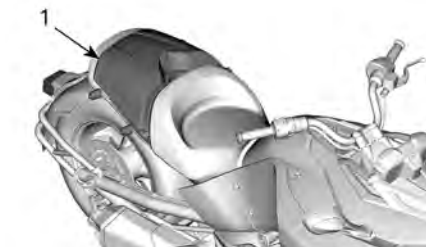


1. Mono seat cowl

⚠ WARNING

Part detachment could result in a road hazard. To avoid a potential road hazard, always attach tether cord to the part that covers this compartment.

Rear Storage Compartment (If equipped)

Unlock using the provided key.

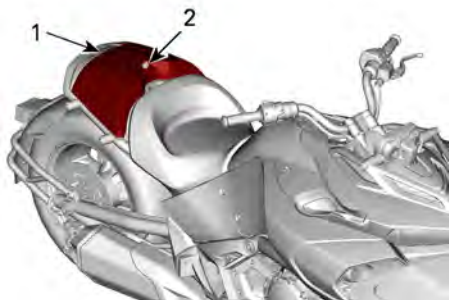

1. Rear storage compartment
2. Lock

Saddlebags

These models come equipped with two saddlebags to carry convenient items.

NOTICE


Follow maximum loading capacity. Always refer to the *Side Storage Compartment Load* label for load limit.



TYPICAL

1. LH saddlebag
2. RH saddlebag

Unlock saddlebag and pull on handle to open them.

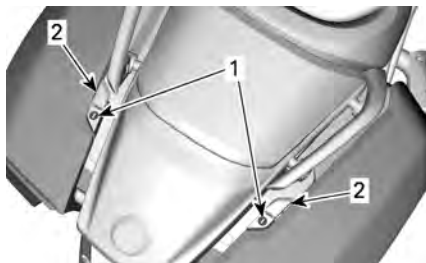


TYPICAL

1. Saddlebag lock location
2. Saddlebag handle


Removing the Saddlebag

1. Open the saddlebag cover.
2. Remove screws inside the saddlebag.

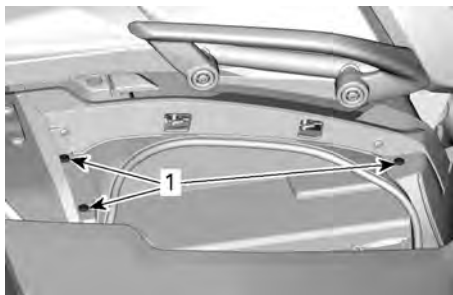

1. Retaining screws

3. Remove plastic rivet under front of saddlebag.

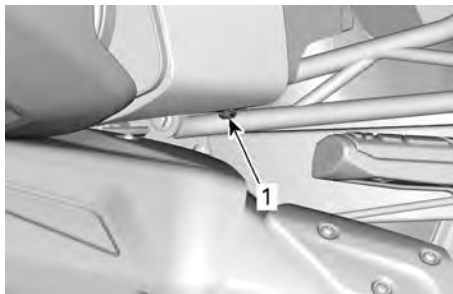

1. Plastic rivet

4. Remove plastic screw at the rear of saddlebag.



1. Plastic screw

- Slide saddlebag out enough to disconnect taillight/turn signal/brake light connector and remove saddlebag.

Installing the Saddlebag

⚠ WARNING


Make sure saddlebags are properly installed and closed. Verify that all lights at the rear of the vehicle work properly after saddlebag installation.

- Connect taillight/turn signal/brake light connector and slide saddlebag in.
- Install the plastic screw at the rear of saddlebag.




1. Plastic screw

- Install the plastic rivet under front of saddlebag.

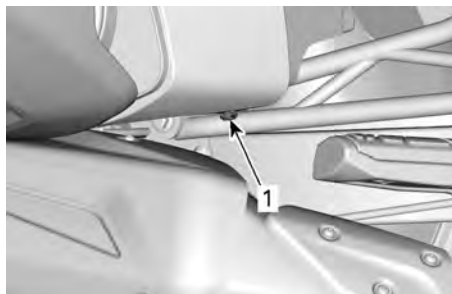

1. Plastic rivet

- Install the screws inside saddlebag and tighten them to specification.

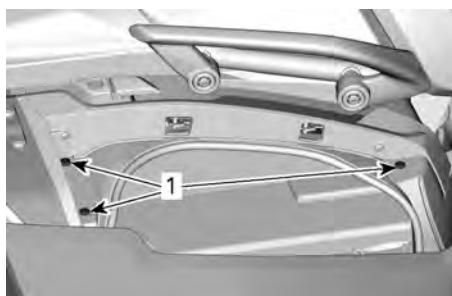

1. Retaining screws

Tightening Torque	
Saddlebag screws	$4.5 \pm 0.5 \text{ Nm}$ ($40 \pm 4 \text{ lbf-IN}$)

- Close the saddlebag cover.

Top Storage Compartment

Opening the Top Storage Compartment Cover

The top storage compartment latch is located at the rear of vehicle.



1. Push the latch to open the cover.
2. If lock, use the ignition key to unlock it.
3. If the cover refuses to open, gently move it back and forth and side to side while pressing the latch. See your authorized Can-Am dealer to perform the latch adjustment.

Closing the Top Storage Compartment Cover

NOTICE

The cover lock mechanism must be **UNLOCKED** to close the top storage compartment. If the cover cannot be closed, **DO NOT FORCE**. Check if something block the cover and if the latch moves.

Bring the cover at closing position.

Put your hand just above the latch in the center of the cover then push to lock.

Removing the Top Storage Compartment

⚠ WARNING


Always have the top storage compartment installed and properly locked when riding. Do not use the vehicle if the top storage compartment is missing.

1. Open the top storage compartment cover.

2. In the bottom of the compartment, unlock the center LinQ knob by turning it 1/4 turn counterclockwise.



If the knob is hard to turn, install the provided molded handle over the knob to have a better grip. This molded handle is located on the wall of the compartment.

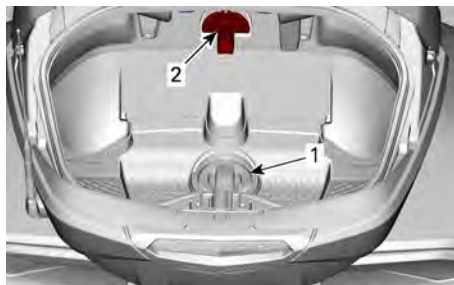

1. LinQ knob
2. Molded handle in its support



MOLDED HANDLE INSTALLS OVER THE LINQ KNOB

3. Using the rear handle, unlatch the top storage compartment from the vehicle.



4. Lift the storage compartment slightly and slide your hand underneath to disconnect the connector located near the passenger seat.
5. Pull the storage compartment rearwards to remove it from the vehicle.

Installing the Top Storage Compartment

⚠ WARNING

Always have the top storage compartment installed and properly locked when riding. Do not use the vehicle if the top storage compartment is missing.

1. Align both arms of the storage compartment with the support located on each side of the passenger's seat.
2. Hold the storage compartment in the raise position and connect the connector near the passenger's seat.
3. Lower the storage compartment and push down to lock it.
4. Open the top storage compartment cover.
5. Secure the storage compartment by turning the center LinQ knob 1/4 turn clockwise.



6. Grab the storage compartment firmly and check if it is properly installed and locked on the vehicle.
7. Close the top storage compartment cover.

Body Panels

Some body panels on the vehicle must be removed for maintenance.

Lateral Service Cover



Removing the Lateral Service Cover

1. Rotate lock counterclockwise (RH service cover) or clockwise (LH service cover).




UNLOCK


2. Lift the rear of the cover.




3. Pull the service cover rearwards to remove it.

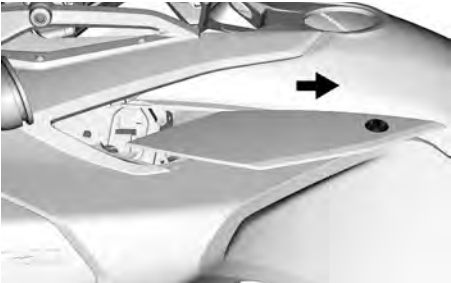

TYPICAL

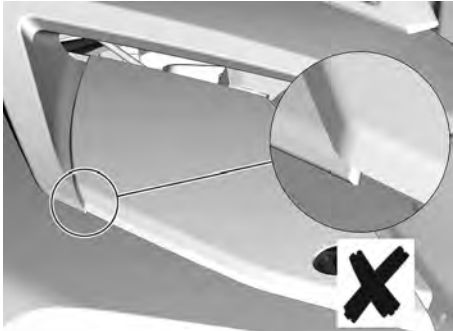


TYPICAL - OVERLAPPING INSTALLATION

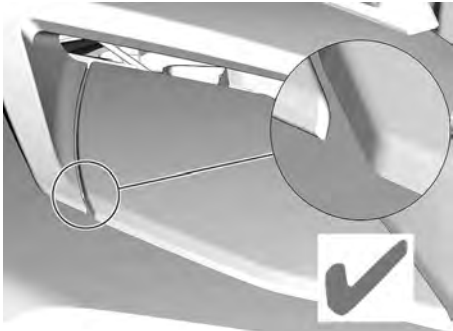

TYPICAL - CORRECT INSTALLATION

Installing the Lateral Service Cover

1. Install lateral service cover in place taking care to align tabs properly.

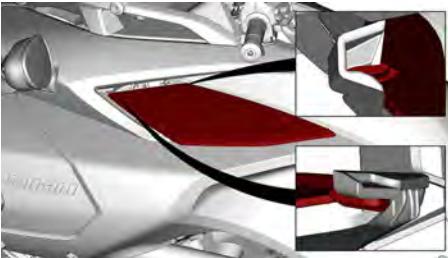

NOTICE

Make sure lateral service cover does not overlap on side panel.

Front Service Cover



NORTH AMERICAN MODELS



OUTSIDE NORTH AMERICA

Removing the Front Service Cover

1. Open the front storage compartment cover.
2. Lift the front of the service cover to clear grommets



3. Pull the service cover forwards to remove it from the vehicle



Installing the Front Service Cover

1. Slide the front service cover back in place.



2. Make sure to align cover tabs with vehicle anchors.




3. Secure the cover in front grommets.
4. Close the front storage compartment cover.

SIDE PANEL



Removing the Side Panel

1. Remove screws and plastic rivets securing side panel to vehicle.

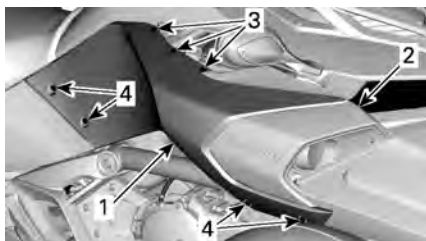

TYPICAL

1. Side panel
2. Clip
3. Plastic rivets
4. Retaining screws

2. Lift side panel to remove it.



TYPICAL

Installing the Side Panel

1. Slide the inner side panel back in position.

NOTE:

Take care to align side panel retaining screw tab to air scoop retaining screw tab.



TYPICAL - ALIGNING PANELS PROPERLY


2. Install plastic rivets and retaining screw.

NOTICE

Do not over tighten. Any deformation on the panel around the screw is an indication that it is too tight. You may damage the panel.


Diagnostic Connector

All vehicles are equipped with a diagnostic connector to connect the latest version of the BRP Diagnostic Software (B. U. D. S.). This connector is usually used by an authorized Can-Am On-Road dealer to servicing the vehicle.

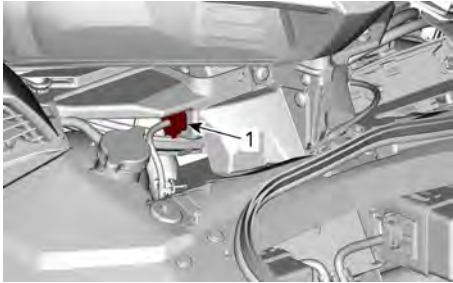

1. Diagnostic connector for B.U.D.S.

In some countries, the vehicles is also equipped with an OBD2 6-pin connector to read the vehicle fault codes. This connector may be used by your preferred repair shop, any person of your own choosing, or by yourself.

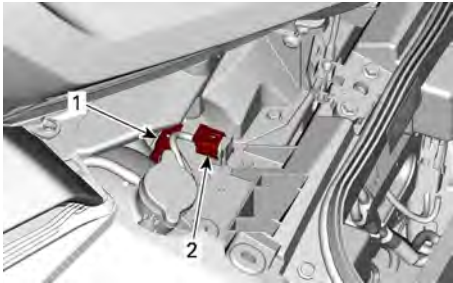

1. Diagnostic connector for B.U.D.S.
2. OBD2 6-pin connector

NOTE:

If a 16-pin automotive OBD2 reader is used, an adapter is required. This adapter must be purchased locally.

Diagnostic Connector Location

1. Open the front storage compartment cover.
2. Remove the front service cover, refer to *Service Cover* in *Equipment* section.

The connector is located near the coolant reservoir cap.

Customer Accessory Circuits

The vehicle has power and ground wires for installing accessories.


Open harness at indicated locations.

1. Behind front storage compartment.



DC12 - FRONT CUSTOMER ACCESSORY CIRCUIT - BEHIND STORAGE COMPARTMENT

2. Behind lateral service cover.

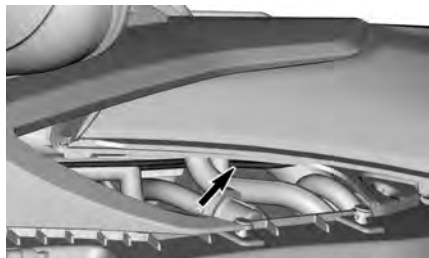

DC34 - MIDDLE CUSTOMER ACCESSORY CIRCUIT - BEHIND LEFT LATERAL SERVICE PANEL

3. Under passenger seat.



DC56 - REAR CUSTOMER ACCESSORY CIRCUIT - UNDER PASSENGER SEAT

10.25" TOUCHSCREEN DISPLAY


Safety Display Messages

Two safety messages are displayed in the touchscreen display each time the vehicle is ready to start.

Read and understand them carefully.

First Safety Message

This first safety message is displayed each time the ignition key is turned ON.

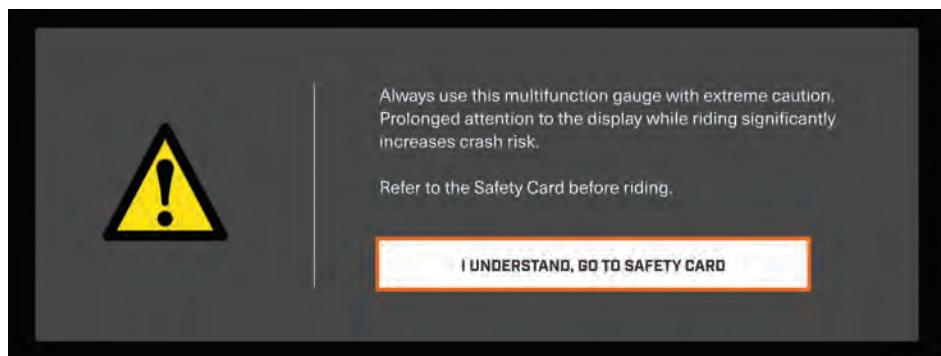

Press the white portion of the message directly in the touchscreen display or press the OK button on the left multifunction switch to see the Safety Card Message.

Safety Card Message

The second important safety message is displayed in the touchscreen display, each time the vehicle is ready to start.

To see the entire message of the safety card, scroll it on the screen using your finger.

Pressing the X in the right upper corner will close the message but return to the

first safety message. The vehicle will not start until you perform the appropriate action indicated at the end of the safety message.

⚠ WARNING

This Can-Am On-Road product is a different type of vehicle. It requires special skills and knowledge.

Learn how this product is different. Read the operator's guide and watch the safety video using the QR code link or visit Can-Am On-Road web site. Complete a training course (if available), practice, become proficient with the controls, and get a proper license.

- The Vehicle Stability System (VSS) cannot stop you from losing control, flipping over, or falling off if you exceed this vehicle's limits.
- Do not ride on ice, snow, or off road. Avoid puddles and running water.
- This type of vehicle can hydroplane on water and slip on gravel, dirt and sand covered roads. If you must go through these road conditions, slow down.

Wear a helmet and riding gear.

- With this type of vehicle, riders are exposed to more road risks than in a car.
- Even skilled operators can be struck by other vehicles or lose control.
- This vehicle will not protect you in a crash.

Instruct the passenger:


- Always hold handholds and keep feet on pegs.
- Watch the road. Lean into curves. Brace for bumps.

Always keep in mind:

- Brake with the foot pedal.
- Steer in the direction of a turn; do not countersteer.
- Keep all wheels in your lane, always ride in a single file, and do not split lanes.
- Perform Pre-ride Inspection.

Twist the throttle handle forward (away from you) to enable the starter button.

Default Display

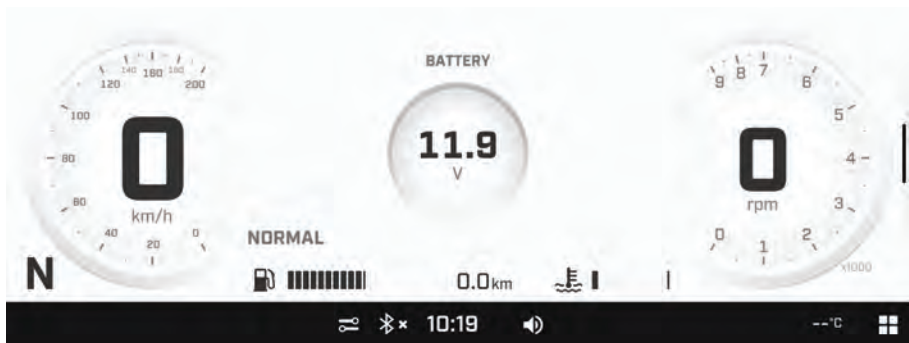

A dark mode is also available when riding in the evening or at night.

Navigating the Display

WARNING

Reading or tampering with the touchscreen displays can distract you from the operation of the vehicle, particularly from constantly scanning the environment.

Always pay attention to road conditions, ensure your environment is clear and free from obstacles.

Furthermore, when riding, only glance at the touchscreen displays briefly to maintain awareness of road conditions.

We recommend that you practice selecting some functions on the infotainment center before starting your ride. You will get used to them, and they will be easier to use during the ride.

The display is touchscreen, you can navigate the different menus and functions while the vehicle is at rest.

The touchscreen is deactivated as soon as the vehicle is moving.


When the vehicle is moving, only the left handlebar multifunction switch can be used to navigate through the menus and functions of the display.

Pressing the **Applet Switcher** button on the left handlebar multifunction switch will allow you to cycle through the applet in the right lateral display, in the order that can be defined in the preferences.

Center Display

In full-gauge view, long press in the upper-center area of the screen to show one of the following center gauges. Use additional long press to cycle through the center gauges:


- Battery voltage
- Engine temperature
- Distance to empty (estimated range)
- Current fuel consumption

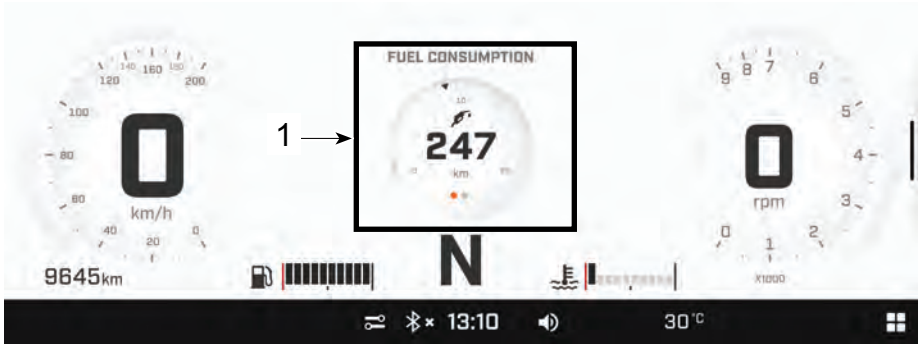

1. Long press in this area

In full-gauge view, long press in the lower-center area of the screen to show the following information. Use additional long press to cycle through the items:


- Trip A distance
- Trip A hours
- Trip B distance
- Trip B hours
- Total distance (odometer)
- Total hour(s)

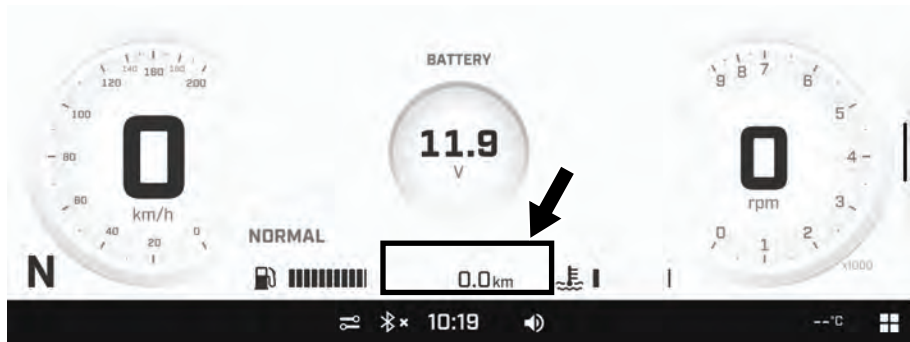

Views Display


To change from full-gauge view to split screen view, press the applet switcher or drag the divider from the right side of the display.

To change back to full-gauge view, long press on the applet switcher or drag the divider to its original position.

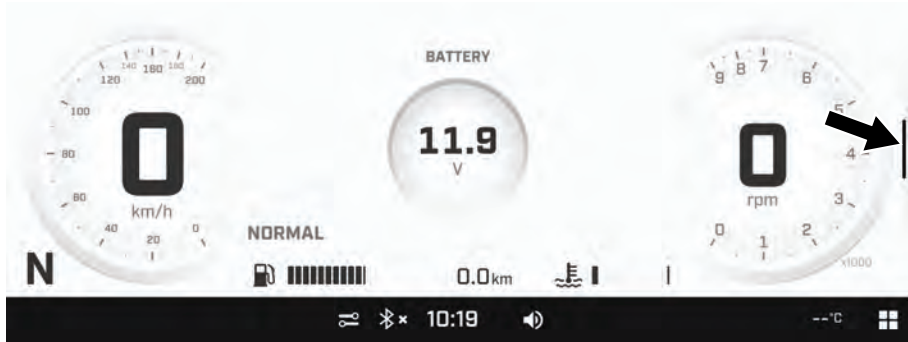


The sizes of the left and right lateral displays cannot be adjusted.

Left Lateral Display

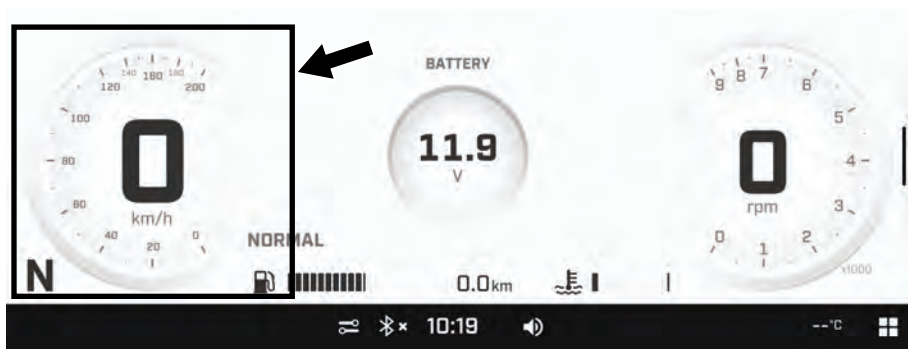

In split screen view, the left lateral display includes:

- Gauge
 - Speedometer
 - Vehicle odometer
 - Trip meter
- Tachometer

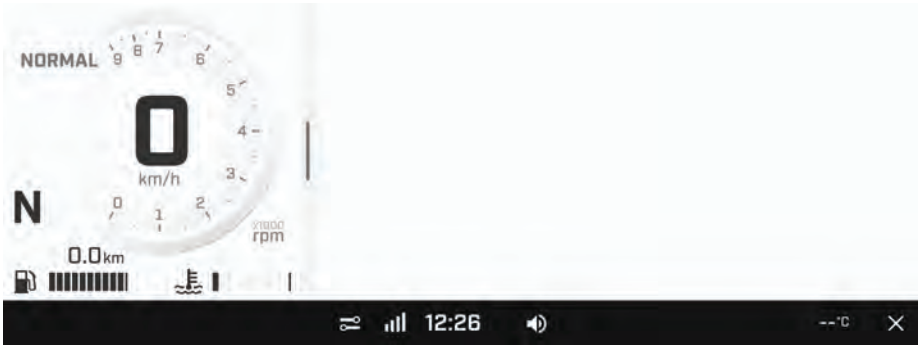

In split screen view, long press the trip meter to show one of the following. Use additional long press to cycle through the items.


- Trip A distance
- Trip A hours
- Trip B distance
- Trip B hours
- Total distance (odometer)
- Total hour(s)

Right Lateral Display


In split screen view, the right lateral display includes various applets, refer to *Applet Menu* for more information.

Applet Menu

To access the applet menu, tap the home menu icon  in the bottom-right corner.

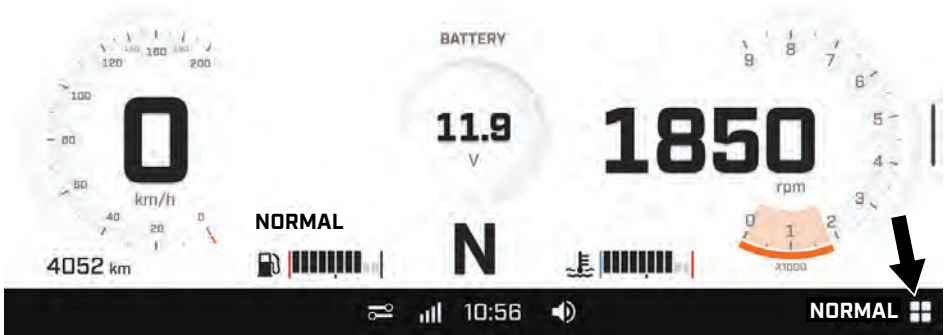

Select through the illustrated icons to open the corresponding applet.

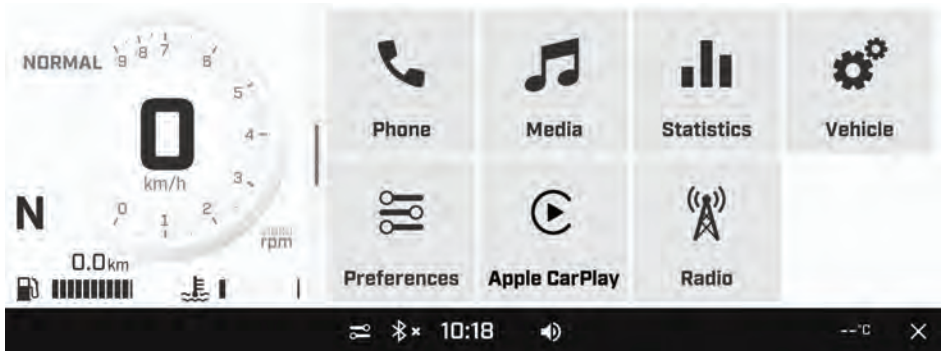

Phone




To have access to the *Phone* menu, a phone **and** a helmet audio system must be paired. Refer to *Pair Your Smartphone Through Bluetooth*.




The *Phone* applet is used to access the following:

- The keypad
- The phone contact list
- The phone history

Media

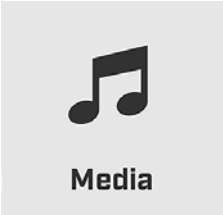


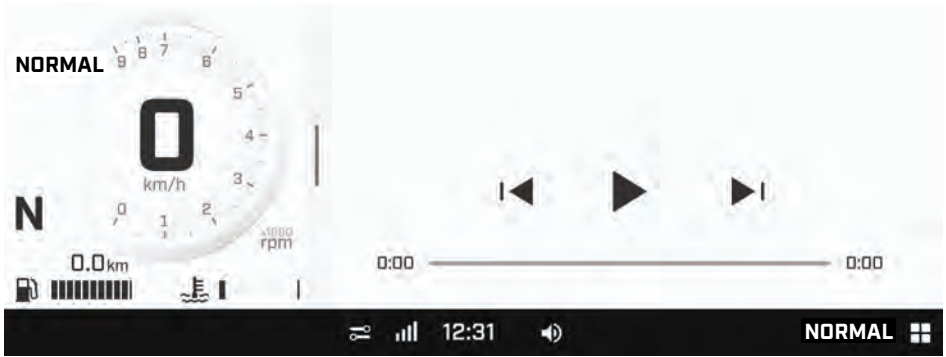

The Media applet is used to:

- Control song choice and volume in the helmet audio system
- View song information (when available)

Statistics

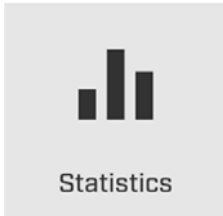

The *Statistics* applet is used to access the following:



- Trip distance information
- Trip elapsed time information
- Average speed

- Average fuel consumption.

Three sets of statistics are stored in memory.

- Trip A can be reset independently.
- Trip B can be reset independently.
- Current ride statistics will be reset when the vehicle restart.

Vehicle Settings

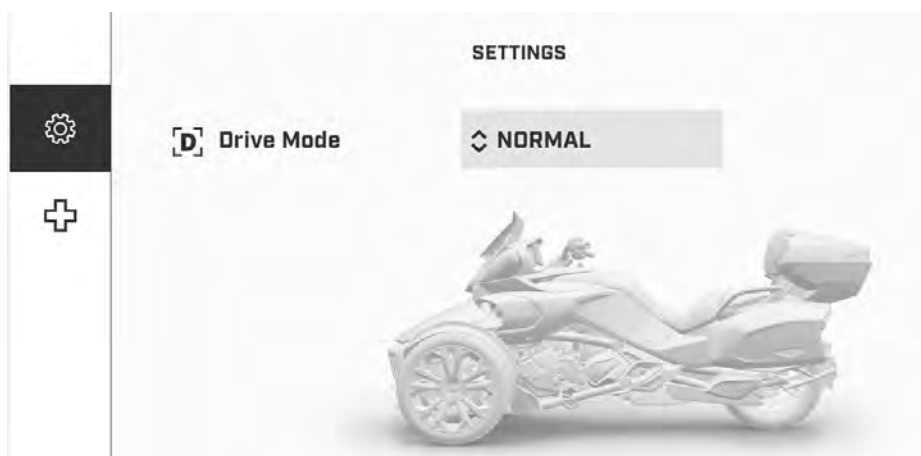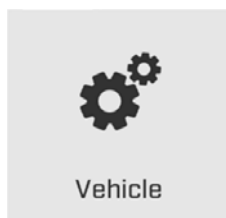

The *Vehicle Settings* menu is used for the following:

- Adjusting the drive mode settings
- Viewing vehicle health:
 - Vehicle information
 - Faults (codes and descriptions)
 - Safety card

Preferences




The *Preferences* applet is used for the following:

- Adjusting the display brightness and appearance (LIGHT/DARK/AUTO)
- Pairing Bluetooth devices:
 - Phone
 - Driver headset
 - Passenger headset
- Connecting the vehicle to a Wi-Fi network
- Unlocking BRP GO! on-road navigation
- Accessing to the *Audio* menu
 - Configure the audio output (headset or speaker (if equipped))
 - Access to Fade/Balance configuration
 - Auto volume control
- Accessing *General* settings:
 - Adjusting the units (Imperial/Metric)
 - Setting the language
 - Setting the date and time
 - Updating the software via WiFi
 - Getting information about the manufacturer information and device regulatory compliance
 - Resetting the display to factory settings
- Defining the applets to be used with the Applet Switcher button while riding
- Defining the settings to be used with the Ride Settings button while riding

It is recommended that you check regularly for software updates.

Quick Preferences


To access the *Quick Preferences* menu, tap the following icon.

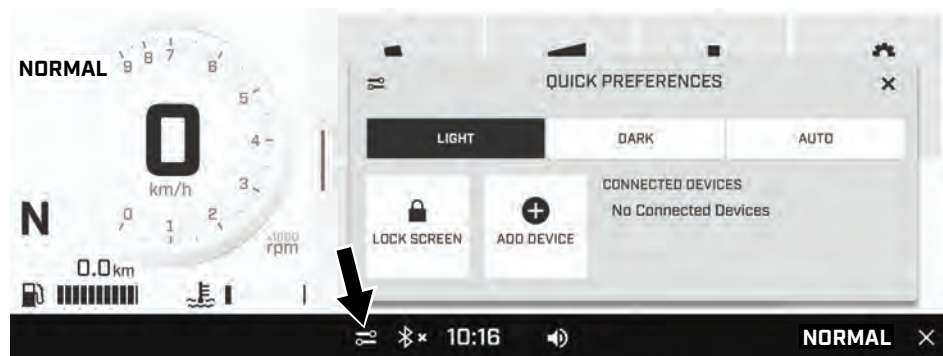

The *Quick Preferences* menu is used for the following:

- Adjusting the display appearance (LIGHT/DARK/AUTO)
- Locking the screen (press and hold anywhere on the screen to unlock)
- Adding a Bluetooth device
- Viewing connected Bluetooth devices

Apple CarPlay

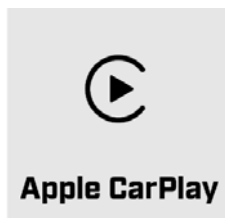

To use the Apple CarPlay, you must:

1. Pair a helmet audio system to the display via Bluetooth.
2. Connect a compatible iPhone to the display via USB cable.

NOTE:

If one of the two devices is not properly connected, Apple CarPlay can not be used. BRP recommends using Vibe, Sena, Cardo, or Nolan audio systems that support Bluetooth 5.0 or higher, as these have been tested to work with the 10.25" touchscreen display. Any other headsets may work, but could be unstable and lead to connection issues. BRP also recommends using a USB 2.0 or higher cable that supports 3 amps and offers a data transfer speed of at least 480 Mbps.

Apple CarPlay is used to play music, place or receive calls, and view Apple Maps. Apple CarPlay can also run many other supported applications. For details on the service or the operation, check the Apple CarPlay site.

[HTTPS://WWW.APPLE.COM/IOS/CARPLAY/](https://www.apple.com/ios/carplay/)

BRP GO! On-road Navigation



For owners with compatible Android or Apple smartphones, BRP GO! on-road navigation can be used with the 10.25" touchscreen display.

To activate BRP GO! on-road navigation, you must:

- On the phone:
 1. Create or log in to BRP GO! account
 2. Add vehicle with a 10.25" touchscreen display to profile.
- On the 10.25" touchscreen display:
 1. Preferences > Navigation > Select "ON"
 2. Press REBOOT
 3. Open the Navigation applet.

- Return on the phone:
 1. Open BRP GO! app
 2. Connect phone to the display via USB cable.

NOTE:

BRP GO! on-road navigation does not require an audio system to be paired via Bluetooth to function. BRP recommends using a USB 2.0 or higher cable that supports 3 amps and offers a data transfer speed of at least 480 Mbps.

Radio

The Radio applet is used to:

- Control the radio selection and volume in the helmet or vehicle audio system
- View radio information (when available)

Icons and Indicators**Warning and Telltale Lights**

WARNING and Telltale Lights	
	GREEN - Flashers
	Hazard Warning Flasher - All front and rear turn signals will flash
	ORANGE - Vehicle Malfunction
	BLUE - High Beam
	RED - The engine temperature is too high.
	GREEN - Neutral
	RED - Brake lock lever is engaged or malfunction of the brake system
	RED - The battery voltage too low or problem with the electrical system

WARNING and Telltale Lights	
	ORANGE - Malfunction of the ABS system
	RED - Low oil pressure Normally ON when engine is OFF
	ORANGE Turn on: Low fuel level Blink: Fuel level sensor fault
	ORANGE Turn on: Malfunction of the vehicle emissions control system Blink: Engine problems, the limp home mode is activated. Have the vehicle serviced immediately.


Icons and Indicators

Icon	Description
	Applet menu
	Audio volume
	Bluetooth
	Clock
	Quick preferences
	Smartphone network connection
	Temperature
	Wi-Fi
	Cruise Control is activated.
	VSS icon Turn on: When there is a malfunction Blink: If the VSS is doing an intervention.

Messages in Touchscreen Display


Infotainment notifications include messages regarding connected devices

Notifications will always appear at the top right corner of the screen.

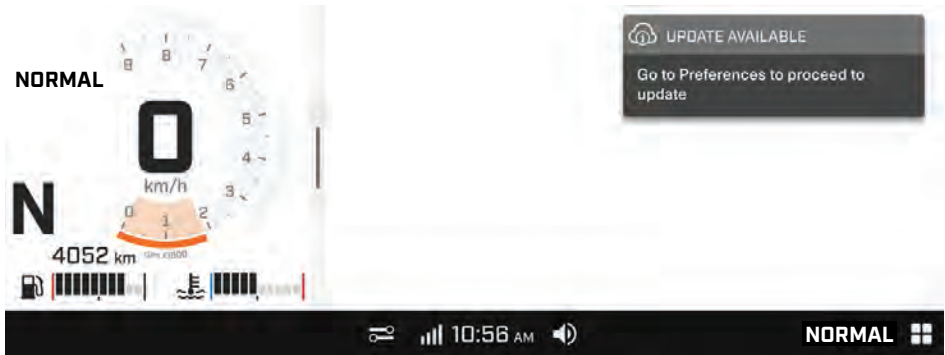

Pairing Your Smartphone Through Bluetooth On the Vehicle

1. Open the *Applet* menu.
2. From the *Preferences* menu, choose **Bluetooth**.

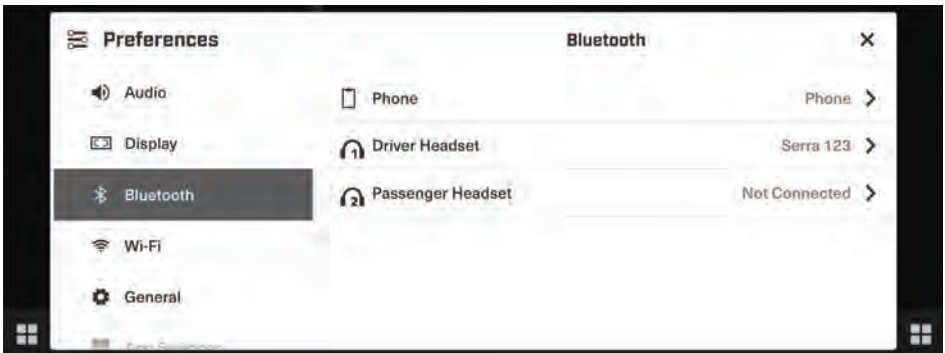

3. Expand **Phone**.
4. Select **Add Device**.
Up to two smartphones can be paired with the vehicle. However, only one will connect at any given time.

On the Phone

1. Activate your phone's Bluetooth™ function. Once the vehicle display finds your phone, its name (i.e, **BRP_[last 4 digits of the vehicle's VIN]**) will appear on the phone.
Refer to your phone manufacturer's user guide for the detailed procedure.
2. On the vehicle display, select your phone's name.

3. A confirmation number will appear on your phone *and* on the vehicle display. Make sure that these numbers match.
4. On your phone, select **Pair**.
5. Allow **Contacts and Favorites Sync** on your phone to use **Recent** and **Contacts** in the phone app. A notification will confirm the pairing.

Pairing a Helmet

Put your headset audio system in pairing mode. The process will vary depending on the headset model, so consult your headset's user guide if need be.

To pair a helmet, refer to *Pairing your Smartphone Through Bluetooth*. Then select **Driver Headset** or **Passenger Headset**.

OPERATING MODES

ECO Mode

When the fuel economy mode (ECO) is selected, the acceleration is reduced when accelerating from a complete stop and when operating in the low vehicle speed range under certain conditions.

An arrow will pop-up into the touchscreen display to indicate the optimized gear upshifting engine speed.

Standard Mode

In standard mode, the engine operates with standard settings for engine performance and other parameters in every condition.

SPORT Mode (F3–S Only)

When the SPORT mode is activated, the VSS will allow significantly more rear wheel spinning and higher vehicle slip angle, thus requiring countersteering. Moreover, when this mode is activated, traction control is reduced, meaning that rear wheel skidding is less supported even on lower friction surfaces. This mode is most effective on dry or wet asphalt. When this mode is activated, the driver should be even more careful than when normally driving the vehicle.

This mode can only be activated when the driver is alone on the vehicle (no passenger) and if no VSS fault is active.

Mode Display

When a mode is selected, a message is displayed in the lower display.

At the same time one or more icons will turn on to confirm your choice.

Driving mode	Display
ECO	ECO
STD	NORMAL
SPORT	SPORT

WARNING

You should familiarize yourself with the basic operation of the vehicle as well as vehicle handling with the VSS before using the sport mode. When using the sport mode, always be aware of your surroundings and of the vehicle handling.

OPERATING THE VEHICLE

Starting and Stopping the Engine

Starting the Engine

WARNING

Exhaust gas contains poisonous carbon monoxide that can rapidly accumulate in an enclosed or poorly ventilated area. If inhaled, it can cause serious injury or death.

Only run the engine in an unenclosed, well ventilated area. See the *General Precautions* section.

1. Push down and hold the brake pedal.


The vehicle can be started in any gear with the brake pedal pressed. The transmission automatically shifts to neutral when the engine has been started.

2. Turn the ignition key to ON.

NOTICE

Do not apply throttle while electrical system is initializing.

3. Twist gently the throttle handle forward (raise your wrist) to activate the starting system.
 - Once this motion is done, release the throttle handle.
 - The engine can be started in the next 30 seconds without doing this motion again.
 - Each time the engine is stopped, this motion must be performed to start the engine.

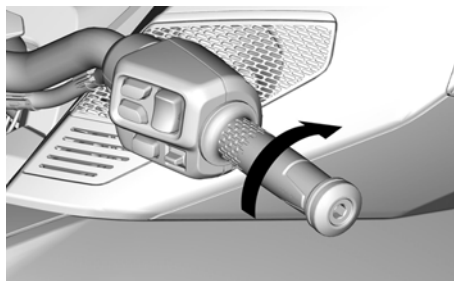

4. Press down the engine start switch until the engine starts. Do not hold the start button for more than 15 seconds. If it does not start, release the button and wait 30 seconds to let the starter cool down before trying again.

NOTICE

Do not apply throttle while starting the engine.



1. Engine start position

5. Check the touchscreen display for problems and to ensure that the oil light turns off.
6. Release the parking brake. Make sure the brake indicator lamp in the touchscreen display is off.

Stopping the Engine

1. Set the engine stop switch to OFF.
2. Engage the parking brake. The brake indicator lamp will turn on.
3. Turn the key to OFF.

NOTE:

If the parking brake is not engaged while the key is OFF, the parking brake indicator lamp will flash and a beeper will sound.

- Before dismounting, check that the parking brake is fully engaged. Rock the vehicle back and forth.

⚠ WARNING

Always engage the parking brake. The vehicle can roll if the parking brake is not engaged, regardless of what gear it is in. The clutch is always disengaged when the vehicle is stopped, so the transmission will not hold the vehicle in place.

Pushing the Vehicle

Before pushing the vehicle, ensure the ignition key is in the ON position.

⚠ CAUTION

Avoid pushing the vehicle on a slope. If you must push the vehicle on a slope, take extra care to stay within reach of the brake pedal in case the vehicle starts to roll.

To move the vehicle a short distance without starting the engine:

- While seated on the vehicle, push down and hold the brake pedal.
- Disengage the parking brake.
- Dismount on the right side of the vehicle, keeping your foot on the brake pedal.
- Push the vehicle, using the brake as needed.

⚠ CAUTION

Only push from the right side, so you can reach the brake pedal. Stay clear of the hot exhaust pipe. When pulling the vehicle backward, be careful that the front wheel does not roll over your feet.


- Remount the vehicle and park as specified above.

Operating in Reverse


For safe operation in reverse, refer to *Safe Operating Instructions* section.

Shifting Into Reverse

- With engine running, the vehicle stopped, and the brake depressed, shift into neutral.
- Twist gently the throttle handle forwards (raise your wrist) and keep this position.

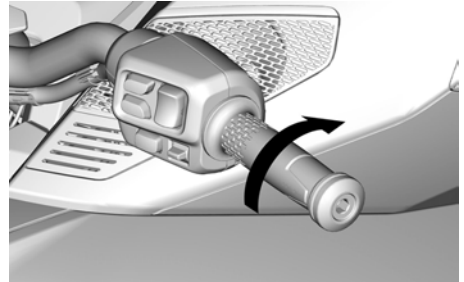

- Pull the gearshift selector again toward you to downshift in reverse.

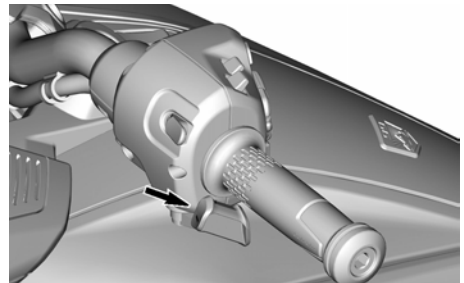

The icon **R** will appear in the display to confirm the activation of the reverse.

4. When confirmed, apply throttle slightly to go backwards carefully.

Driving in Reverse

Check that the area behind you is clear and continue to look backwards while you operate in reverse. Keep your speed low and do not back up for long distances.

Shifting Out of Reverse

To shift out of reverse, stop vehicle and push on upshift selector quickly to shift into neutral and more longer to shift in first gear.

NOTE:

To shift out of reverse into 1st gear, press the brake pedal and shift up.

Operation During Break-In

A break-in period of 1 000 km (600 mi) is required for the vehicle.

During the first 300 km (200 mi), avoid hard braking.

WARNING

New brakes and tires do not operate at their maximum efficiency until their break-in is completed. Braking, steering and VSS performance may be reduced, so use extra caution. Brakes and tires take about 300 km (200 mi) of riding with frequent braking and steering to break-in. For riding with infrequent braking and steering, allow extra time to break-in the brakes and tires.

During the first 1 000 km (600 mi):

- Avoid full throttle acceleration.
- Avoid prolonged riding maintaining constant RPM.
- If the cooling fans operate continuously during stop and go traffic,

pull over and shut off the engine to let it cool off or speed up to let air cool off the engine.

After the break-in period, your vehicle should be inspected as per the *Maintenance Schedule*.

Refueling

Fuel Requirements

NOTICE

Always use fresh gasoline. Gasoline will oxidize; the result is loss of octane, volatile compounds, and the production of gum and varnish deposits which can damage the fuel system.

Alcohol fuel blending varies by country and region. Your vehicle has been designed to operate using the recommended fuels, however, be aware of the following:

- Use of fuel containing alcohol above the percentage specified by government regulations is not recommended and can result in the following problems in the fuel system components:
 - Starting and operating difficulties.
 - Deterioration of rubber or plastic parts.
 - Corrosion of metal parts.
 - Damage to internal engine parts.
- Inspect frequently for the presence of fuel leaks or other fuel system abnormalities if you suspect the presence of alcohol in gasoline exceeds the current government regulations.
- Alcohol blended fuels attract and hold moisture which may lead to fuel phase separation and can result in engine performance problems or engine damage.

Recommended Fuel

Use premium unleaded gasoline with an AKI (RON+MON)/2 octane rating of 91, or an RON octane rating of 95.

NOTICE

Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.

NOTICE

Do NOT use fuel from fuel pumps labeled E85.

Use of fuel labeled E15 is prohibited by U.S. EPA Regulations.

Refueling Procedure

⚠ WARNING

- Gasoline and gasoline vapors are extremely flammable and highly explosive under certain conditions. To reduce the risk of property damage, serious injury or death from improper handling of gasoline when refueling, always follow the instructions contained in this section explicitly.
- Gasoline is poisonous. Improper handling can cause serious injury or death. Never siphon gasoline by mouth. Do not inhale vaporized gasoline. If you swallow gasoline, get some in your eyes, or inhale gasoline vapor, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. Change your clothes if gasoline spilled on them.

Before Refueling the Vehicle

⚠ WARNING

Failure to follow these precautions while refueling your vehicle may result in serious injury or death:

- Do not smoke, or allow open flames or sparks when refueling. Fuel vapors could ignite and cause a fire.
- Do not allow people to stay on the vehicle while refueling.
- Always proceed in a well-ventilated area.
- Ensure vehicle is on a level surface when refueling.

1. Park vehicle on a level surface. Apply parking brake.
2. Turn off the engine.
3. Ensure the operator and passenger get off the vehicle.
4. Confirm the type of fuel, refer to *Recommended Fuel*.

Opening the Fuel Tank Cap

⚠ WARNING


If a whooshing sound is heard or fuel is sprayed when the fuel tank cap is opened, have your vehicle inspected by an authorized Can-Am On-Road dealer before further operation.

1. Lift the fuel cap keyhole cover and insert the ignition key.



1. Fuel cap keyhole

2. Rotate the ignition key for $\frac{1}{4}$ turn clockwise to unlock the fuel cap, the cap will pop up slightly.

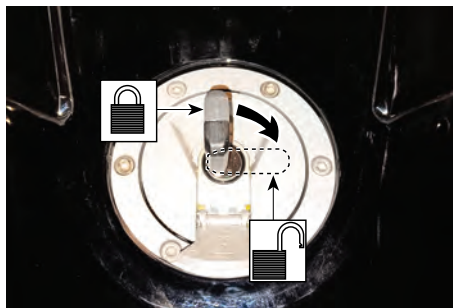

3. Tilt the fuel cap completely forwards to access the fuel filler neck opening.



When Refueling

⚠ WARNING


Observe these precautions when refueling to prevent the fuel tank from overflowing:

- Fully insert the fuel nozzle into the fuel filler neck.
- Stop filling the fuel tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

Additional precautions if using portable fuel containers:

- Do not spill fuel. Portable containers can spill more easily. Use smaller containers for an easier hold and balance when refueling.
- Make sure to use containers that do not hold more than the amount of fuel needed to avoid overfilling the fuel tank.
- Inspect your containers before use, they may leak due to wear and tear.

1. Do not top up the fuel tank as this may cause fuel to overflow and result in fuel spillage. Always leave room for the fuel to expand as the temperature rises. The fuel tank is full once the fuel level reaches the bottom of the filler tube.

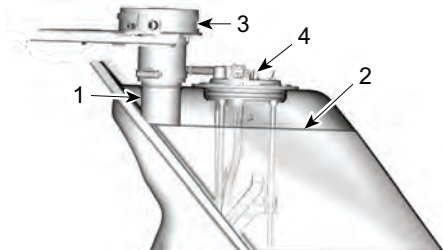

1. Filler tube
2. Fuel level
3. Fuel tank cap
4. Fuel pump

2. After refueling, wait a few second before removing the fuel nozzle from the fuel filler neck to let it drain and prevent spillage.

Closing the Fuel Tank Cap

WARNING

Avoid serious injury or death from an unlatched fuel cap that may leak gasoline and cause a fire, an explosion or other incident.

- **ALWAYS** make sure the fuel cap is properly closed after refueling and before operating the vehicle.
- **NEVER** remove the key before fully closing the fuel cap. The fuel cap will not close properly with the key out of the lock. **The key cannot be removed from the fuel cap unless it is in the locked position**

1. Close the fuel tank cap.
2. Push down the fuel cap to close it completely while turning the ignition key counterclockwise to lock the fuel cap.
3. Remove key and close the fuel cap keyhole cover.
4. Wipe up the vehicle if fuel was spilled.

Adjusting Suspension

Front Suspension

See a Can-Am On-Road dealer for front suspension adjustment.

Rear Suspension

T Models

The rear air suspension is pressurized for general operation. If the vehicle load changes (adding a passenger, riding with more cargo etc.) or if a softer or a harder setting is desired,

the pressure of the rear suspension can be changed to your preferences.

NOTE:

The air suspension might deflate over time, it is recommended to check it regularly even if the loading does not change.

The suspension pressure is adjustable by deflating or inflating the air spring. Use a regulated air compressor or hand pump and a pressure gauge.

To soften suspension, reduce air pressure and to harden suspension, increase air pressure.

NOTE:

When adjusting the pressure, do not put your weight on the vehicle and do not load cargo in the storage compartment.

Always refer to the *Rear Suspension Pressure* label located underneath the passenger's seat to determine the proper pressure required with vehicle load.

NOTE: The pressures indicate on the label are a guideline only. You may adjust the pressure to your riding preference as long as you do not exceed the maximum allowed pressure.

NOTICE

Do not exceed the maximum allowed pressure. This might damage the air suspension.

The air spring is connected directly to an air hose with a schrader valve located under the seat.

To change the air pressure, proceed the same way as for setting the pressure in a tire.

When finished, ensure to reinstall cap on the valve.

Limited Models

The rear suspension is calibrated for a general riding and will adjust automatically, using an integrated compressor, while riding to maintain this preset when the road conditions change or if the vehicle load changes (adding a passenger, riding with more cargo etc.).

NOTE:

It is normal to hear pressure release or the air compressor operating while engine is running. It indicates the suspension is self-adjusting.

SAFE OPERATING INSTRUCTIONS

WHAT'S DIFFERENT FROM OTHER VEHICLES

This section will help you understand some of the vehicle distinctive features and operating characteristics.

Stability

The “Y” configuration of this 3-wheel vehicle provides greater low-speed stability than a motorcycle.

However, it is not as stable as a four-wheeled vehicle such as an automobile. Driving aid technologies, like the electronic Vehicle Stability System (VSS), help maintain stability during maneuvers, but you can still lose control, tip or roll the vehicle due to extreme maneuvers (such as hard turns), overloading the vehicle or striking uneven surfaces or objects. In addition, the operator or passenger can fall off due to hard turns, acceleration, braking or impacts.

Response to Road Conditions

The road behavior of this vehicle may be different from other vehicles on the road. Follow these recommendations.

- Do not ride off-road or on ice or snow.
- Avoid puddles and running water. The vehicle hydroplanes more easily than a car. If you must go through water, slow down.
- Slow down on gravel, dirt or sand covered roads.
- Driving at temperature lower than 6 °C (43 °F) will result in reduced adherence.

Refer to *Street Strategies* for detailed instructions.

Brake Pedal

One pedal applies brakes on all three wheels. There is no hand-operated brake, and there is no way to brake front and rear wheels separately.

This vehicle is able to brake and steer at the same time, much better than a

motorcycle and can stop very quickly. Be aware of vehicles behind you, they may not be able to stop or react as quickly.

Anti-lock Braking System (ABS)

The vehicle is equipped with an Anti-lock Braking System (ABS) as part of the Vehicle Stability System (VSS).

This system helps to maintain the steering control during an emergency braking situation by keeping the brakes from locking.

Parking Brake

The parking brake mechanically brakes the rear wheel only, and it locks in place when engaged. It is not controlled by driving aid technologies (e.g., Anti-lock Braking System (ABS), Electronic Brake Distribution (EBD)).

Steering

Direct Steering

To take a turn, always steer the handlebar in the direction of the turn.

Motorcyclists - Do not countersteer as you do with a motorcycle. Unlike a motorcycle, this 3-wheel vehicle cannot lean while turning. You must relearn how to turn. Practice the turns at different speeds until you are proficient.

Sideways Forces in Turns

Unlike a motorcycle, this vehicle cannot lean while turning. You will feel sideways forces pushing you to the outside of the turn.

To maintain balance, the operator and passenger must hold back with their both hands and keep their feet firmly planted on the footpegs.

In tight turns, it may help to lean your upper body forward and toward the inside of the turn.

Width

Because this vehicle is wider than a typical motorcycle:

- Always keep the front wheels in your lane. Be particular aware of the front wheels location when entering in a curve or during an overtaking.
- Do not share lanes or split lanes (ride between two lanes of traffic). Group riding should proceed in a single file, even with motorcycles.
- Be prepared to swerve farther to avoid obstacles.

NOTE:

Clearing an obstacle with the front wheels does not guarantee clearing the obstacle with the rear wheel.

Vehicle Blind Spots

A blind spot is an area outside the driver's field of vision that cannot be seen in the rear-view mirror or, through the rear camera (if equipped).

In general, the taller and longer the vehicle is, the bigger the blind spots are.

For this reason, it is important to familiarize yourself with the blind spots of the vehicle created by its design, especially if it is a new vehicle.

The blind spots are all around the vehicles. The blind spots are located at the rear and on the sides of the vehicle.

Be mindful about persons around the vehicle, other vehicles or nearby objects when operating the vehicle in reverse.

Pay attention to the vehicle blind spots

when backing off from the platform, trailer or flat bed.

IMPORTANT: Even if the vehicle is equipped with rear-view mirrors or a rear camera, there will always be remaining blind spots all around the vehicle.

Reverse

The reverse icon **R** appears into the selected gear display when the reverse position is selected.

This vehicle may back in reverse like a car. However, there are some important differences:

- If necessary, have the passenger dismount if your visibility is limited.
- Remember that the front is wider than the rear. Do not back up too close to objects or you may hit them with the front tires.
- Keep your speed low and do not back up for long distances.
- When possible, park so that you do not have to back out of the parking space.




CAUTION

Always keep both feet on the foot-peds while operating in reverse. Never put your feet on the ground while backing-up.

Rear View Camera (If Equipped)

The vehicle can be equipped with a rear view camera positioned below the top storage compartment, to the right of the backup light.

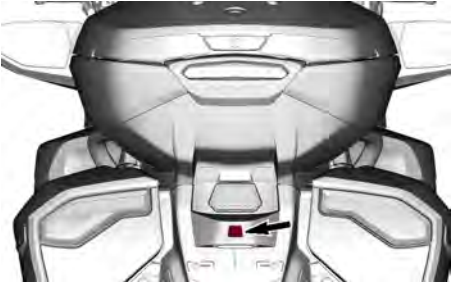

This camera is in operation automatically when the engine is running and the REVERSE is selected and it is deactivated as soon as the REVERSE is no longer selected.

The rear view behind the vehicle is then displayed in the large display.



When the camera is activated, fixed guide lines are shown in the screen to help you during the maneuver.

The lateral lines give an indication of the vehicle width.

The rear view camera uses a wide-angle lens, the distances and objects shown in the display are different from the real size.

Moving in reverse by checking only the rear view camera image from the display could cause an accident.

Rear view camera visibility is limited, always make sure that the immediate surrounding of the vehicle is clear before backing up slowly. Reducing the volume of the radio or music is also recommended before backing up.


Use caution while reversing. Objects in the red zone are closest to your vehicle and objects in the green zone

are farther away. Objects get closer to your vehicle as they move from the green zone to the yellow or red zones.

In case of doubt, ask someone to help you during the maneuver.

Rear View Camera Visibility Areas

The following images illustrate the approximate rear view camera visibility areas.

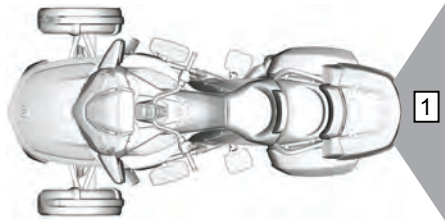

1. Approximate rear camera cone of vision



1. Approximate rear camera cone of vision

Driver's License and Local Laws

Driver's license requirements for operating this vehicle vary by location. Depending on local laws, you may need an automobile driver's license, a motorcycle's license, or a specific endorsement for a 3-wheel vehicle.

Check with local authorities to make sure you have the proper license before operating the vehicle on public roads.

DRIVING AID TECHNOLOGIES

Vehicle Stability System (VSS)

This vehicle is equipped with a Vehicle Stability System (VSS).

This system helps in keeping the control of the direction and reduce the risk of tipping or rolling over in some situations.

The VSS is composed of:

- An **Anti-lock Braking System (ABS)** that helps maintain steering control during an emergency braking situation by keeping the brakes from locking.
- An **Electronic Brake Distribution (EBD)** system that automatically adjusts the brake balance between all three wheels. With the ABS, EBD helps maintain directional control and maximize the braking force depending on the traction available.
- A **Traction Control System (TCS)** that helps prevent the rear wheel from slipping. The TCS will limit rear wheel spin only if you turn the handlebar (steer out of straight line) or if traction conditions or vehicle stability require engine torque to be reduced.
- A **Stability Control System (SCS)** is designed to limit the power driving the rear tire and to brake individual wheels, which reduces the risk of losing control of the vehicle or rolling over.

NOTE:

The VSS light in the gauge will turn on when VSS intervenes and turn off after VSS intervention.

Limitations

VSS cannot help you maintain control in all situations.

Surfaces with Poor Traction

The grip of tires on the road surface limits the maximum braking. Even with ABS and EBD, your stopping distance

will be longer on surfaces with poor traction if you do not maintain the recommended tire pressure or if tire tread condition is degraded.

If your tires lose traction with the road surface you may lose control of the vehicle, even with VSS.

If the paved road surface is covered or partially covered with ice, snow or slush, there is not enough traction available to maintain control of the vehicle, even with VSS. Do not operate on snow, ice or slush.

NOTE:

The grip of the vehicle tires starts to decrease below 6 °C (43 °F).

Like other on-road vehicles, this vehicle can hydroplane on water (lose traction on a layer of water). If you ride too fast into a layer of water, such as a large puddle or flowing water on the road, the vehicle can lose traction and spin out, and the VSS cannot keep you in control. Avoid large water puddles or water streams, and slow down or pull off the road during heavy rains. If you must pass through water, slow down as much as possible before you reach it.

Reduce speed on surfaces with poor traction, like mud, sand, gravel or wet pavement. This vehicle is not for off-road operation. Always operate the vehicle on maintained roadways. Do not use the vehicle on any other terrain.

Tires

The VSS on the vehicle has been calibrated to perform best with a tire of a specific size, material and tread pattern. Replacing your tires with ones not approved by BRP can cause the VSS to be less effective.

Use only BRP recommended tires, which can be ordered only from an authorized Can-Am On-Road dealer.

Proper tire inflation pressure and tread condition are important for maintaining traction, especially on loose or wet surfaces. Tire pressure that is too low may result in hydroplaning and excessive tire heat build up, while a tire pressure that is too high can reduce VSS effectiveness.

Hard Turns

The VSS does not control or limit steering input — it cannot keep you from turning too sharply. Large and rapid steering handlebar movements can cause the vehicle to go out of control, spin, tip or roll over.

Excess Speed

The VSS does not control the vehicle speed, except when SCS intervenes during a turn. The VSS does not prevent the vehicle from entering a turn too fast. If you drive too fast for conditions, you can lose control, even with VSS.

Excess Weight

Never load vehicle above specified values.

Total Vehicle Load Allowed	
F3-S	199 kg (438 lb)
F3-T	199 kg (438 lb)
F3 Limited (Australian models)	170 kg (375 lb)
F3 Limited (all other models)	209 kg (461 lb)

Hill Hold Control (HHC)

This vehicles has a hill hold control (HHC) function.

While in forward gear and when going up a slope from standstill, the VSS will hold the brakes for 1 second after the brake pedal is released. It will also automatically release the brakes as soon as the throttle is applied, whichever comes first.

The same will happen while in reverse gear and when going down a slope from standstill.

NOTE:

A minimum slope of 5% is required to activate the hill hold control.

This function is automatic and does not need to be activated by the driver.

NOTE:

The HHC is active for 1 second when the brake pedal is released.

Dynamic Power Steering (DPS)

The DPS (Dynamic Power Steering) provides a computer controlled, variable power assist, achieved by an electric motor to optimize the amount of steering effort required by the rider.

The steering assist level is dependent of the handlebar effort, the steering angle and the vehicle speed.

When vehicle is in the reverse gear, power steering assist will decrease as vehicle speed increases.

UNDERSTANDING RISK ON THE ROAD

Before operating this 3-wheel vehicle, watch the safety video, read the safety card and all on-product safety labels.

Consider your risk of being hurt or killed in a crash, think how you can reduce this risk and whether, you are willing to take this risk.

There are many factors that contribute to the risk that you face. You can control some of these factors, but others, like the behavior of other drivers, are beyond your control.

Here are some of the factors that affect your risk:

Type of Vehicle

Different types of vehicles vary in terms of size, visibility and maneuverability and provide different degrees of protection.

This vehicle is small and maneuverable. Maneuverability can help avoid crashes. However, smaller vehicles are harder to see, which increases the chance that other motorists will cause a crash. In some situations, the Ryker is less likely to be in a crash than a motorcycle. For example, you are less likely to tip over at low speeds while operating the vehicle. However, in other situations, the vehicle is more likely to be in a crash. For example, because the vehicle is wider, it will not fit through as small an opening as many motorcycles.

In cars and trucks, the structure of the vehicle provides protection in crashes and from other road hazards. In addition, passengers can protect themselves by wearing seat belts. You should expect that the riding of this vehicle is riskier than riding in a car and that the risk of injury is more like riding a motorcycle.

As when riding a motorcycle, you can reduce the risk of injuries by wearing a helmet and riding gear.

Operator Skills and Judgment

Every driver has some control over their own risk on the road.

Drivers who develop good skills will have better control of their vehicle.

Do not rely on your experience with motorcycles, automobiles, ATVs, snowmobiles or any other kind of vehicle to prepare you to operate the vehicle.

Learn how this vehicle is different. Read this Operator's Guide, watch the safety video located at:

[HTTPS://CAN-AM.BRP.COM/
ON-ROAD/US/EN/OWNER-ZONE/
SAFETY-INFORMATION.HTML](https://can-am.brp.com/on-road/us/en/owner-zone/safety-information.html)

Or, use the following QR code:



If available, take a training course. Become proficient with the controls and be able to do the practice exercises accurately and with confidence before going on the road.

When you begin riding on the road, start with less challenging situations (e.g., light traffic, lower speeds, good weather, no passenger) and gradually move on to more challenging riding situations as you develop your skills. Plan ahead to avoid situations that are too difficult for your skill level, or that present more risk than you want to take on.

Even skilled drivers cause crashes. For example, if you use your skills to do extreme maneuvers or stunts, you increase your risk. The smart driver uses good judgment along with skills to increase the margin of safety and minimize risk. Learn the defensive

driving techniques in *Street Strategies*.

Rider Condition

A driver needs to be alert, sober, and physically ready to ride. Never use this vehicle with drugs or alcohol. Riding when intoxicated, tired or otherwise impaired increases the risk of a crash.

Alcohol, drugs, medications, fatigue, drowsiness and emotions can all inhibit your ability to ride safely. Like riding a motorcycle, riding this vehicle is a challenging activity — being in good physical and mental condition is even more important than for a car. The safest policy is to never operate the vehicle unless you are alert and completely sober. Even if your blood alcohol level is not over the legal limit, your judgment and skills are impaired by any alcohol consumption.

You must be physically able to operate all controls, turn the handlebar through the full range of steering, mount and dismount, and monitor your surroundings to operate the vehicle.

Passengers also need to be alert, sober and physically able to maintain their posture, hold on and react appropriately to curves, bumps, acceleration and stops.

Vehicle Condition

Keep your vehicle in good condition.

Do pre-operation checks and perform regular maintenance. Watch for any messages on the multifunction gauge cluster when you start the vehicle, and address any problems before you ride.

Always use the multifunction gauge with extreme caution. Prolonged attention to the display while riding significantly increases the risk of a crash.

Road and Weather Conditions

Roads with heavy traffic, poor visibility or poor traction surfaces increase your risk. Choose routes that are appropriate for your skill level and the level of risk you are willing to accept.


RIDING GEAR

Riding this vehicle requires the same protective gear as motorcycling. Even though the vehicle is more stable at low speeds than a motorcycle, you can still be thrown off.

This section is based on guidance for motorcyclists given by the Motorcycle Safety Foundation (MSF).

In the event of a crash, protective gear may prevent or reduce injuries. Protective gear also helps you stay comfortable and can help provide protection against the elements.

Recommended basic protective gear for riders and passenger includes sturdy over-the-ankle footwear with non-slip soles, long pants, a jacket, full-fingered gloves and, above all, an approved helmet with proper eye protection.

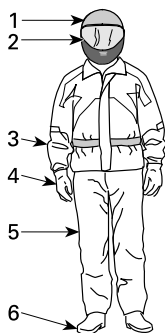

RIDING GEAR

1. *Approved helmet*
2. *Eye and face protection*
3. *Jacket with long sleeves*
4. *Gloves*
5. *Long pants*
6. *Over-the-ankle footwear*

Proper apparel can reduce the severity of injuries in case of a crash, either for the operator or the passenger.

Helmets

Helmets protect the head and brain from injury. A helmet can also protect the passenger's face from impact with the back of the operator's helmet.

Even the best helmet is no guarantee against injury, but statistics indicate that helmet use significantly reduces the risk of brain injury. So, be safe and always wear a helmet while riding.

Choosing a Helmet

Helmets should be manufactured to meet the appropriate standard in your state, province or country.

A full-face helmet gives the most protection against impacts since it covers all of the head and face. It can also protect against debris, stones, insects, etc.

A three-quarter or open-face helmet can also offer protection. It is constructed with the same basic components but does not offer the face and chin protection of full-face helmets. If you wear an open-face helmet, you should use a snap-on face shield or a pair of goggles.

NOTE:

Ordinary glasses or sunglasses are not sufficient eye protection for a motorcyclist. They can shatter or fly off, and they allow wind and airborne objects to reach the eyes.

Use tinted face shields, goggles or glasses in the daytime only; do not use them at night or in poor illumination. Do not use them if they impair your ability to discern color.

Other Riding Gear

Footwear

Always wear closed toe footwear. Sturdy over-the-ankle boots protect against a variety of riding hazards, such as stones that get thrown up from the roadway and burns from the hot exhaust pipe.

Avoid long shoelaces that can be tangled in the gearshift lever, brake pedal or other parts. Rubber soles

and low heels are a good idea to help keep feet on the footrests.

Gloves

Full-fingered gloves protect hands from the wind, sun, heat, cold and flying objects. Gloves that fit snugly will improve grip on the handlebar and help reduce hand fatigue. Sturdy, reinforced motorcycle gloves help protect hands in the event of a fall. Gloves made specifically for motorcyclists have seams on the outside to prevent irritation, and are curved to provide a natural grip when curled around the handgrips. If gloves are too bulky, it may be difficult to operate the controls. Gauntlets keep cold air from going up sleeves and protect the wrists.



1. Glove gauntlet

Jackets, Pants and Riding Suits

Wear a jacket and long pants, or a full riding suit. Quality motorcycle-type protective gear will provide comfort, and it can help you avoid being distracted by adverse environmental elements. In case of a crash, good quality protective gear made of sturdy material may prevent or reduce injury. Some gear includes padding or hard armor that may further reduce the risk of injury in a crash. Pants also help protect against burns from hot parts.

Protective gear sold for motorcycling will often provide the best combination of fit and protection. These garments are designed to fit while sitting in a riding position. They are cut longer in the sleeves and legs and are fuller across

the shoulders. Riding suits are available in both one-piece and two-piece sets.

Leather is a good choice because it is durable and wind-resistant and provides protection against injury. Other abrasive-resistant protective gear made of synthetic fabrics are good choices, too. Do not wear loose or long clothing or scarves that can become tangled in the moving parts.

Flaps and fasteners seal out the wind. A jacket with a zippered front will be more wind resistant than a jacket with buttons or snaps. A flap of material over the zipper of a jacket gives additional protection against the wind. Jackets with snug cuffs and waist are recommended to keep wind from blowing in. A large, loose collar can flap when riding and may irritate skin or be a distraction.

In cool-weather riding, protect yourself against hypothermia. Hypothermia, a condition of low body temperature, can cause loss of concentration, slowed reactions and loss of smooth, precise muscle movement. In cool conditions, proper protective gear like a windproof jacket and insulated layers of clothing are essential. Even at moderate temperatures, you can feel very cold due to the wind while riding.

Protective gear that is appropriate for cold-weather riding may be too hot when stopped. Dress in layers so that clothing can be removed as desired. Topping the protective gear with a windproof outer layer can prevent cold air from reaching the skin.

Riding gear can also help a rider be more visible. Wearing bright colors is a wise choice. If a dark jacket is worn, an inexpensive reflective vest can be worn over it. It is a good idea to put extra reflective tape on garments worn regularly while riding.

Rain Gear

If you must ride in wet weather, a rain suit or a waterproof riding suit is recommended. On long rides, it is a good idea to carry rain gear. A dry rider will be much more comfortable and alert than a rider who is wet and cold.

One or two-piece styles are available, and those designed specifically for motorcycling are best. High-visibility orange or yellow colors are good choices. A feature to look for is elastic in the waist, pant legs and sleeves. The jacket should have a high collar and zip up with wide flaps across the opening. When purchasing a rain suit, consider adding waterproof gloves and footwear.

Remember, if the weather is wet, it is best to avoid riding. If you do ride in wet weather, you may need to stop if water starts to accumulate on the road.

Hearing Protection

Long-term exposure to wind and motor noise when riding can cause permanent hearing loss. Properly worn hearing protective devices such as earplugs can help prevent hearing loss. Check local laws before using any hearing protective devices.

REQUIRED RIDING SKILLS AND PRACTICE EXERCISES

Before you take this vehicle on the road, you need to develop riding skills and strategies for managing risk on the road.

If you have experience with motorcycles or other motor vehicles, pay particular attention to how the operation and performance of this vehicle are different from vehicles you are used to.

The following exercises will familiarize you with the basic operation of the vehicle. Practice each exercise until you can perform it proficiently before moving on to the next.

This section includes the following exercises:

1. Revving the engine and using the engine stop switch
2. Starting, stopping, and basic handling
3. Engine stop while in motion
4. Basic turns
5. Quick stops
6. Weaves
7. Shifting
8. Swerve
9. Operating in reverse.


Choosing a Practice Area

Perform these exercises in a paved area at least 30 by 76 m (100 by 250 ft) that is not open to traffic. A closed, well marked parking lot without obstacles (light poles, curbs, etc.) makes a good practice area. Be aware of oil left by parked cars. Look for parking lots that are empty during off hours, such as schools, churches, community centers or shopping centers. Do not trespass on private property.

Once you have selected a suitable location, get permission to use it from the owner. If there are obstructions, such as light poles or islands, be sure that they do not interfere with the

required open paths shown in the diagram below.

Keep this basic parking lot diagram in mind when setting up the exercises. 3 m (10 ft) wide parking lot spaces are indicated in the diagrams for convenience, but the size of the spaces in the lot you use may be different. If the parking lot you choose does not have lines or if the parking spaces are sized much larger or smaller than the ones in the diagrams, use the dimensions shown below. Mark them using a tape measure and chalk or markers such as cones or milk containers weighted with water or sand.

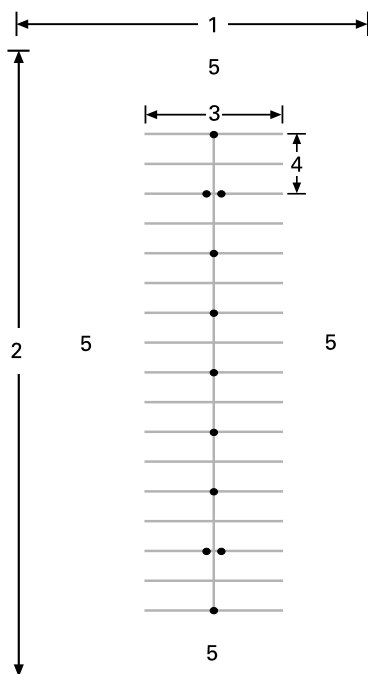

TYPICAL PARKING LOT

1. At least 30 m (100 ft)
2. At least 75 m (250 ft)
3. 12 m (40 ft)
4. 6 m (20 ft)
5. Open area

Even in a closed lot, be aware of potential traffic. Check to the front, sides

and rear before doing an exercise. Also, watch out for children and animals.

Preparing to Ride

Know the location and operation of all the vehicle controls. Refer to *Vehicle Information* section.

Adjust handlebar, footpegs and brake pedal to meet driver needs. Refer to *Control Components Adjustment* in *Equipment* section.

Perform the pre-ride inspection. Refer to *Pre-Ride Inspection* section.

Always start and stop the engine according to the instructions in *Starting and Stopping the Engine* in *Basic Procedures*.

Riding Posture

Good posture helps you maneuver the vehicle more easily. Always keep both hands and both feet in position so that you can operate the controls easily. The wrist should typically be aligned straight with the arm (this position helps you apply the amount of throttle you want). Arms should be relaxed and bent. Keep your back straight and your head and eyes up. Keep both feet on the pegs near the controls.

Never operate the vehicle, even for a short distance, unless you are in the proper riding posture.



TYPICAL RIDING POSTURE

Practice Exercises

1) Revving the Engine and Using the Engine Stop Switch

Purpose

- Become familiar with the operation of the twist throttle.
- Become familiar with the sound of the engine at different RPMs. This will help you to know when to up-shift and downshift based on the engine sound.
- Become familiar with using the engine stop switch.

Directions

- Start with the vehicle in NEUTRAL, the parking brake engaged, and your right foot on the brake pedal. Check the multifunction gauge cluster to be sure you are in NEUTRAL — if you are in first gear, the vehicle will try to start moving when you apply the throttle.
- Watch the tachometer and apply throttle (twist by lowering your wrist) a few times to raise the RPM to no more than 4000. Practice applying the throttle gently and smoothly, holding it steady at about 3000 RPM, and releasing it. As long as the transmission is in neutral the power will not transfer to the rear wheel.
- Use the engine stop switch to cut all power to the vehicle. Press the switch with your right thumb while keeping your hand on the handgrip.

Tips for Additional Practice

- Practice pressing the engine stop switch without looking at it.

2) Starting, Stopping and Basic Handling

Purpose

- Learn throttle control and how to get the vehicle moving.

- Become familiar with low speed deceleration and braking.

Directions

If you feel like you are losing control while doing these exercises, release the throttle to stop accelerating and apply the brake as needed to slow down. You can also use the engine stop switch to cut power entirely.

2a) Apply and Immediately Release Throttle

Directions

At first, you will only use the throttle for a moment at a time, then release it and coast.

- Start the engine and release the park position lever.
- With the brake pedal pressed, push on the shift lever to ensure the forward position is selected.
- Release the brake.
- Slowly apply throttle until the vehicle starts to creep forward. As soon as you start moving release the throttle and coast, then press the brake to stop. Repeat to the end of the straightaway.
- To turn around at the end of the straightaway, stop, turn the handlebar all the way to the right, then briefly apply and release the throttle, and coast through the turn. You may need to briefly apply the throttle more than once to complete the turn. Stop when you are in line with the straightaway in the opposite direction.
- Continue with this part of the exercise until you are comfortable with applying and releasing the throttle.

2b) Hold Throttle, Release and Stop Every 12 m (40 ft)

Next, you will be holding the throttle a little longer, then stopping every 12 m (40 ft) (every other marker/every fourth line).

- Again, slowly apply throttle until the vehicle starts to creep forward. This time, hold the throttle at this point.
- As you approach the stopping point, release the throttle and press the brake to stop.
- Turn around at the end of the straightaway as before, except now you do not need to release the throttle during the turn. Pay attention to maintaining a steady throttle position as you turn. Stop when you are in line with the straightaway in the opposite direction.

2c) Hold Throttle, Release and Stop at Ends

Next, use the entire straightaway, stopping only at the ends. Keep the throttle moderate.

3) Engine Stop while in Motion

Purpose


- Become familiar with using the engine stop switch when in motion so you know how the vehicle will react if you need to use it later.

Directions

- Partway down the straightaway, while operating at 8 km/h (5 MPH), toggle the engine stop switch to OFF position and coast to a stop.
- Restart the engine and repeat the exercise. Try increasing your speed (to a maximum of 20 km/h (12 MPH) before using the engine stop switch.

NOTE:

Vehicle will not start in gear without brake pedal depressed.

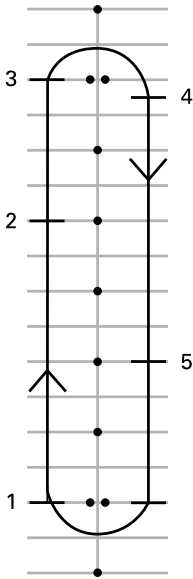

1. Start
2. Press engine stop switch
3. Proceed to end of straightaway, stop and turn as before
4. Stop
5. Press engine stop switch

Restart the engine and proceed to the next exercise.

4) Basic Turns

Purpose

- Get comfortable turning in a controlled manner.

Directions


This exercise is similar to what you did before, except that now instead of stopping for each turn, you will make the turn at low speed.

- Roll in a straight line. Ride a little farther from the cones so you can make a wide arcing turn at the end of the straightaway.
- As you approach the curve, slow down to no more than 8 km/h (5 MPH) by releasing the throttle and apply brake if needed.

- Hold the throttle to maintain your low speed.
- Look in the direction of the curve.
- Turn the handlebar in the direction of the curve, pulling on the inside handgrip and pushing on the outside, being careful not to apply throttle.
- Leaning forward and into the curve may help you turn the handlebar more easily.
- Straighten your handlebar after the turn and proceed down the straightaway.



TYPICAL - RIDING POSTURE WHEN TURNING

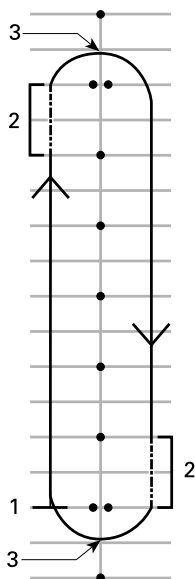

1. Start
2. Friction zone
3. Apex

NOTE:

Motorcyclists - Riding through turns and curves with this vehicle is different than on a motorcycle. The vehicle does not lean during a turn, so you may need to shift your body weight towards the inside of the turn to keep a comfortable posture on the vehicle. You will need to exert more force to turn the handlebar of your vehicle than is needed to turn a motorcycle. However, it is easier to stop while turning than with a motorcycle.

Tips for Additional Practice

- After you are comfortable turning in one direction, try going around the course the other way. Be careful not to apply more throttle than you intend when turning left.
- Stop at the apex of the turn to see what it is like to use your brakes in a curve or turn.

5) Quick Stops


Purpose

- Become familiar with the vehicle braking ability.
- Learn to apply brakes with maximum force.

Directions

This exercise is similar to what you did before, except you'll be applying the brake more firmly, working up to braking as hard as possible. The Anti-lock Braking System (ABS) will prevent the wheels from locking and help you maintain steering control while applying maximum braking force. Always release the throttle completely for quick stops. If you apply throttle and brake at the same time, your stopping distance will be longer.

- Start at one end of the straightaway and accelerate to 8 km/h (5 MPH). Partway down the straightaway, release the throttle completely and brake quickly. Never pump the brake as the ABS will prevent wheel lock.
- Keep head and eyes up, keep handlebar straight, and do not release the brake until fully stopped.
- Repeat, increasing your speed and braking harder.

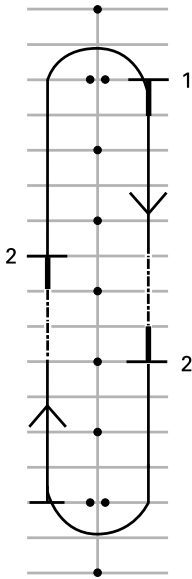

1. Start
2. Stop

Tips for Additional Practice

- Practice checking your mirrors before braking hard.

6) Weaves


Purpose

- Get more experience with the vehicle handling and rider position.

Directions

6 m (20 ft) Weave


1. Weave between every marker/intersection of every other parking spot. Keep your speed low initially as you get used to making the changes of direction.
2. Lean into each turn and turn the handlebar in the direction you want to go by pulling and pushing the grips.

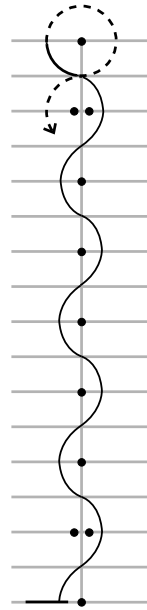

1. Start

12 m (40 ft) Weave

Once you're comfortable, try doing 12 m (40 ft) weaves between every other cone/every fourth parking space.

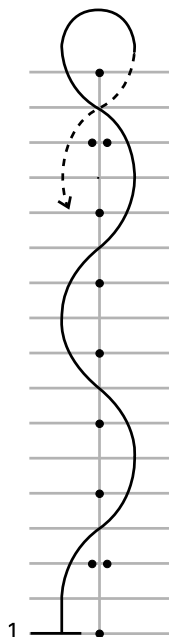

1. Start

Tips for Additional Practice

- You can gradually increase speed as you get comfortable to 16 - 19 km/h (10 - 12 MPH) for the weaves, but slow down for the U-turns at the ends.

7) Shifting

When riding, you must change gears to match the engine speed with road speed. Lower gears are used for lower speeds and higher gears are used for higher speeds, just like on a manual transmission car or truck.

The transmission will automatically downshift if the engine speed drops under 1800 RPMs.

Purpose

- Learn to upshift and downshift.

Directions

This exercise is similar to what you did before, except now you will be

upshifting on the straightaways, then coming to a stop at the end of each straightaway. You may want to use the parking lot aisles for this exercise rather than riding in the spaces.

7a) Practice Using the Gear Selector at a Stop

First, while stopped, practice to single shift between reverse, neutral and first gear. Then practice to:


- Double shift from reverse to first gear
- Double shift from first to reverse gear
- Repeat until you are comfortable.

7b) Upshifting from First into Second Gear

- In the straightaway, accelerate until the engine speed reaches 3000 RPM.
- Press the gear selector forward to shift into second gear. You do not have to release the throttle while shifting.
- Once you are comfortable, if space allows, you can adjust the throttle to increase speed in second gear.

As you approach the end of the straightaway, come to a stop:

- Release the throttle
- Apply brake
- The transmission will downshift automatically as the speed slows. You can also manually downshift by pulling the gear selector towards you.

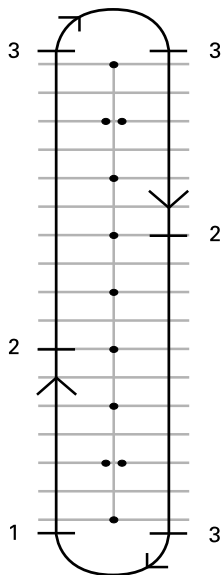

1. Start
2. Shift into second at 25 km/h (16 MPH)
3. Stop

7c) If Space Allows, Practice Downshifting into First While Moving

In the straightaway:

- Pull the gear selector toward you without releasing throttle.
- You will feel more engine braking when you downshift without throttle.

7d) Other Gears

If space allows, you can try shifting into and out of higher gears as well. Follow the same process and shift up or down one gear at a time.

NOTE:

Applying slightly more throttle while downshifting can help the engine rev up to match vehicle speed more quickly and make the downshift smoother. When you do not apply throttle while downshifting, engine braking will slow the vehicle. This can help you decrease speed, but remember that VSS does not control engine braking. If you shift into too low a gear when you are at high speed, the rear tire can skid and you can lose control, spin out, tip or roll over, particularly in a curve.

8) Swerve


Purpose

- Become familiar with the vehicle's handling for quick maneuvers.
- Try different variations of braking and swerving.

Directions

At this point you will need to change your course. Set up your markers as shown in the diagram below. Do not use any fixed or hard, heavy objects as markers for this exercise.

- Enter between the double cones at about 8 km/h (5 MPH) and maintain that speed throughout.
- Steer around the line of cones.
- Exit through the second set of double cones.
- Repeat the exercise multiple times, swerving in both directions.

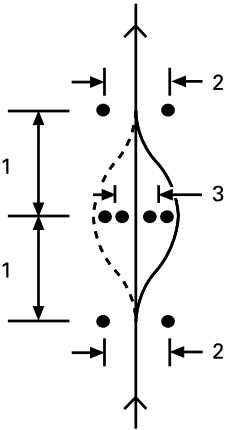

- 1. 6 m (20 ft)
- 2. 3 m (10 ft)
- 3. 2.5 m (8 ft)

Tips for Additional Practice

- You can gradually increase your entry speed (to no more than 13 to 19 km/h (8 to 12 MPH) and try some variations. For example, approach faster and slow before entering the exercise, apply brakes during the swerve, etc.
- A helper can add an element of surprise to the exercise by deciding which direction you should swerve, or if you should come to a stop instead. Have your helper stand at a safe distance (e.g., beyond the end of your practice area). As you reach the first set of cones, the helper can use hand signals to indicate which direction to swerve or for you to stop.
- Practice checking your mirrors and blind spot before you swerve.


9) Operating in Reverse

Purpose

- Become familiar with the vehicle handling and turning radius in reverse.

Directions

- Shift into reverse. See *Operating in Reverse* in *Basic Procedures*.
- Check that the area behind you is clear. Continue to look backwards. Be careful not to strike anything with your front wheels as you back up. Slow and stop by releasing throttle and using brake, just like when operating normally.
- Back for a few feet at a time, stopping in between.
- Keep your speed low and do not back up for long distances.
- After you are comfortable with reverse, back into a parking space as shown in the diagram below.

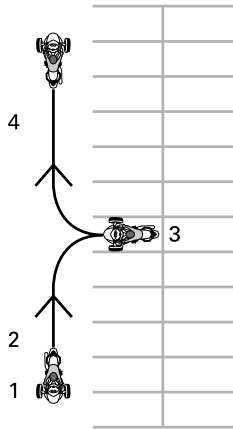

- 1. Start
- 2. Reverse
- 3. Stop
- 4. Forward

Developing Advanced Riding Skills

Once you have mastered basic riding skills, you can begin developing more advanced skills. First, learn the *Street Strategies* covered in the next section. Then you can take the vehicle on the road in relatively low-risk situations.

Start by riding in less challenging situations:

- Short distances

- Good weather
- Low traffic
- Daytime
- Lower speeds
- No passenger.

You can gradually move on to more challenging riding situations as you develop your skills.

STREET STRATEGIES

This section provides some strategies to reduce your risk on the road. Many of these strategies are similar to those used for motorcycles.

This section is based on guidance for motorcyclists given by the Motorcycle Safety Foundation (MSF). However, even experienced motorcyclists should read this section, as some strategies are different for a 3-wheel vehicle.

Plan your Trip

Always check weather conditions before riding the vehicle. Take appropriate gear for any weather you might encounter.

Plan a route and ride in conditions that are appropriate for your skill level.

The vehicle has a 20 l (5.3 gal (liq., US)) fuel tank. When the low fuel indicator light flashes, fill fuel tank as soon as possible. Plan your refueling stops, particularly in unpopulated areas.

Defensive Riding

As with a motorcycle, defensive riding can help you avoid crashes. You need to stay alert at all times. Never stop watching your surroundings, including the area behind you. Always scan for potential hazards, plan ahead, and leave space and time to avoid trouble. Do not assume other motorists will see you or follow the rules of the road.

Following Distance

Always leave at least a two-second following distance between you and the vehicle in front of you when operating under ideal riding conditions. This means that you should pass any fixed point on the road at least two full seconds after the vehicle in front of you.

When conditions make braking distance longer, or visibility is limited, use a longer following distance for a

greater margin of safety. For example, braking distance is longer on slippery road surfaces, down hills, or when carrying more weight, and visibility may be limited in fog, in curves or at night.

Scanning Ahead


In addition to leaving adequate following distance to the next vehicle, scan ahead and plan your path even farther in advance.

Plan your immediate path at least four seconds ahead. Watch this path for hazards, such as anything in the road or anything entering the road.

Scan ahead 12 seconds along your anticipated path to identify potential hazardous situations before they happen. For example, look for intersections where other vehicles may appear or places where pedestrians might enter the road. Be prepared to respond if a hazardous situation develops.

Watch Behind and to the Sides

Vehicles and other hazards can approach from all directions. Constantly be aware of your surroundings. Check your mirrors frequently to see directly behind you. Also do frequent head checks (turn your head to look) to monitor your blind spot.

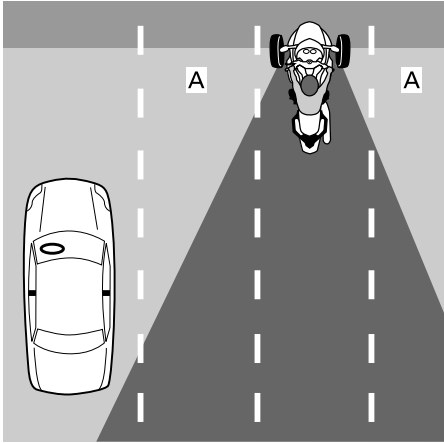

1. Operator's blind spots

When braking, be particularly aware of vehicles behind you that may not be able to stop as quickly than you.

Keep your Eyes Moving

To stay aware of your surroundings, do not fixate on any one thing. Move your eyes constantly to monitor the road, traffic control markings and devices and other vehicles. Look near and far, in all directions.

Anticipate Trouble

Whenever you notice a potential hazard, plan a way to avoid it. This might mean adjusting your speed or lane position, or changing lanes. You should be ready for evasive maneuvers such as swerving and/or braking if something enters your path. Always leave time and space to react to trouble.

Being Visible

Motorists tend not to see smaller vehicles like motorcycles. Therefore you should use strategies to become more visible.

To Be More Visible to Other Motorists

Lighting and Reflectors

Make sure that the headlights, running lights and taillights on your vehicle work properly. Your vehicle is equipped with reflectors on the fenders, sides, and back. Make sure that all reflectors are clean and not broken or missing.

Use your high beams whenever possible, both day and night. Use low beams to avoid blinding other motorists at night or when too much light reflects back, such as in fog.

Signals

Use your turn signals to inform others of your intentions. The vehicle has automatic canceling turn signals, but they may not cancel after shallow turns. Make sure turn signals are off after you have completed your maneuver; leaving them on may confuse other motorists.

When possible, flash your brake lights before slowing and when waiting at intersections, to alert motorists behind you.

You can also use your horn to attempt to alert other motorists of your presence.


Do not assume that other motorists will notice your lights, signals or horn.

Australian Models

Use your hazard warning lights to make yourself visible when needed.

Blind Spots

Avoid riding in the blind spots of other vehicles. Position yourself so that drivers ahead can see you in their mirrors. In some cases, such as when you are following a truck or a bus, you must be farther behind the vehicle in front of you.

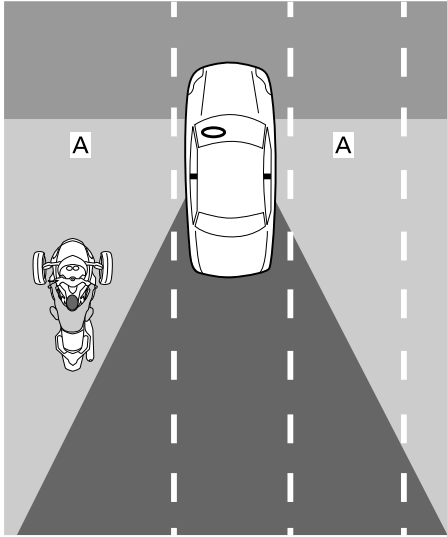

A. Blind spots of other vehicles

Time of Day and Weather

In dim light, such as at night, at dawn or dusk, or in poor weather such as rain or fog, you may be harder to see. Glare at dawn and dusk or very bright sunlight can also make it harder for other motorists to see you.

Clothing

Bright colors or reflective clothing can increase your visibility.

Be Careful Even When Motorists See You


Even when motorists seem to notice you, they may still drive in a way that puts you at risk of a crash. Drive defensively, and do not rely on other motorists to operate their vehicles safely.

Lane Position

Normally, position the vehicle in the center of the lane. This position keeps the front tires in the lane. It also provides distance from vehicles in other lanes, reducing wind from large vehicles and reducing the risk of being struck by vehicles that leave their

lane. This position also keeps your front wheels out of the slippery area in the middle of the lane, helping maintain braking and steering ability. If you are used to driving a car, remember that you are sit in the center of the vehicle, your perspective is different.

You can move to the left or right part of the lane, to avoid hazards, keep distance from other vehicles, or handle curves. You can also move to the left or right part of the lane to get a better view or to be seen by other vehicles. Because of the central seat position and the width of the vehicle, it may be harder to see around traffic, even when you are near the edge of the lane. You may need a greater following distance behind wide or tall vehicles. Avoid putting your wheel outside of the lane to see around traffic. In order for drivers ahead to see you, you must be able to see their mirrors. When you are being followed by a large vehicle, passing vehicles may not be able to see you easily if you are not in the left part of the lane.

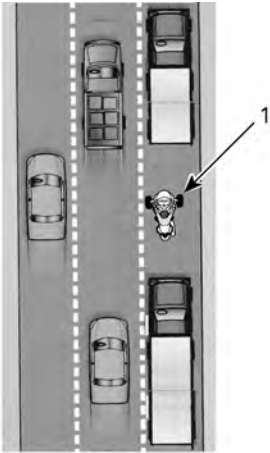

1. Vehicle in left portion of lane

Because the vehicle is wider than a motorcycle, the range of lane positions is smaller. When riding in the left

or right part of the lane be sure that the front wheels stay in the lane.

On multilane roads, choose a lane that is appropriate for your speed in the flow of traffic, and also consider your ability to see and be seen, and possible paths for evasive maneuvers (such as swerving into other lanes or onto the shoulder).

Common Riding Situations

Intersections

Intersections, including small intersections with alleys and driveways, present an additional risk due to the cross traffic. Always watch for traffic in all directions: behind, in front and to the left and right.

When stopping at an intersection, stop in the middle of the lane, even if you are preparing to turn. This can make you more visible and discourage other motorists from trying to drive around you. Watch for vehicles approaching from behind. Flash your brake lights as they approach. Be prepared to move if necessary to avoid a collision.

Lane Changes and Passing

Remember that the vehicle is wider than a motorcycle and needs more lateral space to pass another vehicle. Also remember that the vehicle is less visible than a car, so it is particularly important to signal your lane change well in advance and check your mirrors and blind spots. Be sure to turn off your turn signal after changing lanes; a lane change will not turn the handlebar far enough to automatically cancel the signal.

Never drive on the line between two lanes of traffic (split lanes). The vehicle is too wide.

Never drive on the shoulder to pass vehicles. If you put one wheel off the road, you can lose control.

Turns

Remember to slow, look, and steer through turns.

- **Slow:** Reduce speed as needed before entering a turn by rolling off the throttle and/or using the brakes. Enter the turn at a speed that you can maintain throughout the turn.

Although the vehicle is better able to brake while turning than a motorcycle, it is still important to slow down before you enter a turn or curve rather than braking in the turn. Braking and turning both require traction. The more traction you use for braking, the less there is available for turning at the same time.

When you take a turn or curve too fast, you may notice the inside front wheel lifting off the pavement and feel and hear VSS cutting back engine power. While VSS can help you maintain control, it is still possible to spin or roll over if you turn too hard and fast.


- **Look:** Search through the entire turn and keep your eyes moving. Evaluate the entire turn as soon as possible — surface characteristics, sharpness of the turn, and overall traffic conditions — so you have time to make decisions about speed and position. Sometimes turning your head in the direction of the turn helps to keep a good visual picture.
- **Steer:** Turn the handlebar to steer the vehicle in the direction of the turn. This vehicle is not like a motorcycle, so it does not counter-steer, and the vehicle does not lean. Remember, you will experience the lateral force generated by turning, so you may need to shift your body weight to the inside of the turn to keep a comfortable posture on the vehicle. You will need to exert more force to turn the

handlebar of your vehicle than is needed to turn a motorcycle.

Curves

Because the vehicle is narrower than a car, you can move from side to side in the lane in curves to straighten your path of travel. But the vehicle is wider than a motorcycle, so less lateral movement is possible, and it is important to make sure that your front tires do not leave the lane.

For typical curves, an outside, inside, outside path is best.

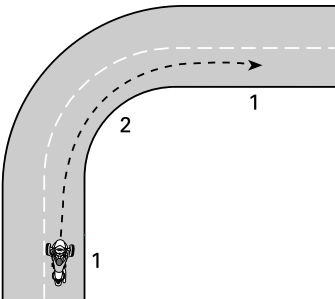

PATH FOR TYPICAL CURVES

1. Outside
2. Inside (at the apex)

Hills

When stopped, the vehicle can roll regardless of what gear it is in. The clutch is always disengaged when the vehicle is stopped, so the transmission will not hold the vehicle in place. Hold the brake pedal when stopped on an incline. To start while on an incline, hold the brake pedal as you increase throttle. Release the brake pedal as you feel the clutch engage.

Night Riding

In addition to using your lights and signals to be seen by other motorists, consider your own ability to see at night. Use high beams when appropriate. Avoid overriding your headlight (riding so fast that you cannot see as far as your stopping distance). You


can also use other vehicles headlights to see the road ahead.

Do not use tinted or colored visors or lenses at night, and be particularly careful that your visor does not have scratches or smudges.

Group Riding

Ride single file only. Never share lanes, even with a motorcycle.

When riding with motorcycles, maintain proper following distance from the motorcycle in front of you, even if they are riding to one side of the lane. In curves, do not try to follow the path of motorcycles. Motorcycles can move farther to the edges of the lane in curves — if you follow them exactly, your front wheel can leave the lane. Motorcycles may be able to take curves faster than this vehicle. Do not try to match their speed.

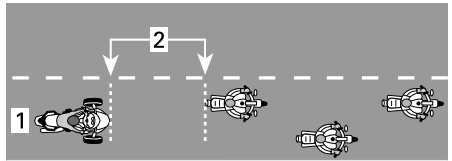

GROUP RIDING POSITION

1. Center of lane
2. Distance of 2 seconds

Particularly on curvy roads, the riders might become tired sooner than motorcyclists. Do not push yourself to keep up with motorcycles; stop if you are tired.

Road Conditions and Hazards

Ice, Snow and Slush

Do not ride on ice, snow or slush. Even with VSS, there will not be enough traction to maintain control on these slippery surfaces. This vehicle is more likely than a car to spin out of control in slippery surfaces.

Gravel, Dirt and Sand

On gravel, dirt, or sand-covered roads, use extra caution and reduce your speed, particularly for curves. These surfaces do not provide as much traction as paved surfaces and you can lose control, even with VSS.

Wet Pavement and Puddles

There is normally enough traction to maintain control on pavement that is moist or wet, as long as there is not a layer of water on top of the pavement (like a puddle or flowing water on the road). As with other vehicles, the vehicle can hydroplane if you drive too fast over water that has accumulated on the road, but hydroplaning occurs at lower speeds than with most cars or motorcycles. You are more likely to hydroplane in deeper water. Watch for splashing or spraying when other vehicles go through water as an indicator of depth.

When hydroplaning occurs, one or more wheels rise up on a layer of water, losing contact with the road. If this happens to the rear wheel, you may feel it slide sideways. Hydroplaning wheels do not have the traction necessary to control the vehicle. You can lose control and spin out, and the VSS cannot keep you in control.

Avoid large water puddles or water streams, and slow down or pull off the road during heavy rains. If you must pass through water, slow down as much as possible before you reach it.

After passing through water, test your brakes. Apply them several times if necessary to let friction dry the brake pads.

Properly maintained tires reduce the risk of hydroplaning. Always maintain recommended tire pressure:

Refer to *Tire Pressure* in *Maintenance Procedures* section

NOTE:

The pressure difference between the left and right front tires should not exceed 3.4 kPa (.5 lbf/in²).

Immediately replace any tire that shows the maximum tread wear indicator to minimize risk of hydroplaning.

The middle of a lane can be particularly slick in the first few minutes of rain, as oil and dirt combine with the water. After more rain, water can accumulate in ruts in worn pavement. Avoid both of these low traction areas. When possible, keep your front tires in areas with the best traction.

Off-Road Use

Do not use your vehicle off road. The vehicle cannot handle the rough, low-traction, uneven surfaces that you may encounter in off-road riding. You could easily get stuck, lose control or roll over. Also, it may be illegal for off-road use in certain areas.

Obstacles, Holes and Bumps

Whenever possible, avoid riding over obstacles, holes and bumps. If you must ride over them, slow down as much as possible before you get there, then release the brake as you go over.

For wide obstacles or bumps, approach straight on if possible, so that both front tires go over at the same time. When going over an obstacle, bump or hole with both front wheels, riders should stand up slightly on the pegs and use legs to absorb the shock. Be prepared for the rear wheel to strike the obstacle.

For narrower obstacles, bumps or holes, it is better to ride over it with the rear tire. If you ride over them with a front tire, maintain a firm grip on the handlebar, take care not to accidentally applying the throttle and be

prepared to correct your trajectory if necessary.

If you strike a large enough obstacle, bump or hole, the impact can make the vehicle jump and strike you, eject riders, make you lose control, spin or roll over.

If you can't come to a complete stop in time to avoid an obstacle, you can swerve to avoid it. You can swerve and brake at the same time if necessary.

If you encounter a large animal in the road, like a deer, it is best to stop before reaching it and wait until the animal leaves, or go past slowly.

If a dog chases you, a good strategy is to slow down and downshift as the dog approaches, then accelerate away as you get closer to where the dog would intercept you.

On-Road Emergencies

A vehicle malfunction or an unexpected situation can occur any time during a ride. A well-maintained vehicle can help reduce the risk of malfunction, but you should still be prepared for an emergency.

- Always have the Operator's Guide in the vehicle.
- When stopping on the road, follow these precautions:
 - If the road has paved shoulders, signal your intention to pull off the highway, pull off at near traffic speed, then slow down to a complete stop.
 - If the shoulder is unpaved, signal your intention to pull off the roadway, slow down to a safe speed before pulling off the paved roadway and stop the vehicle.
 - Let the turn signal activated to increase your visibility.

- On models equipped with hazard warning lights, activate them to increase your visibility.
- If you have cellular phone or other communication device, fully charge it before long rides.
- If you are involved in an accident, BRP strongly recommends that you have your vehicle transported (see *Transporting the Vehicle*) to the nearest Can-Am On-Road dealer to have it thoroughly inspected for safety before riding again.

Tire Failure

If a tire failure or a blowout suddenly occurs, firmly grip the handlebar, gradually slow down and carefully steer to a safe place to stop. Avoid hard braking, downshifting, or sharp steering. If a front tire fails, the vehicle may tend to pull in the direction of the failed tire, so you will need to maintain a firm grip on the handlebar to control your direction. Refer to *Road Side Repairs* section for instructions on tire repair.

CARRYING A PASSENGER OR CARGO

Weight Limits

Do not exceed the weight limits for riders and cargo.

Weight Limits		
Vehicle load limit (including operator, passenger, cargo and added accessories)	F3 Limited (Austrian models)	170 kg (375 lb)
	F3 Limited (all other models)	209 kg (461 lb)
	F3-S F3-T	199 kg (438 lb)
Front storage compartment	All models	6.8 kg (15 lb)
Each saddlebag	F3-T F3 Limited	6.8 kg (15 lb)
Top Storage Compartment (with top rack installed)	F3 Limited Special Edition	6.8 kg (15 lb)
Top Storage Compartment (without top rack)	F3 Limited	9 kg (20 lb)

Operating with Extra Weight

Carrying a passenger or heavy cargo affects the way the vehicle handles because of the greater weight, and because the weight distribution will be different.

1. You will not be able to accelerate as quickly. Allow more time and space for passing.
2. You will not be able to stop as quickly. Use a longer following distance from the vehicle in front of you, at least three seconds. Use an even longer distance if riding conditions are not ideal (e.g., low visibility, poor road surface).
3. You will not be able to turn as sharply or at as high a speed. Slow down more than usual before turning and avoid sharp turns.
4. The vehicle may be less stable. There is a greater risk of tipping or rolling during extreme maneuvers with weight that is higher or farther to the rear (like a passenger).

NOTE:

VSS effectiveness is decreased when operating above maximum allowed load.

Carrying a Passenger

This section applies for all F3 Models including the S models if a complete passenger kit from BRP is installed.

This vehicle is designed for only one passenger, seated behind the operator. Never carry multiple passengers.

Do not carry a passenger until you have experience riding alone in a variety of conditions and can proficiently handle the vehicle.

The passenger must be sober, alert, able to reach the passenger footrests and handholds, maintain balance and hold on in sudden maneuvers, and not distract the operator.

WARNING


Never carry a passenger if passenger handles are not installed on vehicle.

Be sure the passenger is wearing appropriate protective gear. The passenger should wear all of the protective gear recommended for the operator, particularly a helmet. A full-face helmet is recommended; in a sudden stop, the passenger's face can strike the back of the operator's helmet.

Keep the brakes applied and the transmission in neutral until the passenger is in riding position.

Instruct the passenger on how to ride before starting out. Have the passenger follow these rules:

1. Maintain proper riding position.
2. Hold the passenger handholds and keep feet on the passenger footrests at all times, even with the accessory backrest. The passenger should not hold on to the operator as the operator may not be able to withstand the lateral force generated by both. Different gripping positions on the handholds may be more comfortable for different maneuvers. (e.g., one hand at the front corner of and one hand at the opposite back corner for turns, both hands further forward or back for other situations).

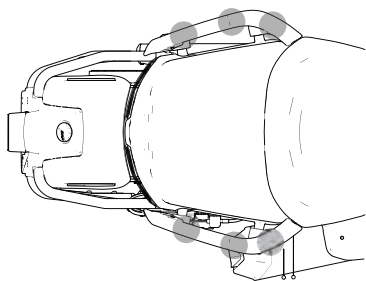

DIFFERENT GRIPPING POSITIONS ON THE HANDHOLDS

NOTICE

Never use handholds to tie down, lift or transport vehicle.

3. Stay clear of the exhaust pipe, the rear wheel and the drive belt.
4. Avoid turning around or leaning except to keep balance in a turn. In an unexpected maneuver, a passenger who is not in the normal riding position is more likely to fall off.
5. Watch the road and respond to upcoming road conditions. Lean into curves as needed to resist any sideways force. When crossing an obstacle, hole or bump, rise slightly off the seat without locking your elbows.
6. Avoid abrupt acceleration, braking and turns, especially with inexperienced passengers. Sudden, unexpected maneuvers can make the passenger fall off.

Where to Store Cargo

You can carry cargo in the front storage compartment, glove box, top storage compartment and rear saddlebags. Do not carry cargo in any other location unless the vehicle is equipped with approved BRP accessories.

WARNING

Never tie down cargo onto passenger seat, as this will depress the PRS (Pillion Rider Switch). This effectively changes the VSS calibration to the 2-up calibration, so the VSS interventions might be more intrusive and stronger than expected if the driver is alone with only cargo on the passenger seat.

Storage Compartment

The front storage compartment and rear saddlebags have room to store light objects. Do not put more than 6.8 kg (15 lb) in each storage compartment, even if the items fit. Never store flammable items, such as fuel, in the front storage compartment.

Make sure the front storage compartment latch and saddlebags covers are secure before riding.

Towing a Trailer

IMPORTANT

Only T and Limited models are built to tow a trailer

The Vehicle Stability System (VSS) on this vehicle incorporates a program that allows to tow a BRP trailer while maintaining appropriate vehicle stability control.

Use only a BRP trailer designed specifically for this vehicle or a BRP approved equivalent. This is important to ensure the trailer and the vehicle remain stable during normal operation and it does not interfere with the vehicle stability system.

NOTICE

The use of a non-recommended wiring harness may lead to vehicle electrical system failure.

WARNING

The use of any other trailer could damage the vehicle or interfere with the proper operation of the vehicle stability system. It is not recommended to use the cruise control when towing a trailer. Towing a trailer affects the way the vehicle handles due to the greater weight and the different weight distribution.

- Allow more time and space for passing.
- Allow a greater distance for braking.
- Use a longer following distance from the vehicle in front of you.
- Reduce your speed and slow down more than usual before turning and avoid sharp turns.
- There is a greater risk of tipping or rolling during extreme maneuvers.

Crosswinds and air turbulence caused when crossing or being passed by others can disrupt the steering and make the trailer to sway. To minimize the effect, keep a constant speed and do not make quick steering or braking corrections.

Reduce your speed before entering in a curve.

When cornering, achieve the turn on a larger radius. It takes more space to turn with a trailer.

Try to anticipate the riding ahead to avoid having to backup with a trailer.

Always move slowly when backing up. Ask someone to guide you when possible. Practice in an open area at the

first opportunity. Refer to *Required Riding Skills and Practice Exercises*.

When possible, avoid swerving, twist and turns, sharp and abrupt turns as well as sudden braking. This could cause the trailer to jackknife or to turn over. It is easier to unstabilize an empty trailer. When accelerating, it is normal to shift at a higher RPM to avoid loading excessively the engine.

NOTICE

Avoid spinning the rear wheel. Rocks or pebbles could be projected on the trailer and damage it.

Hitch Load Limits

WARNING

Never add cargo on the trailer cover as it will increase the risk of tipping over. All cargo must be stored and secured inside the trailer.

Load limits must be observed with the appropriate towing equipment.

Towing Specifications

Maximum weight on trailer tongue	18 kg (40 lb)
Maximum towed weight (trailer and cargo)	182 kg (400 lb)

NOTE:

For information about the maximum cargo that can be loaded in trailer, refer to the trailer manufacturer's information.



1. Maximum tongue weight
2. Maximum towed weight

The weight at the tongue applies when the trailer is loaded. A scale can be used to measure the weight at the tongue when it is not latched to the vehicle. If the trailer is not fully loaded, place cargo in the front part of the trailer then, if the weight at the tongue is reached, place the remaining cargo at the rear in the trailer. The weight distribution in the trailer affects the weight at the tongue. Redistribute the weight in the trailer to meet the weight at the tongue specification. Too much weight at the tongue reduces steering control. Too little weight at the tongue

can render the trailer unstable and make it sway.

WARNING

Exceeding the maximum towed weight can seriously affect handling and performance of the vehicle. The vehicle handling, stability, acceleration and braking distance are affected when towing a trailer. Correct loading and weight distribution are important. Never overload, tow or carry cargo improperly. Always ensure the cargo is safely secured and properly distributed in the trailer before operating the vehicle. Always secure cargo as low as possible in the trailer to reduce the effect of a higher center of gravity. Failure to follow the recommendations here could cause affect the vehicle handling which could lead to the vehicle loss of control.

the trailer and to the hitch, and that they cross under the tongue. Leave enough slack in cables to allow the trailer to turn corners. When trailer is in straight line with the vehicle, ensure chains will not drag on the ground.

NOTICE

Exceeding the maximum towed weight can damage vehicle or trailer. Avoid transporting heavy parts with sharp edges that could damage the trailer. Place the cargo so that it does not shift while the trailer is being towed.

Hitch

Use only a BRP hitch or a BRP approved equivalent. The BRP hitch properly fits the vehicle swing arm and is securely bolted to the wheel axle.

NOTICE

The use of a non-approved hitch may lead to rear swing arm failure.

Safety Cables

Always use safety cables when towing a trailer. Ensure they are secured to

KNOWLEDGE SELF-TEST

The following provides a sample of information that you should have learned by reading this guide. It does not include all of the important information, but should give you an idea of whether you have a general understanding of the vehicle and its operation.

See the *Answers* on the page following the questionnaire.

Questionnaire

1. If you need to stop quickly, apply the brakes and the parking brake.

True

False

2. A pre-ride inspection should be performed once a week.

True

False

3. VSS allows you to use the vehicle in any kind of weather.

True

False

4. You should only replace the tires with those approved by BRP obtained from an authorized Can-Am On-Road dealer.

True

False

5. It is important for the passenger to be alert and sober.

True

False

6. Name six items of protective gear that can reduce your risk of injury.

1) _____

2) _____

3) _____

4) _____

5) _____

6) _____

7. Protective gear is important for preventing and reducing injuries, keeping you comfortable, and providing protection against the elements.

True

False

8. Which of the following is not one of the vehicle driving controls?
 - a. Handlebar
 - b. Twist throttle
 - c. Front brake lever
9. You should leave your low beam lights on during the day for added visibility.

TrueFalse
10. You should normally position the vehicle in the center of the lane.

TrueFalse
11. Unlike a typical motorcycle, you should make it common practice to brake and turn at the same time.

TrueFalse
12. Under normal conditions, the following distance should be at least _____.
 - a. 1 second
 - b. 2 seconds
 - c. 3 seconds
13. You should never carry flammable liquids such as gasoline on the vehicle or in a storage compartment, even if they are in approved containers.

TrueFalse
14. List 5 ways of being more noticeable to other drivers.
 - 1) _____
 - 2) _____
 - 3) _____
 - 4) _____
 - 5) _____
15. When braking on surfaces with less than ideal traction, you should pump the brakes to help maintain control of the vehicle.

TrueFalse

16. The vehicle's maximum load includes: the operator, the passenger, the cargo and all accessories

True

False
17. The vehicle can safely tow a trailer.

True

False
18. When the vehicle configuration allows it, the passenger should hold the operator firmly.

True

False
19. Riding a 3-wheel vehicle is as safe as riding in a car.

True

False
20. ABS allows you to press the brake pedal hard without locking the wheels.

True

False

Answers

1. False

To stop quickly, press the brake pedal only. Never use the parking brake while the vehicle is moving.

2. False

You should do a pre-ride inspection every time you ride.

3. False

The VSS can not help you maintain control if there is ice, snow, slush or enough water to cause hydroplaning. The VSS performance may also be reduced when tires adherence decreases due to cold temperatures or when riding on unpaved road..

4. True

5. True

6. 1) Helmet

2) Eye and face protection

3) Jacket with long sleeves

4) Gloves

5) Long pants

6) Closed-toe footwear, preferably over the ankle.

7. True

8. c. Front brake lever

The vehicle does not have a front brake lever.

9. False

You should use your high beams during the day.

10. True

11. False

You can brake and turn at the same time if you need to, but generally it is better to brake before the turn.

12. b. 2 seconds

Under normal conditions, following distance should be at least two seconds.

13. True

- 14.** 1) Make sure your lights and reflectors are clean.
2) Use your high beams whenever possible.
3) Use your turn signals.
4) Flash your brake lights before slowing.
5) Use your emergency flashers as needed.
6) Use your horn to alert others of your presence.
7) Avoid riding in blind spots.
8) Wear bright colors and reflective clothing.
- 15. False**
You should press and hold the brake pedal, not pump. The vehicle is equipped with ABS, which keeps the wheels from locking.
- 16. True**
- 17. False**
- 18. False**
The passenger should always hold on to the handholds.
- 19. False**
In cars and trucks, the structure of the vehicle provides protection. In addition, passengers can protect themselves by wearing seat belts. You should expect that riding a 3-wheel vehicle is much riskier than riding in a car. The risk of injury is more like the one for a motorcycle.
- 20. True**

SAFETY INFORMATION ON THE VEHICLE

This vehicle comes with important safety messages.

Read and understand the safety messages into the touchscreen as well as the hang tag and all safety labels installed on the vehicle.

Any person who rides this vehicle should read and understand this information on the vehicle before riding.

NOTE:

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

Important Pre-Ride Safety Message

An important safety message is displayed in the touchscreen display, each time the vehicle is ready to start.

Read and understand it carefully.

To see the entire message, scroll it on the screen using your finger.

Pressing the X in the right upper corner will close the message but return to the legal message.

WARNING

This Can-Am On-Road product is a different type of vehicle. It requires special skills and knowledge.

Learn how this product is different. Read the operator's guide and watch the safety video using the QR code link or visit Can-Am On-Road web site. Complete a training course (if available), practice, become proficient with the controls, and get a proper license.

- The Vehicle Stability System (VSS) cannot stop you from losing control, flipping over, or falling off if you exceed this vehicle's limits.
- Do not ride on ice, snow, or off road. Avoid puddles and running water.
- This type of vehicle can hydroplane on water and slip on gravel, dirt and sand covered roads. If you must go through these road conditions, slow down.

Wear a helmet and riding gear.

- With this type of vehicle, riders are exposed to more road risks than in a car.
- Even skilled operators can be struck by other vehicles or lose control.
- This vehicle will not protect you in a crash.

Instruct the passenger:

- Always hold handholds and keep feet on pegs.
- Watch the road. Lean into curves. Brace for bumps.

Always keep in mind:

- Brake with the foot pedal.
- Steer in the direction of a turn; do not countersteer.
- Keep all wheels in your lane, always ride in a single file, and do not split lanes.
- Perform Pre-ride Inspection.

Twist the throttle handle forward (away from you) to enable the starter button.

Hang Tag

WARNING

This Can-Am On-Road is a different type of vehicle - It requires special skills and knowledge. Learn how this product is different.

Read the operator's guide and watch the safety video using the QR code link or visit Can-Am On-Road web site.

Complete a training course (if available), **practice**, become proficient with the controls, and get a proper licence.

Refer to the Safety Card before riding.



Always wear a helmet and riding gear.

With this type of vehicle, riders are exposed to more road risks than in a car. Even skilled operators can be struck by other vehicles or lose control. This vehicle will not protect you in a crash.

Handling limits and road conditions

The Vehicle Stability System (VSS) cannot stop you from losing control, flipping over, or falling off if you exceed this vehicle's limits. Know the limits for different road conditions. Do not ride on ice, snow, or off road. Avoid puddles and running water. This type of vehicle can hydroplane on water and slip on gravel, dirt and sand covered roads. If you must go through these road conditions, slow down.

This hangtag may only be removed by the customer.



704907713

AVERTISSEMENT

Ce produit routier est différent. Il nécessite des habiletés et des connaissances spéciales. Sachez ce qui distingue ce produit Can-Am des autres véhicules.

Lisez le guide du conducteur et visionnez la vidéo de sécurité via le lien QR code ou en visitant le site internet Can-Am On-Road.

Suivez une formation (si disponible), **exercez-vous**, apprenez à maîtriser les commandes et obtenez le permis approprié.

Consultez la carte de sécurité avant de conduire le véhicule.



Portez toujours un casque et des vêtements appropriés.

Sur ce type de véhicule, les utilisateurs sont exposés à davantage de risques routiers qu'en automobile. Même un conducteur habile peut être frappé par un autre véhicule ou perdre le contrôle. Ce véhicule ne vous protégera pas en cas de collision.

Limites de manoeuvrabilité et conditions routières

Le système de stabilité du véhicule (VSS) ne peut pas vous empêcher de perdre le contrôle, de faire des tonneaux ou de tomber si vous dépassez les limites du véhicule. Apprenez à connaître ces limites dans différentes conditions routières. Ne conduisez pas sur la glace, sur la neige ou hors route. Évitez les flaques et les ruissellements d'eau. Ce type de véhicule peut faire de l'aquaplanage sur les chaussées détrempées et déraiser sur les routes recouvertes de gravier, de terre ou de sable. Si vous devez conduire dans ces conditions, ralentissez. Seul le client doit enlever cette étiquette.

704907713

Safety Labels

These labels are affixed to the vehicle for the safety of the operator, passenger (2-UP) or bystanders

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. If missing or damaged, they can be replaced free of charge. See an authorized Can-Am On-Road dealer.

NOTE:

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

Tires Pressure and Maximum Load

Located inside the front storage compartment

North America

S and T
models



**TIRE AND LOADING INFORMATION /
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT**

SEATING CAPACITY / NOMBRE DE PLACES	TOTAL	2	FRONT AVANT	1	REAR ARRIÈRE	1
The combined weight of occupants and cargo should never exceed 199 kg or 438 lb Le poids total des occupants et du chargement ne doit jamais dépasser 199 kg ou 438 lb						



F3 C/U 10616

TIRE / PNEU	SIZE/ DIMENSION	COLD TIRE PRESSURE/ PRESSION PNEUS À FROID	RIM SIZE/ DIMENSION JANTE
FRONT/AVANT	K165/55R15 69H	103 kPa / 15 psi	15 x 5 in
REAR/ARRIÈRE	K225/50R15 84H	193 kPa / 28 psi	15 x 7 in
SPARE / SECOURS	NONE / AUCUN	NONE / AUCUN	NONE/AUCUN



Limited
models



**TIRE AND LOADING INFORMATION /
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT**


SEATING CAPACITY / NOMBRE DE PLACES	TOTAL	2	FRONT AVANT	1	REAR ARRIÈRE	1
The combined weight of occupants and cargo should never exceed 209 kg or 460 lb Le poids total des occupants et du chargement ne doit jamais dépasser 209 kg ou 460 lb						



F3 LTD C/U 10619

TIRE / PNEU	SIZE/ DIMENSION	COLD TIRE PRESSURE/ PRESSION PNEUS À FROID	RIM SIZE/ DIMENSION JANTE
FRONT/AVANT	K165/55R15 69H	103 kPa / 15 psi	15 x 5 in
REAR/ARRIÈRE	K225/50R15 84H	193 kPa / 28 psi	15 x 7 in
SPARE / SECOURS	NONE / AUCUN	NONE / AUCUN	NONE/AUCUN



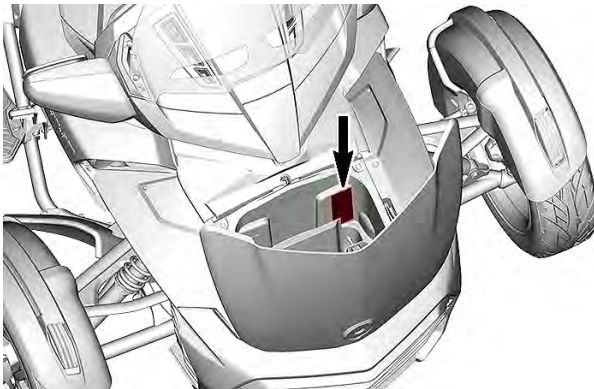

Carrying Passenger


Under passenger seat - Limited model shown

⚠ WARNING

To reduce the risks of severe injury or death.

- Never carry a passenger without lateral handgrips fixed on vehicle.
- Passenger should always hold handholds while riding.

6121

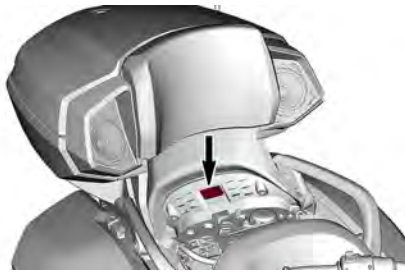

Checking Engine Oil Level


Located under the RH lateral service cover

CAUTION

**ENGINE OIL AND CERTAIN COMPONENTS IN THE ENGINE
COMPARTMENT MAY BE HOT.
DIRECT CONTACT MAY RESULT IN SKIN BURNS.**


Checking Engine Oil Level:

- **Make sure engine is at operating temperature.**
- For procedure refer to the operator's guide.
- Ride at least 15 km (9 miles).
- Can-Am Spyder must be on a level surface.
- Let engine idle for 10 minutes.
- Stop engine.
- Take measurement within 2 minutes after the engine stop.
- Dipstick must be screwed in completely before checking oil level.
- Use XPS 4-stroke 5W40 synthetic oil or equivalent motorcycle oil.

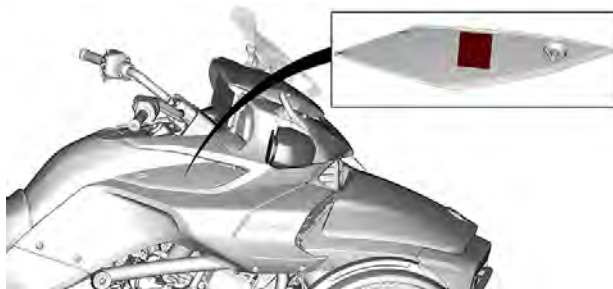

Coolant Hot - Do Not Open

Located underneath front service cover

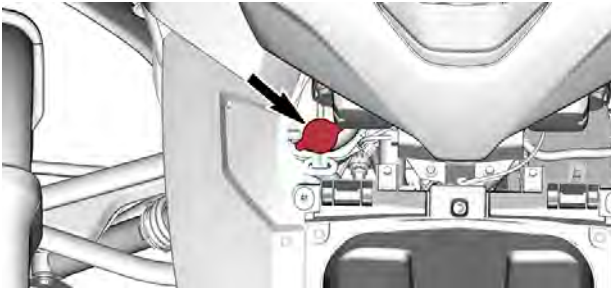


Brake Fluid - Clean and Refill

Located under RH lateral service cover

**WARNING**

Clean filler cap before removing.
Use only DOT 4 brake fluid from
a sealed container.

704903119

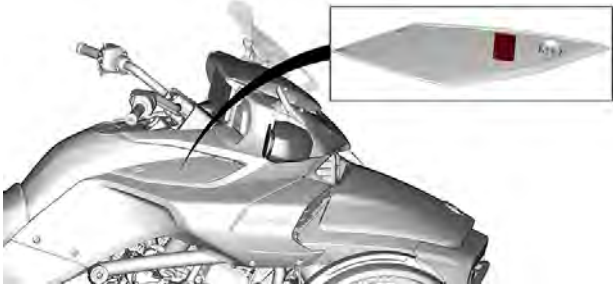

Vehicle Cleaning

Located inside the back of the front service compartment cover

NOTICE

-Matt finish paint needs special care to maintain its appearance.

See operator's guide

-PVD chrome wheel should be washed with water and a mild soap. Do not polish, use acid based or abrasive chrome cleaner on the PVD chrome wheel.


-Do not clean windshield with alkaline or acid cleaner, gasoline or solvent to avoid windshield damage.

See operator's guide.



Patents :

www.brp.com/en/about-brp/patents.html

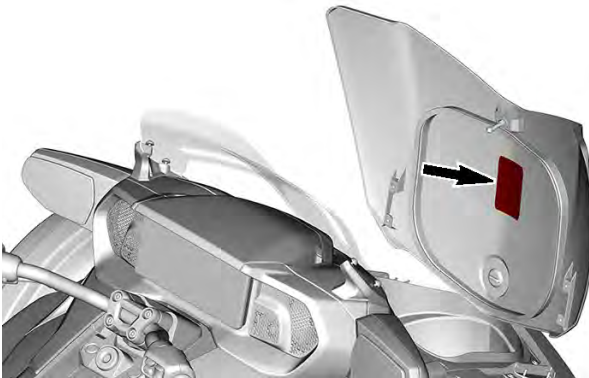

Top Storage Compartment Load

Located inside the back of the top storage compartment cover

**WARNING**

5946

DO NOT OVERLOAD:	
Without top rack	
Maximum case load.....	9 kg (20 lb)
With top rack installed	
Maximum case + top rack load.....	6.8 kg (15 lb)



Rear Suspension Pressure

Located underneath the passenger seat - T and Limited models

**WARNING**

MINIMUM PRESSURE 70 kPa / 10 Psi / 0.7 bar
DO NOT EXCEED RECOMMENDED PRESSURE BY 70 kPa / 10 Psi / 0.70 bar

LOAD		(PASSENGER + CARGO) Kg / Lb					5966
		0	45/100	70/150	90/200	115/250	
DRIVER	Kg/Lb	kPa/Psi/bar					
	70/150	105/15/1.05	240/35/2.40	380/55/3.80	415/60/4.15	515/75/5.15	
	90/200	205/30/2.05	345/50/3.45	415/60/4.15	480/70/4.80		
	115/250	275/40/2.75	415/60/4.15	480/70/4.80			



Side Storage Compartment Load

Located inside each side compartment cover




WARNING

DO NOT OVERLOAD

6.8 kg (15 lb)

LOAD LIMIT

5122A

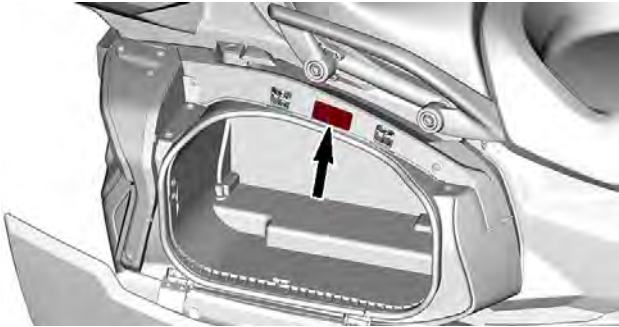

Front Storage Compartment Load

Located inside the front storage compartment




WARNING

DO NOT OVERLOAD

6.8 kg (15 lb)

LOAD LIMIT

5122A

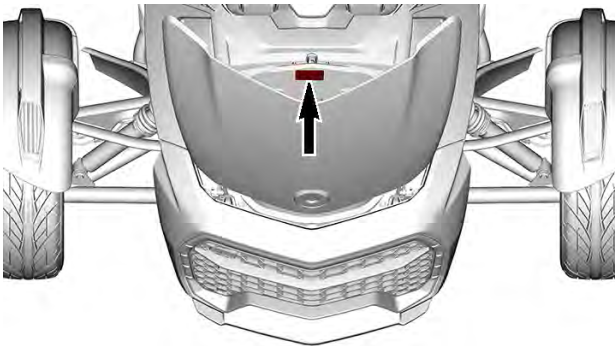


Passenger Seat/Mono Seat Cowl Retaining Lanyard

Located under the passenger seat or mono seat cowl.



**WARNING**

Part detachment could result in a road hazard. To avoid a potential road hazard, always attach tether cord to the part that covers this compartment.

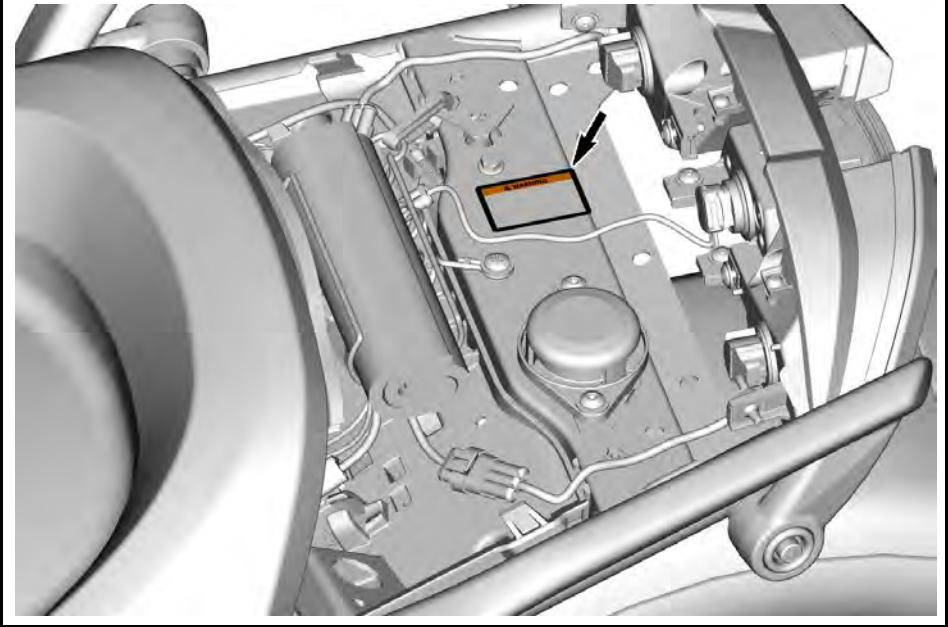

Shifting Pattern (Japanese Model)

This label is installed by the dealer to the right of the left multifunction switch.

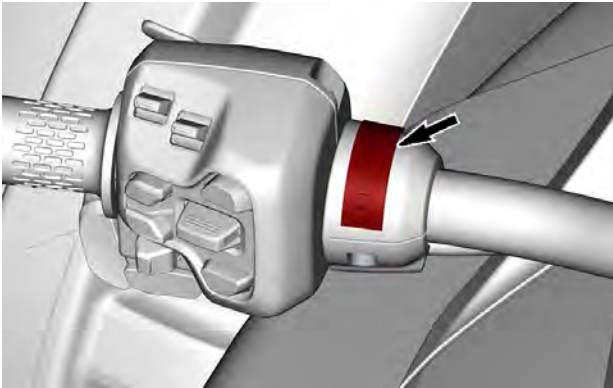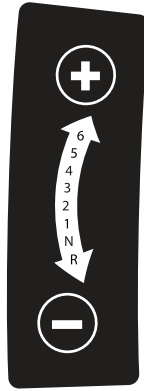

REPORTING SAFETY DEFECTS

Your safety is very important to Bombardier Recreational Products Inc. (BRP). If you have any concerns you should immediately contact BRP customer service.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the following authorities in addition to notifying Bombardier Recreational Products Inc.:

- In the USA, the National Highway Traffic Safety Administration (NHTSA)
- In Canada, Transport Canada
- In other countries, the competent authorities.

If any of these authorities receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, these authorities cannot become involved in any individual problems between you, your dealer or Bombardier Recreational Products Inc.

To contact NHTSA:



888-327-4236



888-275-9171 (TTY)



National Highway Traffic Safety Administration
1200 New Jersey Avenue, SE
Washington, DC 20590



[HTTPS://WWW.NHTSA.GOV/](https://www.nhtsa.gov/)

To contact Transport Canada:



819-420-4300 (Gatineau-Ottawa area or internationally)
Toll free : 1 800-333-0510 (in Canada)



Transport Canada
330 Sparks Street
Ottawa, ON
K1A 0N5



[HTTPS://TC.CANADA.CA/](https://tc.canada.ca/)

This page is intentionally blank

PRE-RIDE INSPECTION

PRE-RIDE CHECKLIST

We encourage you to have an Annual Safety Inspection of your vehicle. Please contact an authorized BRP dealer for further details. Though not required, it is recommended that an authorized BRP On-Road dealer performs the preseason preparation of your vehicle. Each visit to your authorized BRP dealer is a great opportunity for your dealer to verify if your vehicle is included in any warranty campaign. We also urge you to visit your authorized BRP On-Road dealer in a timely manner if you become aware of any safety related campaigns.

Always lock lateral service covers back in position.

WARNING

Perform a pre-ride inspection before each ride to detect potential problems during operation. The pre-ride inspection can help you monitor wear and deterioration before they become a problem. Correct any problems that you discover to reduce the risk of a breakdown or crash. See an authorized Can-Am On-Road dealer as necessary.

Before Starting the Vehicle, Inspect the Following:

Item	Procedure	
Tires	Look for damage. Inspect inflation and tread wear. Refer to <i>Maintenance Procedures</i> .	
Wheels and lug nuts	Look for damage. Twist each front wheel lug nut by hand to be sure it is not loose. Be sure the rear wheel axle nut is in place.	
Drive belt	Look for fraying, cuts, punctures and missing teeth. Verify alignment. For additional information, refer to <i>Maintenance Procedures</i>	
Leaks	Look under the vehicle for any leaks.	
All Storage compartment covers	Pull to check that it is properly latched.	
Mirrors	Clean and adjust: (see <i>Mirrors</i> in <i>Equipment</i> .	
Brake pedal	Press and make sure you feel firm resistance. Pedal must fully return when released.	
Throttle handle	Twist several times. Be sure it operates freely and returns to idle position when released.	
Gearshift selector	Be sure gearshift selector operates normally in both directions and returns to center when released.	

Item	Procedure	
Weight	Ensure that total load on the vehicle (including operator, passenger, cargo and added accessories) does not exceed recommended load as indicate on the <i>Tire Pressure and Maximum Load</i> label.	
Pneumatic suspension (T models)	Inspect inflation, refer to <i>Basic Procedures</i> .	

Turn Ignition Key to the ON Position:

Item	Procedure	
Multifunction gauge	Check the gauges, indicators, messages and the fuel level	
Lights	Check operation of headlights, taillight, brake light, turn signals and hazard warning lights.	
Horn	Check operation.	
Steering	Start engine and verify that steering operates freely.	
Engine stop switch	Check that the engine stop switch is working properly.	
Parking brake	Start engine, release parking brake and ensure brake indicator lamp is off on the multifunction gauge.	
Brake	Drive a short distance forward slowly then apply brake to test.	

This page is intentionally blank

MAINTENANCE

MAINTENANCE SCHEDULE

Maintenance is very important for keeping your vehicle in safe operating condition.

The vehicle should be serviced as per the maintenance schedule.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

Perform periodic checks and follow the maintenance schedule. **The maintenance schedule does not exempt the pre-ride inspection.**

WARNING

Failure to properly maintain the vehicle according to the maintenance schedule and procedures can make it unsafe to operate.

EPA Regulation - Canadian and USA Vehicles

A repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems. These instructions do not require components or service by BRP or authorized Can-Am On-Road dealers.

Although an authorized Can-Am On-Road dealer has an in-depth technical knowledge and tools to service your vehicle, the emission-related warranty is not conditioned on the use of an authorized Can-Am On-Road dealer or any other establishment with which BRP has a commercial relationship.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

For emission-related warranty claims, BRP is limiting the diagnosis and repair of emission-related parts to the authorized Can-Am On-Road dealers. For more information, please refer to the *US EPA Emissions Performance Warranty* contained in the *Warranty* section.

You must follow the instructions for fuel requirements in the fueling section of this manual. Even if gasoline containing greater than ten volume percent ethanol is readily available, the US EPA issued a prohibition against the use of gasoline containing greater than 10 vol% ethanol that applies to this vehicle. The use of gasoline containing greater than 10 vol% ethanol with this engine may harm the emission control system.

Severe Dusty or Wet Conditions – Air Filter Maintenance Guideline

Engine air filter maintenance should be adjusted according to riding conditions.

Air filter maintenance must be increased in frequency when riding on dry sand, dirt, gravel or similar conditions which have high dust or particle dispersion. Also frequently driving in rain and high traffic increases the air particles being trapped by the air filter(s).

Riding in a group in these conditions would increase even more the filters maintenance.

Break-In Inspection

We recommend that after the first 5 000 km (3,000 mi) of operation, your vehicle be inspected by an authorized Can-Am On-Road dealer, repair shop, or person of your own choosing. This maintenance is very important and must not be neglected.

NOTE:

This inspection is at the expense of the vehicle owner.

We recommend that this inspection be signed by the authorized Can-Am On-Road dealer, repair shop, or person of your own choosing having performed the first inspection.

Date of inspection

Signature of the Authorized Can-Am On-Road dealer, repair shop, or person

Name of the Authorized Can-Am On-Road dealer, repair shop, or person

Maintenance Schedule

Make sure to perform proper maintenance at recommended intervals as indicated in the tables.

The maintenance chart intervals are based on 3 factors:

- Calendar time
- Vehicle hours
- Odometer reading.

Take in account whichever comes first to determine the maintenance threshold.

Your driving habits determines the factors you shall adhere too. For example:

- Someone who uses their vehicle daily or for frequent long weekend rides would follow the **odometer reading** to determine the frequency of his maintenance.
- Someone using their vehicle seldomly over the year or only on a few occasions (vacation, short rides every few weekends) would follow the **calendar time** to determine the frequency of his maintenance.

FIRST 5 000 km (3,000 mi)

Body and frame	– Inspect and torque body panels and hardware – Inspect passenger handles – Lubricate pivots, latches, hinges and key barrels – Torque footrests fixations.
Brake components and function*	– Inspect brake fluid level – Inspect brake components and function.
Cooling components*	– Inspect and adjust engine cooling components (coolant concentration, coolant level, hose condition, clamps, leaks).
Drive	– Inspect drive belt condition and adjust the tension (Performed by an authorized Can-Am On-Road dealer) – Torque rear wheel axle nut (Performed by an authorized Can-Am On-Road dealer) – Inspect drive components and function – Torque wheel lug nuts.
Electrical	– Inspect operation of control switches and lighting.
Engine	– Replace engine oil and oil filter.
*For an extensive list of maintenance actions to be performed, refer to your local dealership services.	

EVERY YEAR or 15 000 km (9,300 mi)

Air delivery components*	– Replace air filter – Inspect and clean airbox, throttle body, ducts, clamps.
Body and frame	– Inspect and torque body panels and hardware – Lubricate pivots, latches, hinges and key barrels.
Brake components and function*	– Inspect fluid level, brake pads, brake discs, calipers, brake lines, master cylinder – Clean and lubricate components.

EVERY YEAR or 15 000 km (9,300 mi)

Controls	– Inspect throttle operation.
Cooling components*	– Inspect and adjust engine cooling components (coolant concentration, coolant level, hose condition, clamps, leaks) – Clean and inspect radiator(s).
Drive	– Inspect and adjust drive belt alignment (Performed by an authorized Can-Am On-Road dealer) – Inspect drive belt condition and adjust the tension (Performed by an authorized Can-Am On-Road dealer) – Inspect drive components and function – Torque wheel lug nuts – Torque rear wheel axle nut (Performed by an authorized Can-Am On-Road dealer) – Inspect tires wear – Adjust tires pressure.
Electrical	– Inspect battery connections and condition – Inspect operation of control switches and lighting – Connect using B.U.D.S. and scan for fault codes. – Verify for available updates
Engine	– Replace engine oil and oil filter – Inspect engine seals and gaskets.
Exhaust components*	– Inspect and torque exhaust clamping rings – Inspect exhaust components (gaskets, pipes, muffler condition, leaks).
Fuel components and function*	– Inspect fuel components and function (fuel hoses, clamps, fuel evaporation lines and canister, leaks)
Steering components and function*	– Inspect steering components and function.

EVERY YEAR or 15 000 km (9,300 mi)

Suspension components*	– Inspect suspension components and function.
*For an extensive list of maintenance actions to be performed, refer to your local dealership services.	

ADDITIONAL MAINTENANCE INTERVALS

45 000 km (28,000 mi)	Engine	– Replace hydraulic Control Module (HCM) oil filter – Replace spark plugs.
	Emissions	– Replace canister vent pre-filter (CARB and EVAP models) .
Every 5 years or 45 000 km (28,000 mi)	Coolant	– Replace coolant.
	Fuel delivery	– Replace in-line fuel filter.
Every 2 years	Brake fluid	– Replace brake fluid.

Maintenance Records

Send photocopy of maintenance record to BRP if needed.

Pre-delivery	
Serial number: _____ Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print: _____ _____ _____ _____ _____ _____
Refer to vehicle Pre-Delivery Bulletin for detailed installation procedures	

FIRST inspection	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print: _____ _____ _____ _____ _____ _____
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print: _____
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print: _____
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print: _____
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print:
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print:
For maintenance schedule refer to Maintenance Information section of this operator's guide	

Service	
Mileage / km: _____ Hours: _____ Date: _____ Dealer no: _____ Notes: _____ _____	Signature/Print:
For maintenance schedule refer to Maintenance Information section of this operator's guide	

MAINTENANCE PROCEDURES

This section includes instructions for basic maintenance procedures.

Due to the complexity of some maintenance procedures, good mechanical skills are required.

Several procedures must be done by an authorized Can-Am On-road dealer, repair shop, or person of your own choosing.

If you are not comfortable with the mechanics, do not hesitate to contact an authorized Can-Am On-road dealer, repair shop, or person of your own choosing.

WARNING

Turn off the engine and follow these maintenance procedures when performing maintenance. If you do not follow proper maintenance procedures you can be injured by hot parts, moving parts, electricity, chemicals or other hazards.

Engine Oil

Recommended Engine Oil

Rotax® engines were developed and validated using the XPS® oil.

BRP recommends the use of its XPS engine oil or an equivalent at all time.

Damage caused by the use of an oil not suitable for the engine may not be covered by the BRP Limited Warranty.

XPS Recommended Engine Oil

5W40 synthetic oil

If the recommended XPS engine oil is not available:

- Use a 4-stroke SAE engine synthetic oil meeting or exceeding the following lubricant industry specifications.

- Always check the API service label certification on the oil container, it must contain at least one of the indicated standards.

- API service classification SN, or
- JASO MA2

Verifying the Engine Oil Level

NOTICE

Operating the engine with an improper engine oil level may cause severe engine damages. Follow this procedure to obtain a precise reading of the engine oil level.

In order to perform the engine oil level verification, the engine must be at normal operating temperature.

NOTICE

Adjusting the oil level on a cold engine will result in overfilling.

1. Take a ride of at least 15 km (9 mi).
2. Park the vehicle on a level surface and apply the parking brake.
3. Let the engine idle for 10 minutes.

WARNING

Exhaust gas contains poisonous carbon monoxide that can rapidly accumulate in an enclosed or poorly ventilated area. If inhaled, it can cause serious injury or death. Only run the engine in an unenclosed, well ventilated area.

NOTICE


Adjusting the oil level on a cold engine will result in overfilling.

4. Stop engine.

NOTE:

Engine oil level verification must be performed within 2 minutes after engine stop.


5. Remove RH lateral service cover. Refer to *Body Panels*.
6. Unscrew and remove the oil dipstick.

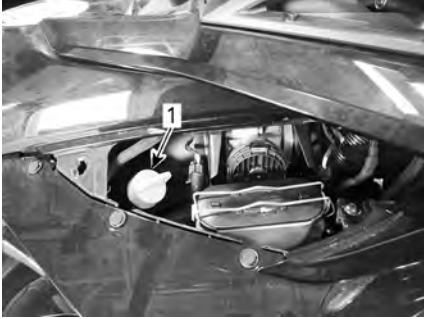

TYPICAL

1. Oil dipstick

7. Wipe off the dipstick.
8. Reinsert and **completely screw in** the dipstick.
9. Unscrew and remove the dipstick again.
10. Check the engine oil level on the dipstick. It should be near or equal to the upper mark.

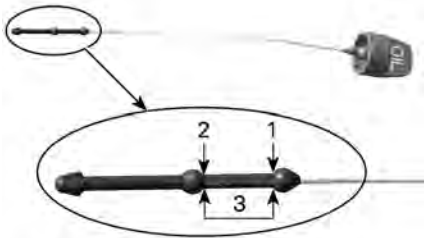

1. MAX
2. MIN
3. Operating range, 500 ml (17 fl oz(US))

Oil Level between Lower (MIN) and Upper (MAX) Marks:

1. Do not add oil.

2. Properly insert and tighten dipstick.
3. Install RH lateral service cover.

Oil Level under MIN Mark

Adjustment:

1. Add approximately 500 ml (17 fl oz (US)) of recommended oil.

NOTE:

The oil quantity between MIN and MAX marks is 500 ml (17 fl oz (US)).

2. Restart the engine and let it idle for 10 minutes.

WARNING

Exhaust gas contains poisonous carbon monoxide that can rapidly accumulate in an enclosed or poorly ventilated area. If inhaled, it can cause serious injury or death. Only run the engine in an unenclosed, well ventilated area.

NOTICE

Adjusting the oil level on a cold engine will result in overfilling.

3. Stop the engine.
4. Recheck oil level.

NOTE:

Engine oil level verification must be performed within 2 minutes after engine stop.

5. Repeat the above steps until oil level reaches the dipstick between the lower and upper marks. **Do not overfill.**
6. Properly insert and tighten dipstick.
7. Install RH lateral service cover.

Changing the Engine Oil and Oil Filter

1. Prior to changing the oil, ensure vehicle is on a level surface.


NOTICE

The engine oil and the engine oil filter must be replaced at the same time. The oil change should be carried out with a warm engine.

CAUTION

Engine oil can be very hot.


2. Remove the following RH body panels, refer to *Body*:
 - Lateral service cover
 - Side panel
3. Clean area around drain plug under oil sump cover.
4. Place an appropriate drain pan under oil sump cover.
5. Remove the drain plug and discard the sealing washer and O-rings.

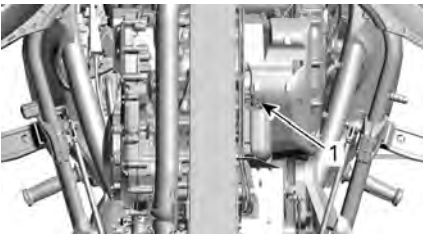

TYPICAL

1. Drain plug

6. Remove the dipstick.
7. Allow sufficient time for oil to completely drain.
8. Clean area around magnetic drain plug in the clutch cover.
9. Place an appropriate drain pan under the clutch cover.
10. Remove the magnetic oil drain plug and discard the sealing ring.

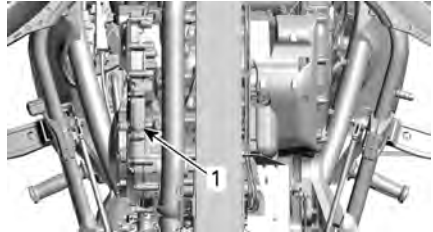

TYPICAL

1. Magnetic drain plug

11. Remove oil filter cover and discard its O-rings.
12. Remove and discard oil filter.



1. Oil filter cover
2. O-rings
3. Oil filter

13. Allow sufficient time for oil to completely drain from clutch cover.
14. Check and clean oil filter cavity for dirt and contamination.
15. Clean the magnet on the magnetic drain plug.
16. Using **NEW** sealing washers and O-rings and install both drain plugs.

NOTICE

Never reuse the drain plug sealing washers and O-rings. Always replace it with a new one.

17. Tighten drain plugs as specified.

Tightening Torque	
Drain plug (oil sump cover)	28 ± 2 Nm (21 ± 1 lbf-ft)

Tightening Torque	
Magnetic drain plug (clutch cover)	20 ± 2 Nm (15 ± 1 lbf-ft)

18. Insert **NEW** engine oil filter.
19. Install **NEW** O-rings on oil filter cover.
20. Install oil filter cover and tighten to specification.

Tightening Torque	
Oil filter cover	25 ± 3 Nm (18 ± 2 lbf-ft)

21. Fill the oil tank with the required amount of recommended engine oil.
22. Reinsert and completely screw in the dipstick.
23. Check engine oil level. Refer to *Engine Oil Level Verification* in this section.

NOTICE


Ensure oil pressure warning lamp goes out within 5 seconds from engine start. If oil pressure warning lamp stays ON for more than 5 seconds, **STOP ENGINE** and re-check oil level.

24. Ensure engine oil filter cover, magnetic drain plug (clutch cover) and drain plug (oil sump cover) are not leaking.
25. Reinstall all removed body panels.
26. Dispose of used oil as per your local environmental regulations.

Air Filter


Removing the Air Filter

1. Remove the LH lateral service cover, refer to *Body Panels* in *Equipment* if needed.
2. Remove screws retaining the air filter cover.

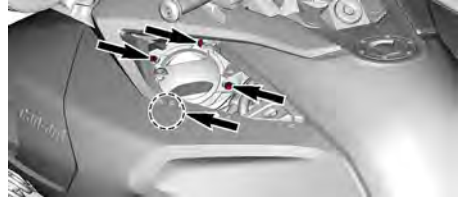

TYPICAL

3. On **T and Limited** models, remove the plastic rivets and move the electrical harness aside.

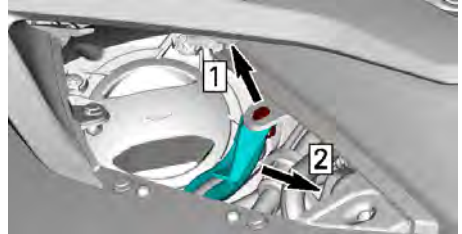


T AND LIMITED MODELS

- Step 1. Remove plastic rivet
- Step 2. Displace electrical harness
4. Remove the air filter.

NOTICE

Remove air filter slowly to keep dust and debris from falling into the clean area of the air intake silencer (passed air filter).

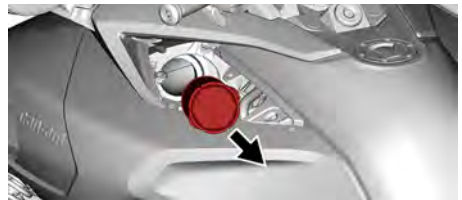

Inspecting the Air Filter

Inspect air filter for cleanliness and damage.

NOTICE

It is not recommended to blow compressed air on the paper filter. This could damage the paper fibers and reduce its filtration ability when used in dusty environments.

NOTICE

Do not wash the paper filter with any cleaning solution.

NOTICE

Inspect air intake silencer and remove any dust or debris taking care not to blow or move anything inside the clean side of the engine air inlet (passed air filter).

NOTICE

Remove any dust or debris that may have moved or shifted inside the clean side of the air intake silencer (passed air filter). Clean by pulling on the dust and not pushing it inside.

Replace air filter as necessary according to recommended maintenance schedule and particular use (especially in dusty environments).

Installing the Air Filter

1. Make sure the ring on which the air filter sits is flat and well positioned before seating the air filter.
2. Make sure the air filter is positioned in the correct orientation.

NOTE:

A special area is present on the filter for writing down date and mileage at which new filter was installed.

3. Position the air filter cover onto air intake silencer.
4. Tighten screws in a star pattern.

Tightening Torque

Air filter cover screws	3 ± 0.5 Nm (27 ± 4 lbf-in)
-------------------------	-------------------------------

5. **On T and Limited models**, reposition the electrical harness and install the plastic rivet.

Engine Coolant

Recommended Engine Coolant

NOTICE

Always use ethylene-glycol anti-freeze containing corrosion inhibitors specifically for internal combustion aluminum engines.

To prevent antifreeze deterioration, always use the same brand and grade. Never mix different brands or grades unless cooling system is completely flushed and refilled.

XPS Recommended Coolant

Extended life pre-mixed coolant

If the Recommended XPS Product is not Available

Use a low silicate, extended life ethylene-glycol premixed coolant (50%-50%) specifically formulated for internal combustion aluminum engines.

Verifying the Engine Coolant Level


With the engine cold, check the coolant level as follows:

1. Park the vehicle on a firm, level surface.
2. Open the front storage compartment.

3. Remove front service cover, refer to *Body*.
4. Check the coolant level on the right hand side. Coolant must be visible slightly above the COLD level mark.

NOTE:


If engine is hot, coolant must be visible without exceeding the HOT level mark.

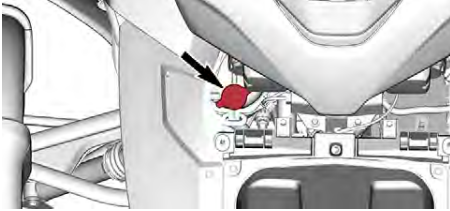

5. If required, add coolant until it is visible in the reservoir slightly above the COLD level mark. Use a funnel to avoid spillage.

Do not overfill.

6. Stop adding coolant once coolant starts to appear in the tube.

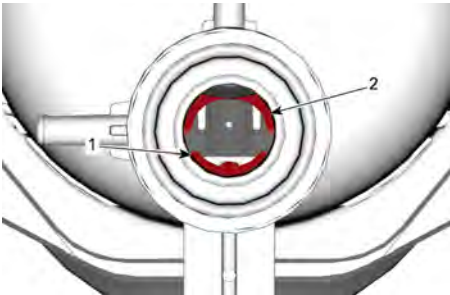

1. COLD coolant level reference line
2. HOT coolant level reference line

7. Reinstall the service cover.

NOTE:

A coolant system that frequently requires coolant indicates leaks or engine problems. See an authorized Can-Am On-Road dealer.

Radiator Fan

1. Remove any debris from the grilles.

NOTICE

Do not clean with a pressure washer because it can damage the radiator fins. Clean only with compressed air from behind (blow the air from the back towards the front).

2. To access radiators, remove screws retaining the front grille.



FRONT GRILLE SCREWS

3. Pull front grille to remove it.




Spark Plugs

Due to the vehicle configuration, refer to your Can-Am On-Road dealer for the replacement of the spark plugs.

Battery

Battery Location

The battery is located in the front storage compartment. To access the battery, open the front storage compartment.

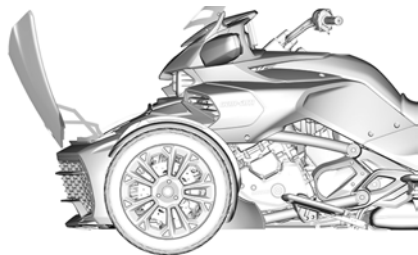

TYPICAL

Remove the basket.



1. Battery

Charging the Battery

The vehicle is equipped with a maintenance-free type battery and is completely sealed; there is no need to add water to adjust the electrolyte level. The battery may need to be charged if the vehicle has not been ridden for at least one month.

Always have the battery replaced by an authorized Can-Am On-Road dealer.

⚠ WARNING

Do not use conventional lead-acid type batteries. Acid may leak out through the battery vent of a conventional lead-acid type battery. Acid may also leak if the battery case is cracked or damaged, which can cause severe burns.

The battery can be charged while it is installed on the vehicle.

A standard battery charger can be used. If the battery is dead, it can be

jump started with a car battery (see *Roadside Repairs* section).

For home charging, a “trickle” charger can be used to slow charge the battery. This type of charger can be left connected for a long period of time without damaging the battery. Always follow the charging time as recommended in the charger instructions.

NOTICE

Follow the instructions provided with your battery charger. Improper charging may damage the battery.


To charge the battery, proceed as follows:

1. Open the front storage compartment.
2. Remove basket, refer to *Body Panels*.
3. First connect the RED (+) cable to the corresponding terminal.

NOTICE

Always connect the RED (+) cable first to avoid damaging the electrical system of the vehicle.

4. Connect the BLACK (-) cable to the corresponding terminal.

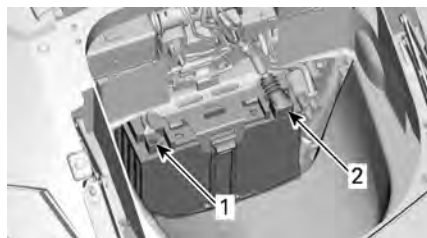

1. BLACK (-) terminal
2. RED (+) terminal

5. Start the battery charger. Charging time will depend on the charging rate.

When the battery is charged:

6. First disconnect the BLACK (-) cable.

NOTICE

Always disconnect the BLACK (-) cable first to avoid damaging the electrical system of the vehicle.

7. Disconnect the RED (+) cable.
8. Put basket back and close front storage compartment.

Drive Belt

Visually inspect belt alignment and condition before each ride.


Belt alignment and deflection adjustment should always be performed by an authorized Can-Am On-Road dealer according to the *Maintenance Schedule*.

Drive Belt Alignment

If belt goes beyond the outside edge of sprocket, have the belt properly aligned by an authorized Can-Am On-Road dealer as soon as possible.



NOTICE

The belt can be in contact with only one flange of only one of the two sprockets.

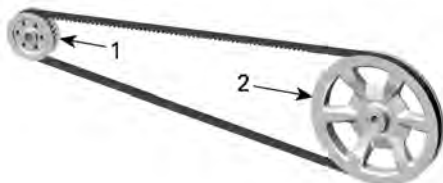

TYPICAL


1. Front sprocket
2. Rear sprocket

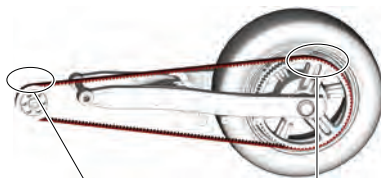

$$A + B = 3.25 \pm 2.75 \text{ mm } (1/8 \pm 7/64 \text{ in})$$

Drive Belt Wear

Inspect the drive belt with the vehicle in neutral, engine off, on a level surface with plenty of room — you will have to roll the vehicle forward or backward to see the full length of the belt.


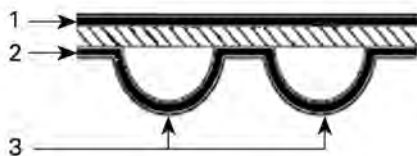


DRIVE BELT SURFACES

1. Outer surface
2. Teeth side surface
3. Tooth

Inspect for the following conditions:

Wear Condition	Required Action
Good condition	None
Hairline cracks	Monitor condition
Minor chipping	Monitor condition

Wear Condition	Required Action
	
Opened cracks 	Replace belt
Hook wear 	Replace belt
Missing teeth 	Replace belt
Belt fabric worn, exposing internal components 	Replace belt
Stone damage 	Replace belt

NOTE:

Hairline cracks do not require the replacement of the belt, but must be monitored closely — they may lead to opened cracks or missing teeth, requiring belt replacement. Damage to the center of the belt will eventually require belt replacement, but when cracks extend to the edge of the belt, belt failure is imminent.

When a drive belt is replaced, also replace the sprockets to increase the longevity of the new drive belt.

Drive Belt Tension

While riding, if you feel vibrations or noise in the belt or if the belt is

skipping sprocket teeth, have the belt tension adjusted as soon as possible by an authorized Can-Am On-Road dealer. Pay particular attention during break-in period (first 1 000 km (600 mi)).

Wheels and Tires

WARNING

Tires that are not the recommended type, damaged, worn down below the minimum tread wear limit indicator or not properly inflated can cause loss of control. New tires will not operate at their maximum efficiency until their break-in is completed. Braking, steering and VSS performance may be reduced, so use extra caution. Tires take about 300 km (200 mi) of riding with frequent braking to break-in. For riding with infrequent braking, allow extra time to break-in the tires.

The tires have been specifically designed for this vehicle. Use only the BRP recommended radial tires, which can be ordered only from an authorized Can-Am On-Road dealer.

When the rear tire is removed or replaced, perform the following:

- Check and clean the rear sprocket bearing. Replace if damaged or broken.
- Check and clean the rear axle bearings. Replace if damaged or broken.
- Replace and lubricate the bearing seal of the rear axle.
- Replace and lubricate rear axle O-ring.
- Check and clean the rear axle wear sleeves. Replace if damaged or broken.

When the rear wheel is removed or replaced, perform the following:

- Replace rear wheel nut.

- Replace and lubricate the bearing seal of the rear axle.
- Replace and lubricate rear axle O-ring.
- Check rubber damper condition. Replace if damaged or broken.
- Align then adjust drive belt tension.

Tire Pressure

Use the recommended cold inflation pressure for optimum tire performance and wear. Under-inflation or over-inflation may cause uneven tread wear patterns.

Recommended tire inflation pressure is found on the Tire Label located inside the front storage compartment.

When weather temperature changes occur, tire inflation pressures also change. A drop of 6 °C (43 °F) can cause a corresponding drop of 7 kPa (1 lbf/in²) in inflation pressure. Check your tire pressures frequently and adjust them to the proper pressure

NOTE:

The pressure difference between the left and right side front tire should not exceed 3.4 kPa (.5 lbf/in²).

Tire Damage

Check all tires for:

- Cuts, slits and cracks in the tires.
- Bumps or bulges in the side of the tire or the tread.
- Nails or other foreign objects in the side of the tire or tread.
- Air leaks (hissing sound) caused by an ill-fitting rim or a faulty tire valve.

If any of the above occurs, have the tire repaired or replaced as soon as possible by an authorized Can-Am On-Road dealer.


Tire Tread Wear

Check minimum tread depth by using the tread-wear indicators (hard rubber

bars molded at the base of the tread; 1 in figure below). Check in three locations across the tire tread:

- Outer edge
- Center
- Inside edge.

The tread-wear indicators will appear across the treads that have been worn down to the minimum tread depth. When at least one tread-wear indicator appears across the tread, have the tire replaced as soon as possible by an authorized Can-Am On-Road dealer.

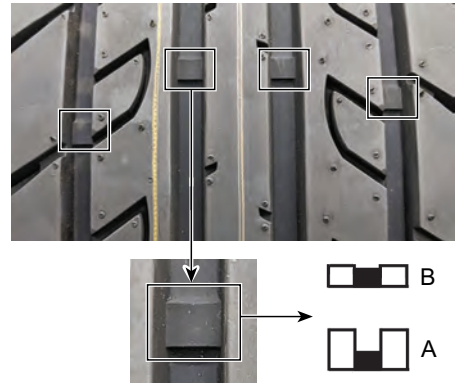

TYPICAL – TIRE TREAD WEAR

1. Tread-wear limit indicator

A. Appropriate tread depth

B. Minimum tread depth, replace tire

It is normal to see uneven wear on tires depending on how the vehicle is driven and road conditions. The front tires external or internal edges and the rear tire center tread will wear unevenly depending on if the vehicle is driven smoothly or aggressively.

Tire Rotation

Rotate front tires when tread depth reaches 4 mm (5/32 in). This will maximize tire life.

CAUTION

Do not hold the front wheel spoke while attempting to spin the front wheel as your fingers may be caught between the wheel and the brake caliper.

Tire Registration Form

In the event of a tire recall, we can only contact you if we have your name and address. As a vehicle manufacturer, BRP keeps a record of the Tire Identification Number (TIN) associated with the Vehicle Identification Number (VIN) (see *Vehicle Identification*) and its current owner information.

If you replace any tire on your vehicle, a "Tire Registration Form" must be completed and sent to the tire manufacturer consumer service group. The "Tire Registration Form" is available at an authorized Can-Am On-Road dealer.

Brakes

WARNING


New brakes will not operate at their maximum efficiency until their break-in is completed. Braking performance may be reduced, so use extra caution. Brakes take about 300 km (200 mi) of riding with frequent braking to break-in. For riding with infrequent braking, allow extra time to break-in the brakes.

Verifying the Brake Fluid Level

Use only DOT 4 brake fluid from a sealed container.

Check the brake fluid level as follows:

1. Park the vehicle on a firm, level surface.
2. On RH side, remove the lateral service cover and the side panel. Refer to *Body Panels*.
3. Check the brake fluid level in reservoir. They should both be above the MIN. mark.

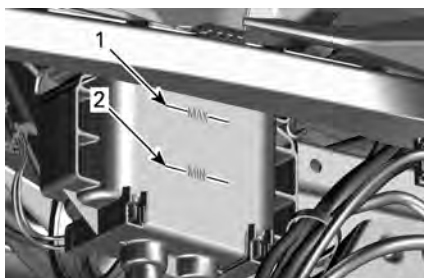

1. Brake fluid MAX. level mark
2. Brake fluid MIN. level mark

4. Add fluid as required. Refer to *Adding Brake Fluid*.

CAUTION


Low brake fluid may indicate leaks or worn brake pads. See an authorized Can-Am On-Road dealer.

Adding Brake Fluid

1. Clean and remove the filler cap.

WARNING

Clean filler cap before removing. Use only DOT 4 brake fluid from a sealed container.

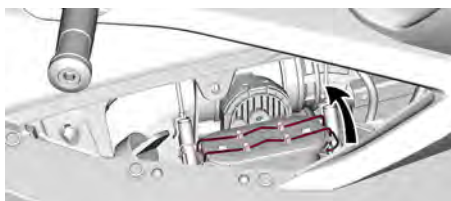

2. Add fluid to MAX level.

NOTE:

Replacing brake pads will increase brake fluid level. If replaced when at MAX level, brake fluid spills may occur.

NOTICE

Brake fluid can damage painted surfaces or plastic parts. Wipe up any spills.

3. Reinstall filler cap and lock in place.
4. Reinstall the side panel and the lateral service cover.

Verifying the Brake System

The front and rear brakes are hydraulic disc types. These brakes are self-adjusting and do not require adjustment.

The brake pedal also requires no adjustment.

To keep brakes in good condition, check the following as per the *Maintenance Schedule*:

- Entire brake system for fluid leaks
- Brake pedal for spongy feel
- Brake discs for excessive wear and surface condition
- Brake pads for wear, damage or looseness.

See an authorized Can-Am On-Road dealer if there are any problems with the brake system.

Headlights


Verifying the Headlights Aiming

1. Verify tires are correctly inflated. Refer to the *Tire Pressures and Maximum Load* label.
2. Position vehicle 10 m (33 ft) in front of a test surface as shown. Make sure vehicle is on leveled ground.



TYPICAL

A. 10 m (33 ft)

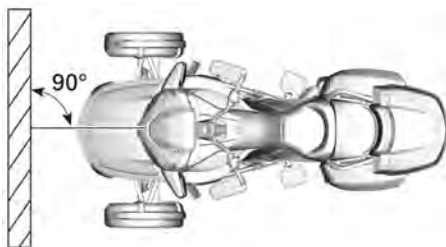


TYPICAL

3. Trace 4 lines parallel to the ground on the test surface as follows:

Lines on the Test Surface	
Line A	677 mm (26-21/32 in)
Line B	627 mm (24-11/16 in)
Line C	565 mm (22-1/4 in)
Line D	515 mm (20-9/32 in)

4. Have driver take place on the driver's seat.
5. Select **high** beam.
6. Beam aiming is correct when the focus point (brightest spot) of the headlight reflection is between the upper marks.

All Models

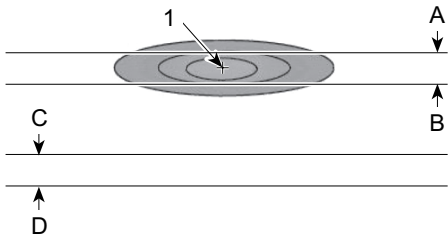


TYPICAL – HEADLIGHT REFLECTION ON TEST SURFACE – HIGH BEAM

1. Focus point

- A. 677 mm (26-21/32 in) above ground
- B. 627 mm (24-11/16 in) above ground
- C. 565 mm (22-1/4 in) above ground
- D. 515 mm (20-9/32 in) above ground

- 7. Select low beam.
- 8. Beam aiming is correct when the focus point (brightest spot) of headlight reflection is between lower marks.

Canada/US

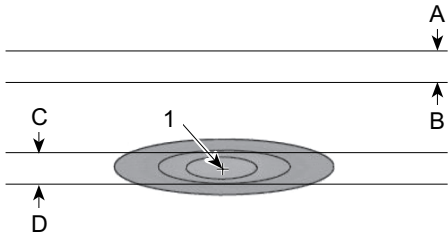


TYPICAL – HEADLIGHT REFLECTION ON TEST SURFACE – LOW BEAM

1. Focus point

- A. 677 mm (26-21/32 in) above ground
- B. 627 mm (24-11/16 in) above ground
- C. 565 mm (22-1/4 in) above ground
- D. 515 mm (20-9/32 in) above ground

All except Canada/US

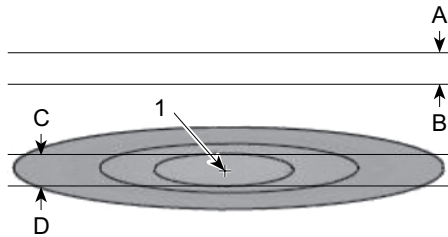

TYPICAL – HEADLIGHT REFLECTION ON TEST SURFACE – LOW BEAM

1. Focus point

- A. 677 mm (26-21/32 in) above ground
- B. 627 mm (24-11/16 in) above ground
- C. 565 mm (22-1/4 in) above ground
- D. 515 mm (20-9/32 in) above ground

NOTE:

For countries driving on the left, light peak should be on the left of vehicle.

Headlights Aiming Adjustment

High Beam – S Models

- 1. Remove the front service cover. Refer to *Equipment*.
- 2. Adjust each headlight by turning the headlight adjuster located on the headlight housing. Turn counterclockwise to raise headlight and clockwise to lower headlight. Adjust both headlights evenly.

NOTE:

Do not exceed a torque of 1.5 Nm (13 lbf-in).



High Beam – T and Limited Models

- 1. Remove the front service cover. Refer to *Equipment*.

- Adjust each headlight by turning the headlight adjuster located on the headlight housing. Turn counterclockwise to raise headlight and clockwise to lower headlight. Adjust both headlights evenly.

NOTE:

Do not exceed a torque of 1.5 Nm (13 lbf-in).



NORTH AMERICAN MODELS



OTHER COUNTRIES

Low Beam

- Remove the front fairing grilles.



- Front fairing grille
- Front fairing grille screws

- Remove the side panels and the lateral service covers, refer to *Body Panels*.
- Turn the lower adjustment screw to adjust beam height. Adjust both headlights evenly.



- When the adjustment is completed, reinstall the side panels, the lateral service covers and the front fairing grilles.

Tightening Torque	
Front fairing grille screws	1.5 ± 0.5 Nm (9 ± 4 lbf-IN)

VEHICLE CARE

Cleaning the Vehicle

Do not use high-pressure washers (like the ones found in car washes) as they may damage certain parts of the vehicle.

NOTICE

Do not clean the windshield with alkaline or acid cleaner, gasoline or solvent to avoid windshield damage.

NOTICE

For matte finishes, do not use wax, detail spray, or other products used on regular paint. Do not wash with abrasive materials. Do not use mechanical cleaners or polishers, and do not rub the surfaces vigorously.

To clean the vehicle:

1. Rinse the vehicle thoroughly with water to remove loose dirt.
2. Using a soft, clean cloth, wash the vehicle with water mixed with a mild detergent, such as soap specially formulated for motorcycles or automobiles.

NOTE:

Using warm water works well to remove bugs in the windshield and front panels.

3. While washing the vehicle, check for grease or oil. You can use service product or a mild automotive degreaser. Thoroughly follow the manufacturer's instructions.

XPS Roadster wash

4. Dry the vehicle with a chamois or a soft towel.

Vehicles with Matte Finishes

NOTICE

Do not use wax, detail spray, or other products used on regular paint. Do not wash with abrasive materials. Do not use mechanical cleaners or polishers, and do not rub the surfaces vigorously.

Hand-wash with a soft wash mitt and a mild cleaning product safe for matte paint. To remove foreign substances such as insects, use a soft applicator and a mild solvent. Saturate and soak area before cleaning. Rub lightly.

This paint finish may require more frequent cleaning.

Vehicle Protection

Apply non-abrasive wax to plastic parts.

NOTICE

Do not wax or polish matte surfaces (including matte paint finishes).

Surface	Recommendation
Glossy paint finishes	Apply only non-abrasive wax, safe for clear coat paints
Matte finishes	Do not apply wax

NOTICE

Do not polish windshield with any plastic cleaner/polisher.

⚠ WARNING

Do not apply a vinyl or plastic protector on the seats as the surface will become slippery and the operator or the passenger may slip off the vehicle.

STORAGE AND PRESEASON PREPARATION

Storage

If the vehicle will not be ridden for at least four months, such as during the winter, proper storage is necessary to keep the vehicle in good condition.

BRP recommends you have your authorized Can-Am On-Road dealer, repair shop, or person of your own choosing fully prepare your vehicle for storage. Or, at your convenience, you can follow the basic procedures below.

To Prepare the Vehicle for Storage

1. Inspect vehicle and have your authorized Can-Am On-Road dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement if necessary.

NOTE:

For US and Canadian citizens, please refer to the *US EPA Emission Performance Warranty* contained in the *Warranty* section for information about warranty claims.

2. Change the engine oil and filter. Seek service from an authorized Can-Am On-Road dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement.
3. Check engine coolant, brake fluid and clutch fluid levels.
4. Fill the fuel tank, add fuel stabilizer and run the engine to prevent the tank from rusting and the fuel from deteriorating. Strictly follow instructions on fuel stabilizer container.
5. Inflate all tires to their recommended pressure.
6. Clean the vehicle.
7. Lubricate all control cables, latches, key barrels, and pivoting points of all levers.
8. Close and latch all storage compartments.
9. Store the vehicle in a dry area, away from sunlight, with a small

amount of daily temperature variation.

10. In some locations, it will be a good idea to block the engine air intake entering and the muffler opening with clean rag to avoid intrusion of field mice, mice, squirrels or other small unwanted visitors. Don't push the rag to far. Leave a small portion of the rag overshoot as a reminder.
11. Cover the vehicle with a permeable materials (e. g., tarpaulin). Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.
12. Slow charge the battery once a month at the recommended charging rate indicate on the battery. It is not necessary to remove the battery.

Preseason Preparation

After a storage period, the vehicle must be prepared and inspected before riding. Perform the following:

1. Uncover the vehicle.
2. Remove rags from the engine air intake entering and the muffler opening.
3. Clean the vehicle.
4. Charge the battery if needed.
5. Perform a pre-ride inspection, then test-ride the vehicle at low speed.

This page is intentionally blank

ROAD SIDE REPAIRS

DIAGNOSTIC GUIDELINES

NOTICE

If the vehicle must be transported, do not have it towed – towing can seriously damage the vehicle. Refer to *Transporting the Vehicle* in this section for detailed instructions.

Will not Shift into Neutral

If the gearbox cannot shift into neutral when vehicle is not moving:

1. The engine speed will be automatically increased to approximately 1300 RPM then it will be brought back to idle speed.
2. Up to 3 attempts will be done.
3. If it does not work, retry pressing upshift or downshift.

Will not Shift

Have your vehicle transported to the nearest Can-Am On-Road dealer.

Engine Does Not Start

Troubleshooting

1. ENGINE DOES NOT TURN OVER

Scrolling safety message on the multi-function gauge not acknowledged.

- Read the safety message then press the *MODE* button.

Engine stop switch in the OFF position.

- Make sure that the engine stop switch is in the *ON* position.

Ignition switch in the OFF position.

- Turn the ignition to the *ON* position.

Battery dead or poor battery connections.

- Check the battery charge. Recharge if necessary (see *Maintenance Procedures*).
- Check the battery connections in the front storage compartment (see *Maintenance Procedures*).

Blown fuse.

- Check fuse condition (see the *How to replace fuses and lights in this section*).

Transmission is in gear.

- Depress brake pedal if transmission is in gear.

The key is not read. If the immobilizer system cannot read the key, the engine will not start. The following conditions can lead to the immobilizer system failing to read the key:

- Damaged computer chip
- Large metallic object near the key
- Electronic device near the key
- Second electronic coded key near the main key
- Other strong electromagnetic field in the key area
- If the engine does not start and a key error message is displayed in the cluster, make sure that none of the above conditions are present. If the problem is still present without these conditions, see an authorized Can-Am On-Road dealer.

2. ENGINE TURNS OVER, BUT DOES NOT START

Low fuel.

- Fill the fuel tank. Refer to *Basic Procedures*.

Weak battery.

- Check battery charge. Recharge if necessary (see *Maintenance Procedures*).

- *Check the battery connections in the front storage compartment (see Maintenance Procedures).*

Engine management problem.

- *Check to see whether the engine malfunction indicator lamp is ON while starting. Seek service from an authorized Can-Am On-Road dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA Emissions Performance Warranty contained herein for information about warranty claims.*

MESSAGES IN MULTIFUNCTION GAUGE

Important information about vehicle condition is displayed on the multifunction gauge. When starting the engine, always look at the gauge for any indicator lamps or special messages.

BRP recommends having the vehicle transported when in LIMP HOME. If you operate the vehicle in LIMP HOME, avoid abrupt maneuvers and immediately go to the nearest authorized Can-Am On-Road dealer to have your vehicle serviced before riding again. In LIMP HOME, the engine RPM is limited and therefore the vehicle speed.

Indicator Lamps (Malfunctions)		
Indicator	Message/ Warning	Description
	CHECK ENGINE	– All active or previously activated faults that require attention. – No engine limitations engaged. – Contact an authorized Can-Am On-Road dealer as soon as possible.
	LIMP HOME MODE	– Critical faults requiring diagnostic as soon as possible. – An engine limitation is engaged and/or the engine behavior is modified. – Have the vehicle transported to the nearest authorized Can-Am On-Road dealer.
	VSS FAULT	– Vehicle Stability System malfunction.
	BRAKE FAILURE Low brake fluid	– Check for brake fluid leaks. – Check brake fluid level and adjust (refer <i>Maintenance Procedures</i>).
	BRAKE FAILURE Parking Brake Failure	– Have the vehicle transported to the nearest authorized Can-Am On-Road dealer.
	PARKING BRAKE APPLIED	– Release Parking Brake.
	LOW OIL PRESSURE	– Stop engine. – Check for oil leaks. – Check oil level and adjust (refer <i>Maintenance Procedures</i>).
	NO OIL	– Stop engine. – Check for oil leaks. – Check oil level and adjust (refer <i>Maintenance Procedures</i>).
	HIGH BATTERY VOLTAGE	– Indicate a high battery voltage condition. Contact an authorized

Indicator Lamps (Malfunctions)		
Indicator	Message/ Warning	Description
		Can-Am On-Road dealer as soon as possible.
	12V BATTERY	– System overload - Park in a safe place.
	WARM UP	– Power is reduced.
	ENGINE OVERHEAT	– Engine temperature too high.
	HIGH ENGINE TEMPERATURE	– Stop and wait for engine to cool down. – Check for leaks. – Check coolant level and adjust (refer <i>Maintenance Procedures</i>). – If coolant level is correct and overheating persists, contact an authorized Can-Am On-Road dealer. Do not run the engine if condition persists.
	WRONG KEY	– Unable to read key (bad connection). – Use the right key for the vehicle or contact an authorized Can-Am On-Road dealer.
	CHECK DPS	– Check engine pilot light on (). – Indicates that the DPS (Dynamic Power Steering) does not work properly. – Contact an authorized Can-Am On-Road dealer as soon as possible.
	SUSPENSION FAULT	– Check pressure in the air spring. – Check rear suspension position sensor. – Have the vehicle transported to the nearest authorized Can-Am On-Road Dealer to verify the Air Controlled Suspension Min/Max values calibration.
	TRANSMISSION FAULT	– Remove key, wait 20 seconds, and reinsert key. – Have the vehicle repaired by an authorized Can-Am On-Road dealer.
	KNOCK	– Engine detonation (RPM is limited when this condition occurs). – Ensure recommended fuel is used. – Check fuel quality, replace if necessary.

Indicator Lamps (Malfunctions)

Indicator	Message/ Warning	Description
		– If fault still occurs, contact an authorized Can-Am On-Road dealer, repair shop, or person of your own choosing.
	DROWN MODE ACTIVE	– Release throttle to deactivate Drown Mode.
	THROTTLE IS OPEN	– Release throttle to deactivate limitation.
	ENGINE WILL SHUTDOWN	– Shutdown procedure in force due to engine overheating or fuel pump problem.
	FUEL LEVEL SENSOR FAULT	– Fuel sender resistor value is out of range.
	LOW FUEL	– Fuel level is low or fuel tank is near empty.

WHAT TO DO IN THE FOLLOWING CIRCUMSTANCES

Lost Keys

Use your spare key to have another one made by an authorized Can-Am On-Road dealer as soon as possible. **If both keys are lost**, the ignition switch, the key barrels of the saddlebags and top storage compartment and, the trailer key barrel (if using a BRP trailer) will need to be replaced at the expense of the vehicle owner.

Flat Tire

If a tire has a **major** puncture or cut in the tread and is completely deflated, have the vehicle transported to the nearest Can-Am On-Road dealer. Refer to *How to Transport the Vehicle* for transporting instructions.

If a tire has a **minor** nail or stone puncture and is not completely deflated, the tire can be temporarily repaired. To temporarily repair a tire, a self-inflating tire sealer or tire plug repair kit can be used. Follow the manufacturer's instructions that come with the tire sealer or repair kit and have the tire repaired or replaced by an authorized Can-Am On-Road dealer **as soon as possible**.

When a tire is temporarily repaired, ride slowly and carefully, and frequently check tire pressure until it is replaced or permanently repaired.

Dead Battery

If the battery is dead or too low to crank the engine, it can be jump started.

WARNING

Connect the jumper cables as specified in the jump start procedure.

Batteries can emit explosive gas that can ignite if jumper cables are not properly connected.


To jump start the battery, proceed as follows:

1. If using another vehicle to jump start the battery, move the other vehicle as close as possible and preferably to the front of the vehicle. Make sure the vehicles are not touching.
2. Shift the vehicle into NEUTRAL (N) and engage the parking brake.

NOTE:

If battery voltage is below 11 V, parking brake cannot be activated.

3. Turn off the engine of the other vehicle and all electrical accessories.
4. Open the hood of the other vehicle.
5. Open the front storage compartment of the your vehicle.
6. Make sure the ignition switch is set to OFF.
7. Remove basket. Refer to *Body Panels*.
8. Connect one end of the RED (+) jumper cable to the POSITIVE (+) terminal of the dead battery.
9. Connect the other end of the RED (+) jumper cable to the POSITIVE (+) terminal of the booster battery.
10. Connect one end of the BLACK (-) jumper cable to the NEGATIVE (-) terminal of the booster battery.
11. Connect the other end of the BLACK (-) jumper cable to the NEGATIVE (-) terminal of the vehicle.

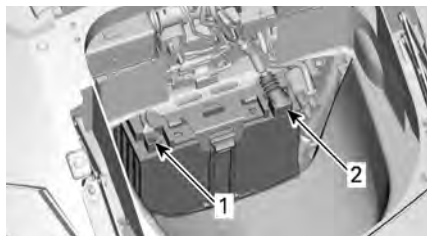

1. BLACK (-) terminal
2. RED (+) terminal

12. Start the vehicle with the booster battery and run the engine at idle for a couple of minutes.
13. Stand on the right side of the vehicle, apply brakes and start the engine. If it does not crank or it cranks slowly, wiggle the jumper cables to make sure they are making good contact and try again. If it still does not start, there might be a problem with the starting system. Have the vehicle transported (see *Transporting the vehicle* in this section) and repaired by the nearest authorized Can-Am On-Road dealer.
14. As soon the engine starts, disconnect both jumper cables in the reverse connection order, starting with the BLACK (-) cable connected to your vehicle.
15. Have the battery fully recharged with a battery charger (see *Maintenance Procedures*) or by a qualified service station as soon as possible.

If the engine dies shortly after it has been jump started or when the jumper cables are disconnected, there might be a problem with the charging system. Have the vehicle transported (see *Transporting the Vehicle*) and repaired by the nearest authorized Can-Am On-Road dealer.

After recharging the battery, have the vehicle inspected by an authorized Can-Am On-Road dealer.

LIGHTS LOCATION

This vehicle is equipped with LEDs (light emitting diode) and this technology proved to be reliable. Only the back-up light and the rear flashers use bulbs.


The LED technology proved to be reliable and in the unlikely event they do not work, have them checked by an authorized Can-Am On-Road dealer.

Due to the complexity of the procedure, refer to an authorized Can-Am On-Road dealer to replace bulbs of rear flashers and back-up light.

Australian Models

 FRONT OF VEHICLE 1. Headlight - High beam 2. Headlight - Low beam 3. Position light 4. Turn signal light	 REAR OF VEHICLE 1. Taillight/Brake light 2. Turn signal light 3. Backup light 4. License plate light
--	--

Japanese Models

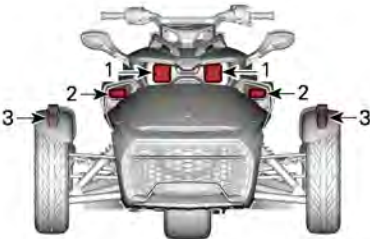S Models	
 FRONT OF VEHICLE 1. Headlight - High beam 2. Headlight - Low beam 3. Turn signal light/Position light	 REAR OF VEHICLE 1. Taillight/Brake light 2. Backup light 3. Turn signal light 4. License plate light

Limited Models



FRONT OF VEHICLE

- 1. Headlight - High beam
- 2. Headlight - Low beam
- 3. Turn signal light/Position light



REAR OF VEHICLE

- 1. Taillight/Brake light
- 2. Turn signal light
- 3. Backup light
- 4. License plate light


North American Models

S Models



FRONT OF VEHICLE


- 1. Headlight
- 2. Turn signal light/Position light

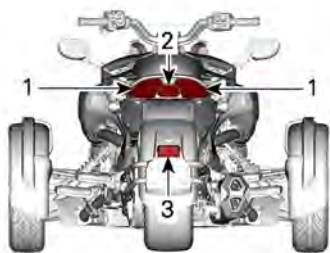


REAR OF VEHICLE

- 1. Taillight/Brake light/Turn signal light
- 2. Backup light
- 3. License plate light

T Models

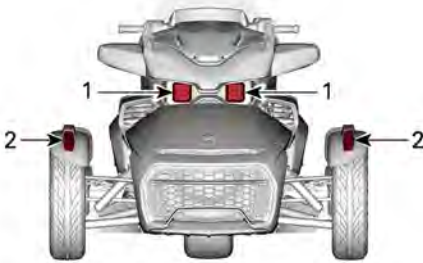
**FRONT OF VEHICLE**

1. Headlight
2. Turn signal light/Position light

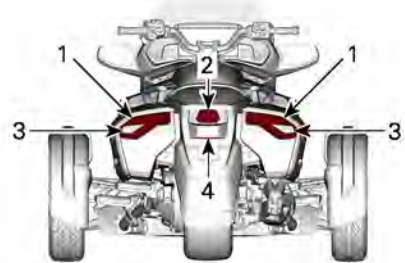
**REAR OF VEHICLE**

1. Taillight/Brake light
2. Backup light
3. Turn signal light
4. License plate light

Limited Models

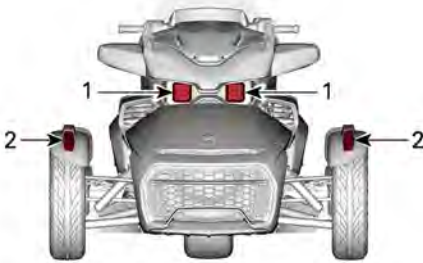**FRONT OF VEHICLE**

1. Headlight
2. Turn signal light/Position light

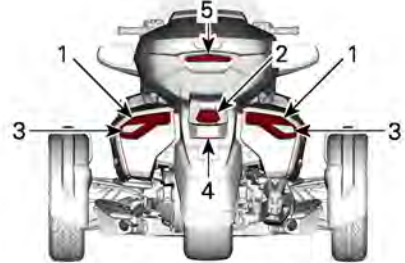**REAR OF VEHICLE**


1. Taillight/Brake light
2. Backup light
3. Turn signal light
4. License plate light
5. Signature light

Limited Models – Special Edition



FRONT OF VEHICLE

- 1. Headlight (HI and LOW)
- 2. Fog lights
- 3. Turn signal light/Position light

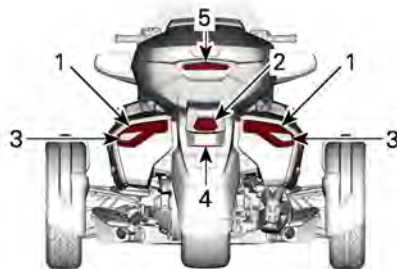

REAR OF VEHICLE

- 1. Taillight/Brake light
- 2. Backup light
- 3. Turn signal light
- 4. License plate light
- 5. Signature light


All Other Countries

S Models



FRONT OF VEHICLE

- 1. Headlight - High beam
- 2. Headlight - Low beam
- 3. Turn signal light/Position light

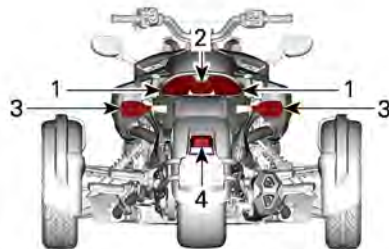

REAR OF VEHICLE

- 1. Taillight/Brake light
- 2. Backup light
- 3. Turn signal light
- 4. License plate light

Limited Models

**FRONT OF VEHICLE**

1. Headlight - High beam
2. Headlight - Low beam
3. Turn signal light/Position light


**REAR OF VEHICLE**

1. Taillight/Brake light
2. Turn signal light
3. Backup light
4. License plate light

REAR TURN SIGNAL LIGHT BULB REPLACEMENT

S Models

1. Remove the lens

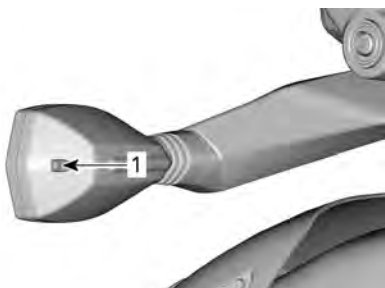


1. *Rear turn signal lens screw*

2. Remove the bulb by pushing in and turning counterclockwise.
3. Install the new bulb by pushing and turning it clockwise.
4. Reinstall the lens.

NOTICE

At installation, tighten screws finger tight.

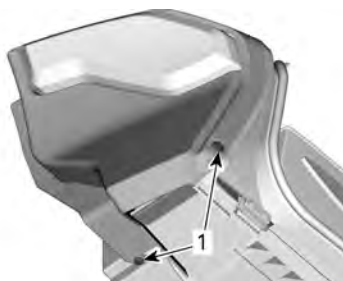

1. *Lower retaining screws*

4. Remove bulb holder from taillight support.



1. *Turn bulb holder clockwise to release it*

T and Limited Models

1. Remove saddlebag from vehicle, refer to *Saddlebags*.
2. Remove upper retaining screw securing taillight support to saddlebag.



1. *Upper retaining screw*

3. Remove lower retaining screws securing taillight support to saddlebag and remove taillight support from saddlebag.

5. Remove the bulb by pushing it in and turning counterclockwise.
6. The installation is the reverse of the removal procedures.

REPLACING THE TAILLIGHT/BRAKE LIGHT BULB (S MODELS)

1. Remove the passenger seat.
2. Rotate the taillight/brake light socket to remove it.

NOTE:


Rotate the center and left bulb sockets counterclockwise. Rotate the right bulb socket clockwise.



3. Remove the bulb by pushing it in and turning counterclockwise.
4. Install the new bulb by pushing it in and turning clockwise.
5. Install the passenger seat.

REPLACING THE BACK-UP LIGHT BULB (S MODELS)


1. Remove the passenger seat.
2. Unscrew and remove the bulb socket.

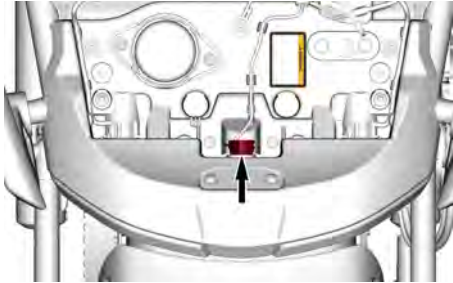


3. Remove the bulb by pushing it in and turning counterclockwise.
4. Install the new bulb by pushing it in and turning clockwise.
5. Reinstall the socket. Make sure it is well locked.
6. Reinstall the passenger seat.

REPLACING THE BACK-UP LIGHT BULB (T MODELS)

1. Remove the passenger seat.
2. Remove both plastic rivets securing the rear fairing.

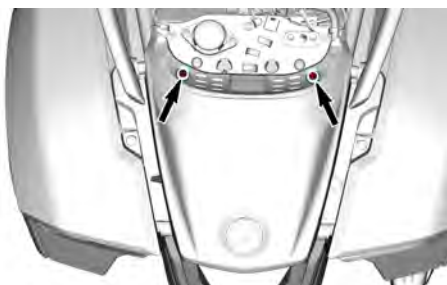


3. Unclip the rear of the fairing and remove it.
4. Unscrew and remove the bulb socket.

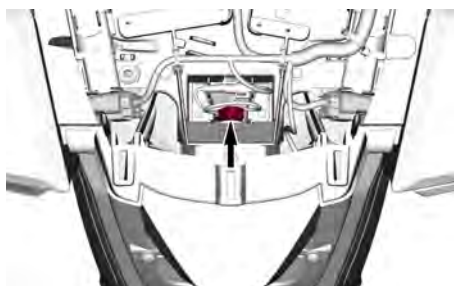

5. Remove the bulb by pushing it in and turning counterclockwise.
6. Install the new bulb by pushing it in and turning clockwise.
7. Reinstall the socket. Make sure it is well locked.
8. Reinstall the rear fairing and the passenger seat.

REPLACING THE BACK-UP LIGHT BULB (LIMITED MODELS)

1. Remove the top storage compartment.
2. Unscrew and remove the bulb socket.

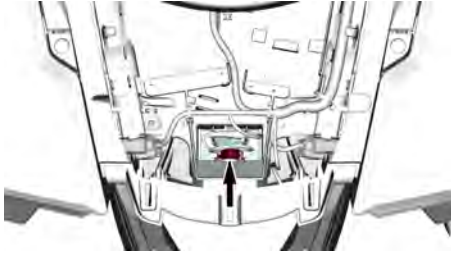

3. Remove the bulb by pushing it in and turning counterclockwise.
4. Install the new bulb by pushing it in and turning clockwise.
5. Reinstall the socket. Make sure it is well locked.
6. Reinstall the top storage compartment.

HOW TO REPLACE A FUSE


If any electrical accessories stop working on the vehicle, check for blown fuses and replace if necessary.

If an electrical failure still occurs, have the vehicle serviced by an authorized Can-Am On-Road dealer.

Fuse Locations

Fuses are located inside the front storage compartment.


To access the fuse boxes, open the front storage compartment.

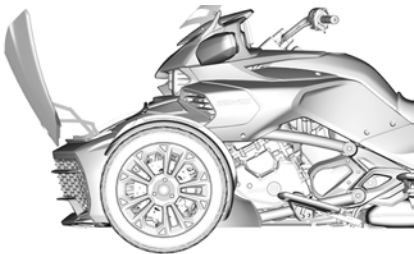

TYPICAL

Remove basket from vehicle, refer to *Body Panels*.

Push down on the tabs and carefully remove the fuse box covers.

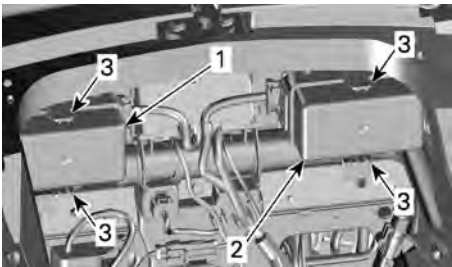

INSIDE FRONT STORAGE COMPARTMENT

- 1. RH fuse box cover
- 2. LH fuse box cover
- 3. Locking tabs

Fuse Description

Refer to labels located on the fuse box covers for correct identification.

NOTE:

In the event of any discrepancy between this document and the vehicle, the labels on the fuse boxes have precedence over the labels shown here.

Left Fuse Box


R1 REVERSE ACTUATOR	R2 PRE-STARTING	F1 15A CLUSTER DLC	F2 10A KICK START KICK START KICK START	F3 10A KICK START KICK START KICK START	F4 20A PUMP	F5 5A IGN	F6 15A ACCESSORY SOCKET	F7 10A PUMP DPS CLUSTER	F8 15A KICK START KICK START KICK START
R3 MAIN ACCESSORIES & ENGINE	R4 ACCESSORIES LIGHTS	R5 FRONT HEATED GRIP	R6 SUSPENSION	J5 NOT USED	J4 40A MAIN CONTROL	J3 40A DPS	J2 25A VCM VALVES	J1 40A VCM PUMP	

Right Fuse Box

R1 HI HEADLAMPS	R2 LO HEADLAMPS	F1 15A HI HEADLAMPS	F2 10A LO HEADLAMPS	F3 15A METER	F4 DPS	F5 25A LOAD SHEDDING	F6 10A ACCESSORIES SOCKET	F7 10A TRAILER	F8 15A NOT USED
R3 COOLING FAN	R4 LOAD SHEDDING	R5 REAR HEATED GRIPS	R6 MAIN HEADLAMPS	J5 20A HI HEADLAMPS	J4 30A LO HEADLAMPS	J3 20A TCM SOLENOIDS	J2 40A ACCESSORIES	J1 30A COOLING FAN	

Alternator Circuit Fuse

The fuse holder is located to the LH of the battery.

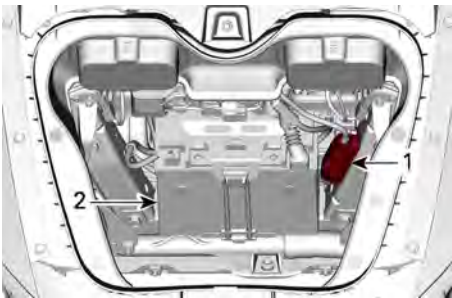


- 1. Fuse holder
- 2. Battery

To check if the fuse is burnt, remove the fuse holder cover, if the metal

section between the two terminals is melted or broken, the fuse is burned.

Alternator	80 A (must be replaced only by an authorized On-road dealer)
------------	--

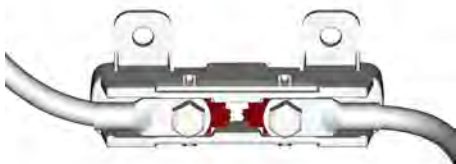


NOTICE

Do not replace a burnt fuse, have the vehicle transported to the nearest authorized Can-Am On--Road dealer, repair shop or person of your choosing.

Inspecting a Fuse

Check fuse condition and replace it if necessary. Refer to *Replacing a Fuse*.

1. To remove fuse from holder, pull fuse out.
2. Check if filament is melted.

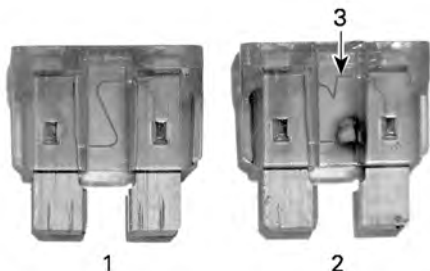


FUSE

1. Good fuse
2. Blown fuse
3. Melted filament

Replacing a Fuse

1. Set the ignition switch to OFF.
2. Pull the fuse out.
3. Check whether the filament is melted.

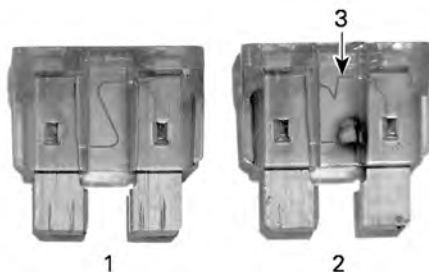

FUSE

1. Good fuse
2. Blown fuse
3. Melted filament
4. Replace the fuse with one with the same rating. Spare fuses are located in the fuse box cover.

NOTICE

Using a higher-rated fuse can cause severe damage and may cause fires.

5. To close the fuse box covers, position covers over fuses and carefully push down until they click.
6. To close the fuse service covers, position covers over fuse boxes and push down carefully until the fuse service covers engage.
7. Install basket and close the front storage compartment.

HOW TO TRANSPORT THE VEHICLE

If your vehicle needs to be transported, it should be carried on a tow truck or a flatbed trailer of the proper size and capacity.

CAUTION

If you need to push the vehicle, do it from the right-hand side to be able to reach the brake pedal. When pulling the vehicle backwards, be careful that the front wheel does not roll over your feet.

NOTICE

This vehicle must always be transport facing forwards.

NOTICE

Do not tow this vehicle — towing can seriously damage the vehicle drive system.


When contacting a towing or transporting service, be sure to ask if they have a flatbed trailer, loading ramp or power ramp to safely lift the vehicle and tie-down straps. Ensure the vehicle is properly transported as specified in this section.

NOTICE

Avoid using chains to tie the vehicle — they may damage the surface finish or plastic components.

To load the vehicle for transport, proceed as follows:


1. Put a strap around the lower arm of each front suspension, as near as possible of the suspension arm end.

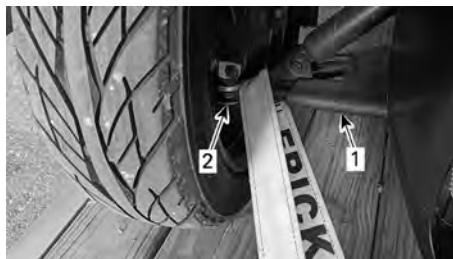

TYPICAL

1. Lower suspension arm
2. Suspension arm end


2. Attach the straps to the winch cable. If possible, use chains or additional straps to attach the straps to the winch cable to avoid damaging the front of the vehicle.
3. Shift the vehicle into NEUTRAL (N).
4. Ensure that the parking brake is released.
5. Pull the vehicle on the tow vehicle or the flatbed trailer with the winch.
6. Engage the parking brake.
7. Ensure that the vehicle is in NEUTRAL (N).
8. Remove the key from the ignition switch.
9. In front, on both sides, put a strap around the lower arm of each front suspension, as near as possible of the suspension arm end.

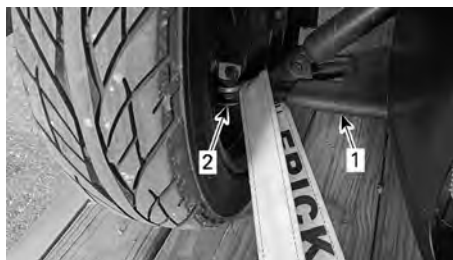

TYPICAL

1. Lower suspension arm
2. Suspension arm end

10. Fasten the straps by crossing them.

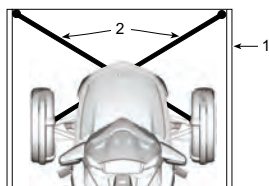


1. Tow truck or flatbed trailer
2. Front tie-down straps

11. In rear, pass a tie-down strap inside the rear wheel rim ONLY.

NOTICE

Passing the tie-down strap inside the rear sprocket may seriously damage the drive system. Pay attention not pinch the wheel air valve.

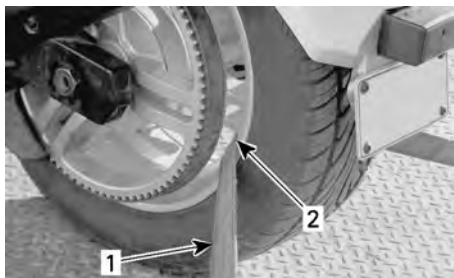

REAR WHEEL ATTACHMENT - TYPICAL

1. Tie-down strap
2. Inside rear wheel rim ONLY

12. Firmly attach the rear wheel tie-down strap to the rear of the trailer.
13. Ensure that both the front and rear wheels are firmly attached to the trailer.

NOTICE

To avoid steering system damages, never try to turn the steering handlebar after strapping the wheels.


TECHNICAL INFORMATION

VEHICLE IDENTIFICATION

The main components of your vehicle (engine and frame) are identified by different serial numbers. It may sometimes become necessary to locate these numbers for warranty purposes or to trace your vehicle in the event of loss. These numbers are required by the authorized Can-Am On-Road dealer to complete warranty claims properly. We strongly recommend that you take note of all the serial numbers on your vehicle and supply them to your insurance company.

Vehicle Identification Number VIN Label

The VIN label is located on the front left side of the swing arm.

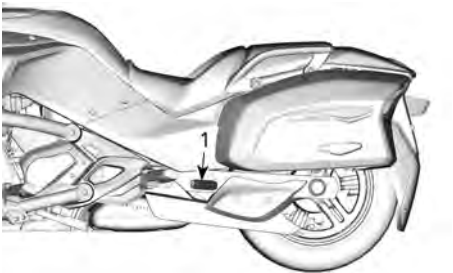

TYPICAL - LOCATION OF VIN

1. Swing arm (VIN label)

Australia



1. VIN (Vehicle Identification Number)
2. Model number

Canada and United States of America




1. VIN (Vehicle Identification Number)
2. Model number

Japan



1. VIN (Vehicle Identification Number)
2. Model number

All Other Countries

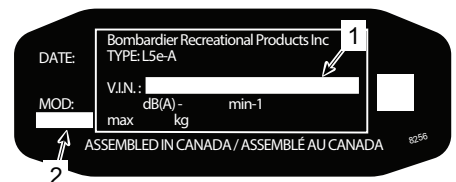

1. VIN (Vehicle Identification Number)
2. Model number

Stamped VIN


A stamped VIN is also available, it is located behind the right front wheel, on the front side member. Check for the label VIN.



1. Stamped VIN label location
2. Stamped VIN label area



Engine Identification Number

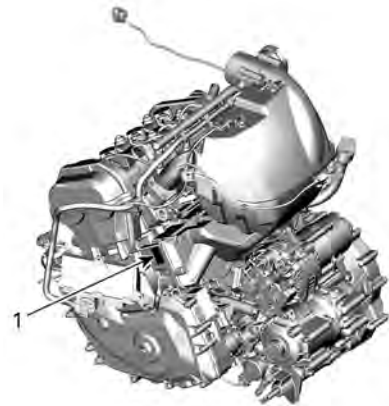

TYPICAL

1. EIN (Engine Identification Number) location

Vehicle Compliance Labels

EPA Compliance Label North American Models

This label is located on the central frame member, under the driver's seat.

VEHICLE EMISSION CONTROL INFORMATION
BOMBARDIER RECREATIONAL PRODUCTS INC.
THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO AN HC+NOx EMISSION STANDARD OF GRAM/KILOMETER. See operator's guide for maintenance specifications.

RENSEIGNEMENT SUR LE DISPOSITIF ANTIPOLLUTION
BOMBARDIER PRODUITS RÉCRÉATIFS INC.
CE VÉHICULE EST CONFORME AUX RÈGLEMENTS DE L'EPA DES É.U. ET DE LA CALIFORNIE APPLICABLES AUX MOTOCYCLETES NEUVES DE L'ANNÉE MODÈLE ET EST CERTIFIÉ À LA NORME D'ÉMISSIONS HC+NOx de GRAMME/KILOMÈTRE. Voir guide du conducteur pour les spécifications de maintenance.

Engine Displacement	Cylindrée
Engine Family	Famille de moteur
Permeation Family	Famille de perméation
Evaporation Family	Famille d'évaporation
Exhaust Emission Control System	Système de contrôle des émissions
Idle Speed	Ralenti moteur
Fuel	Essence

704907628

VACUUM HOSE ROUTING

ENGINE FAMILY:	EVAPORATION FAMILY:
----------------	---------------------

MOTORCYCLE NOISE EMISSION CONTROL INFORMATION
THIS MOTORCYCLE, MEETS U.S. EPA NOISE EMISSION REQUIREMENTS OF dBA AT RPM BY THE FEDERAL TEST PROCEDURE. MODIFICATIONS WHICH CAUSE THIS MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE PROHIBITED BY FEDERAL LAW. SEE OPERATOR'S GUIDE.

TYPICAL - NORTH AMERICAN MODELS - LOCATED UNDER THE SEAT

European Compliance Label

This label is located under the driver's seat.



9561

Deployment of Alternative Fuel Infrastructure Compliance Label Models Outside North America



LOCATED NEAR GAS CAP

NOISE EMISSION CONTROL SYSTEM REGULATION

Tampering with Noise Control System Is Prohibited!

U.S. Federal law and Canadian provincial laws may prohibit the following acts or the causing there of:

1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or
2. The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those Acts Presumed to Constitute Tampering Are the Acts Listed Below:

1. Removal or alteration or the puncturing of the muffler or any engine component which conducts removal of engine exhaust gases.
2. Removal or alteration or the puncturing of any part of the intake system.
3. Replacing any moving parts of the vehicle or parts of the exhaust or intake system, with non-compliant part.
4. Lack of proper maintenance.

BRP RF DESS POST

USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. L'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 11538A-246416

FCC ID: 2ABBF-246416

Mexico



IFETEL

Marca: Minda

Número: BRMIDE22-29473

Modelo: DESS Minda

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Japan

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

Europe

Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/ 53/EU



BG

С настоящото Minda декларира, че този тип радиосъоръжение DESS Minda е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

[HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS](https://ec.europa.eu/docsroom/documents/9781/attachments/1/translations)

CS

Tímto Minda prohlašuje, že typ rádiového zařízení DESS Minda je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

DA

Hermed erklærer Minda, at radioudstyrstypen DESS Minda er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

DE

Hiermit erklärt Minda, dass der Funkanlagentyp DESS Minda der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

EL

Με την παρούσα ο/η Minda, δηλώνει ότι ο ραδιοεξοπλισμός DESS Minda πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

EN

Hereby, Minda declares that the radio equipment type DESS Minda is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

ES

Por la presente, Minda declara que el tipo de equipo radioeléctrico DESS Minda es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

ET

Käesolevaga deklareerib Minda, et käesolev raadioseadme tüüp DESS Minda vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

FI

Minda vakuuttaa, että radiolaitetyyppi DESS Minda on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

FR

Le soussigné, Minda, déclare que l'équipement radioélectrique du type DESS Minda est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

HR

Minda ovime izjavljuje da je radijska oprema tipa DESS Minda u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

HU

Minda igazolja, hogy a DESS Minda típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

IS

Minda lýsir því hér með yfir að þráðlausi fjarskiptabúnaðurinn DESS Minda er í samræmi við tilskipun 2014/53/ESB. Östyttan texta

ESB-samræmisýfirlýsingarinnar er að finna á veffanginu:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

IT

Il fabbricante, Minda, dichiara che il tipo di apparecchiatura radio DESS Minda è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

Liechtenstein

Hiermit erklärt Minda, dass der Funkanlagentyp DESS Minda der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

LT

Aš, Minda, patvirtinu, kad radijo įrenginių tipas DESS Minda atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

LV

Ar šo Minda deklarē, ka radioiekārta DESS Minda atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

MT

B'dan, Minda, niddikjara li dan it-tip ta' tagħmir tar-radju DESS Minda huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

NL

Hierbij verklaar ik, Minda, dat het type radioapparatuur DESS Minda conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

NO

Hermed erklærer Minda at radioutstyrtypen DESS Minda er i samsvar med direktiv 2014/53/EU. Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

PL

Minda niniejszym oświadczam, że typ urządzenia radiowego DESS Minda jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

PT

O(a) abaixo assinado(a) Minda declara que o presente tipo de equipamento de rádio DESS Minda está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

RO

Prin prezenta, Minda declară că tipul de echipamente radio DESS Minda este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

RU

Компания Minda настоящим заявляет, что радиотехническое оборудование категории DESS Minda отвечает требованиям Директивы 2014/53/EU. Полный текст декларации соответствия ЕС доступен на сайте:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

SK

Minda týmto vyhlasuje, že rádiové zariadenie typu DESS Minda je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

SL

Minda potrjuje, da je tip radijske opreme DESS Minda skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

SV

Härmed försäkrar Minda att denna typ av radioutrustning DESS Minda överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<HTTPS://EC.EUROPA.EU/DOCSROOM/DOCUMENTS/9781/ATTACHMENTS/1/TRANSLATIONS>

MULTIFUNCTION GAUGE REGULATORY INFORMATION

Technical Information

Digital Audio Broadcasting:

- Operating frequency range: 174 – 240 MHz

Transmitter:

- BT operating frequency range: 2402 – 2480 MHz
- BT version: 5.0
- BT max transmit power: +8 dBm

Receiver:

- FM operating range: 88 - 108 MHz

Manufacturer and Address

Manufacturer:

- Enovation Controls LLC

Address:

- 5311 S 122nd E. Ave. Tulsa,
OK 74146,
USA

To display the regulatory information on the vehicle digital display, go to **Preferences**, **General** then **About**.

USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 28102-ECB01

FCC ID: 2A3FV-ECB01

RF exposure:

1. The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

2. This equipment must be installed and operated with a separation distance of at least 20 cm from all persons.
3. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Mexico



IFETEL

Marca: Enovation Controls LLC

Número: RCPENOD22-2195

Modelo: OD1025-01

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil



Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL.

Japan

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

Europe

Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/53/EU



DE

Hiermit erklärt Enovation Controls LLC, dass der Funkanlagentyp OD1025-01 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<https://www.brp.com/en/sustainability/product-responsibility.html>

FR

Le soussigné, Enovation Controls LLC, déclare que l'équipement radioélectrique du type OD1025-01 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<https://www.brp.com/en/sustainability/product-responsibility.html>

BG

С настоящото Enovation Controls LLC декларира, че този тип радио-съоръжение OD1025-01 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<https://www.brp.com/en/sustainability/product-responsibility.html>

EL

Με την παρούσα ο/η Enovation Controls LLC, δηλώνει ότι ο ραδιοεξοπλισμός OD1025-01 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<https://www.brp.com/en/sustainability/product-responsibility.html>

CS

Tímto Enovation Controls LLC prohlašuje, že typ rádiového zařízení OD1025-01 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<https://www.brp.com/en/sustainability/product-responsibility.html>

DA

Hermed erklærer Enovation Controls LLC, at radioudstyrstypen OD1025-01 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<https://www.brp.com/en/sustainability/product-responsibility.html>

ET

Käesolevaga deklareerib Enovation Controls LLC, et käesolev raadioseadme tüüp OD1025-01 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<https://www.brp.com/en/sustainability/product-responsibility.html>

ES

Por la presente, Enovation Controls LLC declara que el tipo de equipo radioeléctrico OD1025-01 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<https://www.brp.com/en/sustainability/product-responsibility.html>

FI

Enovation Controls LLC vakuuttaa, että radiolaitetyypin OD1025-01 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<https://www.brp.com/en/sustainability/product-responsibility.html>

EN

Hereby, Enovation Controls LLC declares that the radio equipment type OD1025-01 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.brp.com/en/sustainability/product-responsibility.html>

HR

Enovation Controls LLC ovime izjavljuje da je radijska oprema tipa OD1025-01 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<https://www.brp.com/en/sustainability/product-responsibility.html>

HU

Enovation Controls LLC igazolja, hogy a OD1025-01 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<https://www.brp.com/en/sustainability/product-responsibility.html>

IT

Il fabbricante, Enovation Controls LLC, dichiara che il tipo di apparecchiatura radio OD1025-01 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<https://www.brp.com/en/sustainability/product-responsibility.html>

LT

Aš, Enovation Controls LLC, patvirtinu, kad radijo įrenginių tipas OD1025-01 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<https://www.brp.com/en/sustainability/product-responsibility.html>

LV

Ar šo Enovation Controls LLC deklarē, ka radioiekārta OD1025-01 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<https://www.brp.com/en/sustainability/product-responsibility.html>

MT

B'dan, Enovation Controls LLC, niddikjara li dan it-tip ta' tagħmir tar-radju OD1025-01 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<https://www.brp.com/en/sustainability/product-responsibility.html>

NL

Hierbij verklaar ik, Enovation Controls LLC, dat het type radioapparatuur OD1025-01 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<https://www.brp.com/en/sustainability/product-responsibility.html>

PL

Enovation Controls LLC niniejszym oświadcza, że typ urządzenia radiowego OD1025-01 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<https://www.brp.com/en/sustainability/product-responsibility.html>

PT

O(a) abaixo assinado(a) Enovation Controls LLC declara que o presente tipo de equipamento de rádio OD1025-01 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<https://www.brp.com/en/sustainability/product-responsibility.html>

RO

Prin prezenta, Enovation Controls LLC declară că tipul de echipamente radio OD1025-01 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<https://www.brp.com/en/sustainability/product-responsibility.html>

SV

Härmed försäkrar Enovation Controls LLC att denna typ av radioutrustning OD1025-01 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<https://www.brp.com/en/sustainability/product-responsibility.html>

SL

Enovation Controls LLC potrjuje, da je tip radijske opreme OD1025-01 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<https://www.brp.com/en/sustainability/product-responsibility.html>

SK

Enovation Controls LLC týmto vyhlasuje, že rádiové zariadenie typu OD1025-01 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<https://www.brp.com/en/sustainability/product-responsibility.html>

IS

Enovation Controls LLC lýsir því hér með yfir að þráðlausir fjarskiptabúnaðirinnar OD1025-01 er í samræmi við tilskipun 2014/53/ESB.

Óstýttan texti ESB-samræmisýfirlýsingarinnar er að finna á veffanginu:

<https://www.brp.com/en/sustainability/product-responsibility.html>

Liechtenstein

Hiermit erklärt Enovation Controls LLC, dass der Funkanlagentyp OD1025-01 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<https://www.brp.com/en/sustainability/product-responsibility.html>

NO

Hermed erklærer Enovation Controls LLC at radioutstyret OD1025-01 er i samsvar med direktiv 2014/53/EU.

Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse:

<https://www.brp.com/en/sustainability/product-responsibility.html>

RU

Компания Enovation Controls LLC настоящим заявляет, что радиотехническое оборудование категории OD1025-01 отвечает требованиям Директивы 2014/53/EU.

Полный текст декларации соответствия ЕС доступен на сайте

<https://www.brp.com/en/sustainability/product-responsibility.html>

BRP EUROPEAN DISTRIBUTION SA

BRP recommend to follow the instructions provided by [HTTPS://WWW.RECY-CLERMONVEHICULE.FR/](https://www.recycleclermonvehicule.fr/)

Recycle Mon Véhicule is the only eco-organization approved by public authorities dedicated to the automotive sector, every end-of-life vehicle becomes a source of reusable parts and recycled materials.

The Unique Producer Identifier of BRP European Distribution SA is: FR219503_18XCIB

REP France - TRIMAN

Signage

For France only



FR

**Hors d'usage,
votre véhicule ne doit
pas être abandonné.
Il doit être recyclé
par la filière agréée
par l'État.**

**Apportez-le
ou faites-le collecter
sans frais
par un centre VHU**

quefairedemesdechets.fr

Avant de recycler, privilégiez la réparation

This page is intentionally blank

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS

Because of our ongoing commitment to product quality and innovation, BRP reserves the right, at any time, to make changes in design and specifications and/or to make additions to, or improvements in its products without imposing any obligation upon itself to install them on its previously manufactured products.

ENGINE

Engine type			ROTAX® 1330 ACE, 4-stroke, Dual Over Head Camshaft (DOHC), liquid cooled
Number of cylinders			3
Number of valves			12
Bore			84 mm (3.31 in)
Stroke			80 mm (3.15 in)
Displacement			1 330 cm³ (81.16 in³)
Compression ratio			12:1
Lubrication	Type		Dry sump with separate oil tank and oil cooler
	Engine oil filter		BRP Rotax microglass fibre type, replaceable
	Transmission/HCM oil filter		BRP Rotax multi-layer surface filter, replaceable
	Engine oil capacity	Oil change with new engine filter	4.7 l (5 qt (liq.,US))
		Oil change with new engine and HCM filters	4.9 l (5.2 qt (liq.,US))
	Recommended engine oil		See <i>Recommended Engine Oil</i> in the <i>Maintenance Procedures</i> section of this guide
Clutch	Type		Hydraulic clutch + wet multi-plate clutch automatically controlled by TCM
	Engagement		1100 RPM

Exhaust system	3 into 1 manifold, primary muffler with catalytic converter, with secondary muffler
Air filter	Paper element

GEARBOX

Type	Sequential Electronic 6-speed (SE6) with remote electronic reverse interlock
------	--

COOLING SYSTEM

Type	Liquid cooled, double radiator with cooling fans	
Coolant	Type	See <i>Recommended Engine Coolant</i> in the <i>Maintenance Procedures</i> section of this guide
	Capacity	4.2 l (1.1 gal (liq.,US))

ELECTRICAL SYSTEM

Ignition system type		Electronic ignition with dual output coil
Ignition timing		Not adjustable
Spark plug	Quantity	3
	Make and type	NGK MR7BI-8 (iridium) or equivalent
	Gap	0.7 - 0.8 mm (.028 - .031 in)
Engine RPM limiter setting	Forward	8100 RPM with engaged drivetrain
		7500 RPM with open clutch or on neutral
Battery	Type	Maintenance free
	Voltage	12 volts
	Nominal rating	21 A•h
	Recommended charging rate	2 A

Headlight Hi/Low		LED	
Taillight/brake light	S	5/21W	
	T Limited	LED	
Turn signal lights	Front	LED	
	Rear	S	PY21W
		T Limited	RY10W
Position lights	Front	LED	
License plate light	S	R10W	
	T Limited	LED	
Backup light		LED	
Signature lights (if equipped)		LED	
Fuses		Refer to the labels on the fuse box covers	

FUEL SYSTEM

Fuel delivery	Type	Multi-point Electronic Fuel Injection (EFI) with ETC (Electronic Throttle Control) Single throttle body (54 mm) with an actuator
Fuel pump	Type	Electrical module in fuel tank
Idle speed		900 RPM Electronically controlled, not adjustable
Fuel	Type	Premium unleaded gasoline
	Minimum octane	87 Pump Posted AKI (RON+MON)/2
		92 RON
	Recommended octane	91 Pump Posted AKI (RON+MON)/2
		95 RON
Fuel tank capacity		27 l (7.1 gal (liq.,US))

DRIVE SYSTEM

Final drive type	Carbon reinforced drive belt
Final drive ratio	79/28

STEERING

Type	Dynamic Power Steering (DPS)
------	------------------------------

FRONT SUSPENSION

Suspension type		Double suspension arms with stabilizer bar
Suspension travel		129 mm (5.1 in)
Shock absorber	Qty	2
	Type	SACHS "Big Bore"
Spring preload adjustment		Threaded rings

REAR SUSPENSION

Suspension type	T models	Air ride with manual pressure adjustment Swing arm with monoshock
	Limited models	Air controlled suspension with automatic self leveling adjustment Swing arm with monoshock
	S models	Swing arm with monoshock
Suspension travel		132 mm (5.2 in)
Shock absorber	Qty	1
	Type	SACHS shock twin-tube coil-over
Spring preload adjustment	T models	Adjustable air pressure: 105 to 515 kPa (15 to 75 lbf/in ²)
	All other models	No adjustment

BRAKES

Type		Foot actuated, fully integrated hydraulic 3 wheel braking system with ABS and EBD
Front brake		Dual 270 mm (11 in) rigid discs, radially mounted Brembo monobloc with 4 piston calipers, 2-pad
Rear brake		Single 270 mm (11 in) disc with 1 piston floating caliper with integrated parking brake
Brake fluid	Capacity	480 ml (16.2 fl oz (US))
	Type	DOT 4
Parking brake		Mechanical, electrically actuated to the rear caliper
Minimum brake pad thickness		1 mm (.04 in)
Minimum brake disc thickness		6.4 mm (.252 in)
Maximum brake disc warpage		0.100 mm (.004 in)

TIRES

Type (use only radial tires recommended by BRP)	Front	XPS Roadster 165/55 R15 MC 69H
	Rear	XPS Roadster 225/50 R15 MC 84H
Pressure		Always refer to the <i>Tire Pressure and Maximum Load</i> label. NOTE: The pressure difference between the front tires should not exceed 3.4 kPa (.5 lbf/in ²)
Minimum tire tread depth	Front	1.6 mm (1/16 in)
	Rear	1.6 mm (1/16 in)

WHEELS

Size (diameter X width)	Front	381 x 127 mm (15 x 5 in)
	Rear	381 x 178 mm (15 x 7 in)
Front wheel nuts torque		109 ± 4 Nm (80 ± 3 lbf-ft)
Rear drive axle nut torque		225 ± 15 Nm (166 ± 11 lbf-ft)

DIMENSIONS

Overall length	S models	2 642 mm (104 in)
	T models	2 596 mm (102.2 in)
	Limited	2 820 mm (111 in)
Overall width		1 497 mm (58.9 in)
Overall height	S models	1 099 mm (43.3 in)
	T models Limited models	1 241 mm (48.9 in)
Seat height (top)		675 mm (26.6 in)
Wheel base		1 709 mm (67.3 in)
Front wheel track		1 308 mm (51.5 in)
Ground clearance, front and under engine		115 mm (4.5 in)

WEIGHT AND LOADING CAPACITY

Dry weight	S models	408 kg (899 lb)
	T models	430 kg (948 lb)

		Limited models	448 kg (988 lb)
Front storage compartment	Capacity		24.4 l (6.45 gal(liq.,US))
	Maximum load		6.8 kg (15 lb)
Saddlebags (If equipped)	Right saddlebag capacity		26 l (6.87 gal(liq.,US))
	Left saddlebag capacity		24 l (6.34 gal (liq.,US))
	Maximum load		6.8 kg (15 lb)
Top storage compartment (if equipped)	Capacity		43 l (11.36 gal (liq.,US))
	Maximum load		9 kg (20 lb)
Total vehicle load allowed (including operator, all other loads and added accessories)		S models	199 kg (439 lb)
		T models	199 kg (439 lb)
		Limited models	209 kg (461 lb)
Gross vehicle weight rating (GVWR)		S models	627 kg (1,382 lb)
		T models	648 kg (1,429 lb)
		Limited models	677 kg (1,493 lb)
Gross axle weight rating (GAWR)	Front	S models	336 kg (741 lb)
		T models Limited models	340 kg (750 lb)
	Rear	S models	291 kg (642 lb)
		T models	310 kg (683 lb)

		Limited models	341 kg (752 lb)
Maximum weight on trailer tongue			18 kg (40 lb)
Maximum towed weight (trailer and cargo)	S models		No towing capacity
	T models Limited models		182 kg (400 lb)

This page is intentionally blank

WARRANTY

BRP LIMITED WARRANTY – CANADA AND USA: 2027 CAN-AM® SPYDER® VEHICLE SERIES

1) Scope of the Limited Warranty

Bombardier Recreational Products Inc. (“**BRP**”) warrants its 2027 Can-Am Spyder (“**Product (s)**”) sold by authorized BRP Dealers (as hereinafter defined) in the United States of America (“**USA**”) and in Canada from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner;
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use;
3. the odometer was removed or has been tampered with; or
4. the Product was used off-road.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

2) Limitations of Liability

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/PROVINCES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE, OR PROVINCE TO PROVINCE.

Neither the distributor, any BRP Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

3) EXCLUSIONS–Are Not Warranted

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;

- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Dealer;
- Damage caused by abuse, abnormal use, neglect or operation of the Product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work;
- Damage resulting from corrosion from road salts, battery acid, environmental influences or treatment contrary to the Operator's Guide;
- Damages related to the appearance of the Product, including without limitation scratches, dents, fading, flaking, peeling and damages to seat cover material;
- Damage resulting from the installation of parts with specifications that differ from the original Product parts, such as, without limitation, different tires, exhaust system, wheels or brakes.

4) Warranty Coverage Period

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWENTY-FOUR (24) consecutive months**, for private use owners, except for the items covered in points 3 to 6 below.
2. **TWELVE (12) consecutive months**, for commercial use owners, except for the items covered in points 3 to 6 below.
A Product is used commercially when it is used in connection with any work or employment that generates income during any part of the warranty period. A Product is also used commercially when, at any point during the warranty period, it is licensed for commercial use.
3. For the battery, **SIX (6) CONSECUTIVE MONTHS**.
4. For the tires, **SIX (6) CONSECUTIVE MONTHS** or until tires are worn to the last three thirty-seconds of an inch (3/32") (2.38 millimeters) for the front tires and the last five thirty-seconds of an inch (5/32") (3.97 millimeters) for the rear tire, whichever occurs first.
5. For emission-related components; please also refer to the *US EPA Emission-Performance Warranty* contained herein.
6. For Products produced for sale in the state of California, that are originally sold to residents or subsequently warranty registered to residents in the state of California, please also refer to the applicable *California Emissions Control Warranty Statement*.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this limited warranty beyond its original expiration date.

5) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

1. The Product must be purchased as new and unused by its first owner from a Dealer authorized to sell the Products in the country in which the sale occurred (“Dealer”);
2. The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
3. The Product must have undergone proper registration by an authorized Dealer;
4. The Product must be purchased in the country in which the purchaser resides;
5. Routine maintenance outlined in the Operator’s Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

6) What to Do to Obtain Warranty Coverage

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Dealer within three (3) days of the appearance of the anomaly and provide the Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The customer must also present to the Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

7) What BRP Will Do

BRP’s obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

Without limiting the foregoing, after the end of the warranty period, the parts to repair the Product will be available for purchase by the consumers, at their retail price as shown in dealership or on BRP's website, for a reasonable period after the model year of the Product.

8) Transfer

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized Product Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

9) Consumer Assistance

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

US EPA EMISSIONS PERFORMANCE WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants that if:

1. The Product is maintained and operated in accordance with the written instructions for proper maintenance and use, and
2. The Product fails to conform at any time during its useful life to the applicable emission standards or family emission limits as determined by an EPA-approved emission test, and
3. Such nonconformity results or will result in the Product owner having to bear any penalty or other sanction (including the denial of the right to use the Product) under local, State or Federal law, then BRP shall remedy the nonconformity at no cost to the owner; except that, if the Product has been in operation for more than 5 years or 30,000 kilometers (18,641 miles). BRP shall be required to remedy only those non-conformities resulting from the failure of components which have been installed in or on the Product for the sole or primary purpose of reducing Product emissions and that were not in general use prior to model year 1968.

The warranty period begins on the date the Product is delivered to its ultimate purchase, or if the Product is first placed in service as a "demonstrator" or "company" motorcycle prior to delivery, on the date it is first placed in service.

Items which are covered by the Emissions Performance Warranty for the full useful life of the Product:

Fuel System and Air Admission Systems

- Fuel Injectors, Fuel Pump Module, Fuel Filter Ass'y, Throttle Body (Including Throttle Position Sensor), Air Intake Manifold

Ignition Components and Sensors

- Engine Control Module (ECM), Engine Wiring Harness, Ignition Coils, Spark Plugs (covered only up to the first maintenance replacement), Noise Sensor (Knock Sensor), Camshaft Position Sensor, Crankshaft Position Sensor, Temperature Sensor (Coolant), Pressure And Temperature Sensor, Oxygen Sensors

Exhaust System

- Primary Muffler (Containing Catalytic Converter), Exhaust Manifolds
- Clamps, Gaskets and Seals (from Engine up to Primary Muffler)

Crankcase Ventilation System

- Crankcase Vent Breather, Crankcase Vent Hose, Oil Filler Cap

Evaporative Emission Control System

- Fuel Tank, Fuel Cap, Fuel Hose, Vapor Canister, Vapor Canister Mounting Bracket, Bleed Valve (Purge Valve), Check Valve, Filters, Evaporative Components Mounting Brackets
- Clamp, Seal, Gasket and Fitting (associated with fuel system assembly)

See maintenance information section in this operator's guide for proper maintenance.

This operator's guide contains information for proper use of the Product.

Under the Emissions Performance Warranty, BRP shall be liable for the total cost of the remedy for any Product validly presented for repair to any authorized Can-Am On-Road dealer, unless for emergency repairs as required by item 2 of the following list. State or local limitations as to the extent of the penalty or sanction imposed upon an owner of a failed Product shall have no bearing on this liability.

In no case may BRP deny an emission performance warranty claim on the basis of:

1. Warranty work or predelivery service performed by any facility authorized by BRP to perform such work or service; or
2. Work performed in an emergency situation to rectify an unsafe condition, including an unsafe driveability condition, attributable to BRP, provided the Product owner has taken steps to put the Product back in a conforming condition in a timely manner; or
3. The use of any uncertified part or non-compliance with any written instruction for proper maintenance and use which is not relevant to the reason that the Product failed to comply with applicable emission standards; or
4. Any cause attributable to BRP; or
5. The use of any fuel which is commonly available in the geographical area in which the Product is located, unless the written instructions for proper maintenance and use specify that the use of that fuel would adversely affect the emission control devices and systems of the Product, and there is commonly available information for the owner to identify the proper fuel to be used. See maintenance information section and fuel requirements of fueling section.

Except as stated in the previous items; BRP may deny an emission performance warranty claim on the basis of an uncertified aftermarket part used in the maintenance or repair of a Product if the use of the uncertified part caused the Product's failure to meet emission standards. The use of parts not equivalent to the original parts or uncertified aftermarket parts may have a negative impact on the effectiveness of the emission control system and results in the Product's failure to meet emission standards. The use of certified parts does not affect the emission performance warranty. **Maintenance, replacement, or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using any certified part.**

As soon as you become aware of a defect; you are responsible for presenting your Product to an authorized Can-Am On-Road dealer. Authorized Can-Am On-Road dealer will proceed with the warranty claim.

In the case an authorized Can-Am On-Road dealer is unable (for reasons not attributable to the Product owner or events beyond the control of BRP or an authorized Can-Am On-Road dealer) to repair a Product within 30 days after the initial presentation of the Product to an authorized Can-Am On-Road dealer, then the owner shall be entitled to have the warranty remedy performed, at the expense of BRP, by any repair facility of the owner's choosing.

All defective parts replaced under this warranty become the property of BRP.

Contact the Director, Field Operations and Support Division (6406J), Environmental Protection Agency, 401 "M" Street, SW., Washington, DC 20460 (Attention: Warranty Claim) for further information concerning the Emissions

Performance Warranty or to report a violations of the terms of the Emissions Performance Warranty.

Bombardier Recreational Products Inc. (“BRP”) * also warrants to the ultimate purchaser and each subsequent purchaser that this new Product, including all parts of its exhaust emission-control system and its evaporative emission-control system, meets two conditions:

- It is designed, built, and equipped so it conforms at the time of sale to the ultimate purchaser with the requirements of 40 CFR 86 and with the evaporative emission standards of 40 CFR 1051, as applicable to onroad motorcycles.
- It is free from defects in materials and workmanship that may keep it from meeting the requirements of 40 CFR 86 and with the evaporative emission standards of 40 CFR 1051, as applicable to onroad motorcycles.

Where a warrantable condition exists, BRP will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine’s emissions of any regulated pollutant within the stated warranty period at no cost to the owner, including expenses related to diagnosing and repairing or replacing emission-related parts.

The emission-related warranty is valid for the following period whichever comes first:

	Kilometers/Mile	Years
Exhaust and Evaporative emission-related components	30 000 / 18,641	5

US EPA FEDERAL NOISE EMISSION WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants to the ultimate purchaser and each subsequent purchaser that this new Product, at time of sale, was designed, built and equipped to meet all applicable US EPA Federal noise control standards and is free from defects in materials and workmanship that may keep it, when properly maintained and used, from meeting the requirements of all applicable US EPA Federal noise standards for the following period whichever comes first:

Kilometers/Miles	Years
6,000/3,730	1

CALIFORNIA EMISSION CONTROL SYSTEM WARRANTY

California Emission Control System Warranty Statement Your Warranty Rights and Obligations

The California Air Resources Board and BRP US Inc. ("BRP") are pleased to explain the emission control system warranty on your 2027 Can-Am On-road vehicle. In California, new motor vehicles must be designed, built, and equipped to meet the State's stringent anti-smog standards. BRP must warrant the emission control system on your vehicle for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your vehicle.

Your emission control system may include parts such as the fuel-injection system, ignition system, catalytic converter, and engine computer. Also included may be hoses, connectors, and other emission-related assemblies. Where a warrantable condition exists, BRP will repair your vehicle at no cost to you including diagnosis, parts, and labor.

Manufacturer's Warranty Coverage

5 years or 30 000 km (18,641 mi), whichever first occurs.

Owner's Warranty Responsibilities

- As the vehicle owner, you are responsible for the performance of the required maintenance listed in your owner's manual. BRP recommends that you retain all receipts covering maintenance on your vehicle, but BRP cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.
- You are responsible for presenting your vehicle to a BRP dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.
- As the vehicle owner, you should also be aware that BRP may deny you warranty coverage if your vehicle or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact:

- BRP's customer assistance center at 1-888-272-9222 or,
- The California Air Resources Board at 4001 Iowa Avenue, Riverside, CA 92507.

California Emission Control System Defects Warranty General Emissions Defects Warranty Coverage

BRP warrants to the owner that the vehicle:

- is designed, built, and equipped so as to conform, at the time of sale, with all applicable regulations adopted by the Air Resources Board pursuant to its authority in chapters 1 and 2, part 5, division 26 of the Health and Safety Code; and
- is free from defects in materials and workmanship which cause the failure of a warranted part to be identical in all material respects to that part as described in the vehicle manufacturer's application for certification.

This warranty begins on the date the vehicle is delivered to the first purchaser other than an authorized dealer, or the date it is first used as a demonstrator, lease, or company vehicle, whichever comes first and continues for the time or mileage listed below.

The Emissions Control System Defects Warranty is in addition to BRP Limited Warranty.

The warranty on emissions-related parts shall function as follows:

1. Any warranted part which is not scheduled for replacement as required maintenance in the written instructions shall be warranted for the warranty period defined below. If any such part fails during the warranty period, it shall be repaired or replaced by BRP. Any such part repaired or replaced under warranty shall be warranted for the remaining warranty period.
2. Any warranted part which is scheduled only for regular inspection in the written instructions shall be warranted for the warranty period defined below. A statement in such written instructions to the effect of "repair or replace as necessary" shall not reduce the period of warranty coverage. Any such part repaired or replaced under warranty shall be warranted for the remaining warranty period.
3. Any warranted part which is scheduled for replacement as required maintenance in the written instructions shall be warranted for the period of time or mileage, whichever first occurs, prior to the first scheduled replacement point for that part. If the part fails before the first scheduled replacement point, the part shall be repaired or replaced by BRP. Any such part repaired or replaced under warranty shall be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
4. Repair or replacement of any warranted part shall be performed at no charge to the vehicle owner, at a warranty station, except in the case of an emergency when a warranted part or a warranty station is not reasonably available to the vehicle owner. In an emergency, repairs may be performed at any available service establishment, or by the owner, using any replacement part. BRP shall reimburse the owner for his or her expenses including diagnostic charges for such emergency repair or replacement, not to exceed the manufacturer's suggested retail price for all warranted parts replaced and labor charges based on the manufacturer's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate. A vehicle owner may reasonably be required to keep receipts and failed parts in order to receive compensation for warranted repairs reimbursable due to an emergency, provided the manufacturer's written instructions advise the owner of his obligation.
5. Warranty services or repairs shall be provided at all BRP's dealership which are franchised to service the subject vehicles.
6. The vehicle owner shall not be charged for diagnostic labor which leads to the determination that a warranted part is in fact defective, provided that such diagnostic work is performed at a warranty station.
7. BRP shall be liable for damages to other vehicle components proximately caused by a failure under warranty any warranted part.
8. The lack of availability of such parts or the incompleteness of repairs within a reasonable time period, not to exceed 30 days from the time the vehicle is initially presented to the warranty station for repair, shall constitute an emergency.

9. Any replacement part may be used in the performance of any maintenance or repairs. Any replacement part designated by a manufacturer may be used in warranty repairs provided without charge to the vehicle owner. Such use shall not reduce the warranty obligations of the vehicle or engine manufacturer, except that BRP shall not be liable for repair or replacement of any replacement part which is not a warranted part (except as provided under subsection (7)).
10. Any add-on or modified part exempted by the Air Resources Board from the prohibitions of section 27156 of the California Vehicle Code may be used on a vehicle. Such use, in and of itself, shall not be grounds for disallowing a warranty claim made in accordance with this article. BRP shall not be liable under this article to warrant failures of warranted parts caused by the use of an add-on or modified part.

Warranty Period

5 years or 30 000 km (18 641 mi), whichever first occurs.

Exclusions

The repair or replacement of any warranted part otherwise eligible for warranty coverage, shall be excluded for such warranty coverage if BRP demonstrates that the vehicle has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for the repair or replacement.

Except as provided above, any adjustment of a component which as a factory installed, and properly operating, adjustment limiting device is eligible for warranty coverage.

Manufacturer's Warranty Coverage

5 years or 30 000 km (18,641 mi), whichever first occurs.

Parts Covered

Fuel System and Air Admission Systems

- Fuel Injectors, Fuel Pump Module, Fuel Filter Assembly, Throttle Body (including Throttle Position Sensor), Air Intake Manifold.

Ignition Components and Sensors

- Engine Control Module (ECM), Engine Wiring Harness, Ignition Coils, Spark Plugs (covered only up to the first maintenance replacement), Noise Sensor (Knock Sensor) Camshaft Position Sensor, Temperature Sensor (Coolant) Pressure and Temperature Sensor, Oxygen Sensors.

Exhaust System

- Primary Muffler (Containing Catalytic Converter) Exhaust Manifolds.
- Clamps, Gaskets and Seals (From Engine up to Primary Muffler).

Crankcase Ventilation System

- Crankcase Vent Breather, Crankcase Vent Hose, Oil Filler Cap.

Evaporative Emission Control System

- Fuel Tank, Fuel Cap, Fuel Hose, Vapor Canister, Vapor Canister Mounting Bracket, Bleed Valve (Purge Valve), Check Valve, Filters, Evaporative Components Mounting Brackets.
- Clamp, Seal, Gasket, and Fitting (associated with fuel system assembly).

See maintenance information section in this operator's guide for proper maintenance, This Operator's guide contains information for proper use of the vehicle.

BRP INTERNATIONAL LIMITED WARRANTY : 2027 CAN-AM® SPYDER® SERIES

1) Scope of the Limited Warranty

Bombardier Recreational Products Inc. ("BRP") warrants its 2027 Can-Am Spyder ("Product (s)") sold by distributors or dealers authorized by BRP to distribute the Products outside of the United States of America ("USA"), Canada, member states of the European Economic Area (which is comprised of the states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) ("EEA"), member states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) ("CIS") and Turkey from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner;
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use;
3. the odometer was removed or has been tampered with; or
4. the Product was used off-road.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

2) Limitation of Liability

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/PROVINCES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM COUNTRY TO COUNTRY. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REASONS OUTSIDE OF BRP'S CONTROL.

For Products purchased in Australia, refer to the Australia specific section below.

Neither the distributor, any BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforce- able against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

3) EXCLUSIONS – Are Not Warranted

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Distributor/Dealer;
- Damage caused by abuse, abnormal use, neglect or operation of the Product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work;
- Damage resulting from corrosion from road salts, battery acid, environmental influences or treatment contrary to the Operator's Guide;
- Damages related to the appearance of the Product, including without limitation scratches, dents, fading, flaking, peeling and damages to seat cover material;
- Damage resulting from the installation of parts with specifications that differ from the original Product parts, such as, without limitation, different tires, exhaust system, wheels or brakes.

4) Warranty Coverage Period

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWENTY-FOUR (24) consecutive months**, for private use owners, except for the items covered in points 3 and 4 below.
2. **TWELVE (12) consecutive months**, for commercial use owners, except for the items covered in points 3 and 4 below.
3. A Product is used commercially when it is used in connection with any work or employment that generates income during any part of the warranty period. A Product is also used commercially when, at any point during the warranty period, it is licensed for commercial use.
4. For the battery, **SIX (6) consecutive months**.
5. For the tires, **SIX (6) consecutive months** or until tires are worn to the last three thirty-second of an inch (3/32") (2.38 millimeters) for the front tires and the last five thirty-second of an inch (5/32") (3.97 millimeters) for the rear tire, whichever occurs first.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

FOR PRODUCTS SOLD IN AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Nothing in these Warranty terms and conditions should be taken to exclude, restrict or modify the application of any condition, warranty, guarantee, right or remedy conferred or implied under the Competition and Consumer Act 2010 (Cth), including the Australian Consumer Law or any other law, where to do so would contravene that law, or cause any part of these terms and conditions to be void. The benefits given to you under this limited warranty are in addition to other rights and remedies that you have under Australian law.

5) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

- The Product must be purchased as new and unused by its first owner from a Distributor/Dealer authorized to distribute Products in the country in which the sale occurred (“Distributor/Dealer”);
- The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
- The Product must have undergone proper registration by an authorized Distributor/Dealer;
- The Product must be purchased in the country in which the purchaser resides;
- Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

6) What to Do to Obtain Warranty Coverage

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Distributor/Dealer within two (2) months of the

appearance of the anomaly and provide the Distributor/Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The notification period is subject to the applicable national or local legislation in customer's country.

The customer must also present to the BRP Distributor/Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

7) What BRP Will Do

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Distributor/Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

8) Transfer

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized Product Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

9) Consumer Assistance

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

BRP LIMITED WARRANTY FOR THE EUROPEAN ECONOMIC AREA, THE COMMONWEALTH OF THE INDEPENDENT STATES AND TURKEY: 2027 CAN-AM® SPYDER® SERIES

1) Scope of the Limited Warranty

Bombardier Recreational Products Inc. (“BRP”) warrants its 2027 Can-Am Spyder (“**Product (s)**”) sold by distributors or dealers authorized by BRP to distribute the Product in member states of the European Economic Area (which is comprised of the states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) (“**EEA**”), member states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) (“**CIS**”) and Turkey (a “**Distributor/Dealer**”) from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner;
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use;
3. the odometer was removed or has been tampered with; or
4. the Product was used off-road.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

2) Limitations of Liability

TO THE EXTEND PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM JURISDICTION TO JURISDICTION. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REASONS OUTSIDE OF BRP’S CONTROL.

For Products purchased in France, refer to the France specific section below.

Neither the distributor, any BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

3) EXCLUSIONS – Are Not Warranted

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Distributor/Dealer;
- Damage caused by abuse, abnormal use, neglect or operation of the Product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work.
- Damage resulting from corrosion from road salts, battery acid, environmental influences or treatment contrary to the Operator's Guide
- Damages related to the appearance of the Product, including without limitation scratches, dents, fading, flaking, peeling and damages to seat cover material.
- Damage resulting from the installation of parts with specifications that differ from the original Product parts, such as, without limitation, different tires, exhaust system, wheels or brakes.

4) Warranty Coverage Period

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWENTY-FOUR (24) consecutive months**, for private use owners, except for the items covered in points 3 and 4 below.
2. **TWELVE (12) consecutive months**, for commercial use owners, except for the items covered in points 3 and 4 below.
A Product is used commercially when it is used in connection with any work or employment that generates income during any part of the warranty period. A Product is also used commercially when, at any point during the warranty period, it is licensed for commercial use.
3. For the battery, **SIX (6) consecutive months**.

4. For the tires, **SIX (6) consecutive months** or until tires are worn to the last three thirty-second of an inch (3/32") (2.38 millimeters) for the front tires and the last five thirty-second of an inch (5/32") (3.97 millimeters) for the rear tire, whichever occurs first.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

5) For Products Sold In France Only

The seller shall deliver goods that are complying with the contract and shall be responsible for defects existing upon delivery. The seller shall also be responsible for defects resulting from packaging, assembling instructions or the installation when it is its responsibility per the contract or if accomplished under its responsibility. To be compliant with the contract, the good shall:

1. Be fit for normal use for goods similar thereto and, if applicable:
 - Correspond to the description provided by the seller and have the qualities presented to the buyer though sample or model;
 - Have the qualities that a buyer may legitimately expect considering the public declarations of the seller, the manufacturer of its representative, including in advertising or labeling; or
2. Have the characteristics mutually agreed upon as between the parties or be fit for the specific use intended by the buyer and brought to the attention of the seller and which were accepted by the seller.

The action for failure to comply is prescribed after two years after delivery of the goods. The seller is responsible for the warranty for hidden defects of the good sold if such hidden defects are rendering the good unfit for the intended use, or if they diminish its use in such a way that the buyer would not have acquired the good or would have given a lesser price, had he known. The action for such hidden defects shall be taken by the buyer within 2 years of the discovery of the defect.

6) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

1. The Product must be purchased as new and unused by its first owner from a Distributor/Dealer authorized to distribute the Product in the country, or in the case of the EEA union of countries, in which the sale occurred ("Distributor/Dealer");
2. The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
3. The Product must have undergone proper registration by an authorized Distributor/Dealer;

4. The Product must be purchased in the country, or in the case of the EEA union of countries, in which the purchaser resides;
5. Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

7) What to Do to Obtain Warranty Coverage

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Distributor/Dealer within two (2) months of the appearance of the anomaly and provide the Distributor/Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The notification period is subject to the applicable national or local legislation in customer's country.

The customer must also present to the Distributor/Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

8) What BRP Will Do

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Distributor/Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, or for EEA residents if service is required outside of the EEA, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

9) Transfer

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized Product Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

10) Consumer Assistance

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

CUSTOMER INFORMATION

DATA PRIVACY INFORMATION

DATA PRIVACY INFORMATION

Bombardier Recreational Products inc., its affiliates and subsidiaries ("BRP") is committed to protecting your privacy. This notice is to inform you about how we collect, use and disclose your personal information in the course of managing our relationship with you. More details can be found by visiting the BRP's Privacy Policy website.

*[HTTPS://BRP.COM/EN/
PRIVACY-POLICY.HTML](https://brp.com/en/privacy-policy.html)*



Please be assured that we have appropriate measures in place to ensure that your personal information is kept secured and protected against unauthorized access, use or disclosure.

The personal information we hold about you is collected either directly from you or through our authorized dealers and third parties (e.g. with whom we offer services or engage in joint-marketing activities), and includes:

- Contact, Demographic & Registration Information (e.g., name, full address, phone number, email, ownership history, language of communication)
- Transactional Information (e.g., information necessary to handle returns, payment information when you purchase our products or services through our websites or mobile applications and other issues related to your purchase of BRP products).
- Vehicle Information (e.g., serial number, vehicle identification number, mileage, purchase and delivery date, unit usage, vehicle location and movements)
- Your comments, opinions and reviews of our products and services
- Information collected automatically when you navigate on BRP or dealer's websites or mobile apps collected via cookies and similar technologies (e.g., IP address, type of device, operating system, browser type, webpages you view).

We may also receive information about you from social media platforms when you interact with us on those platforms.

We use your personal information for various reasons, mostly to:

- Manage your order of BRP products and services (e.g., to complete or deliver your order, or service your BRP product)
- Provide customer support, assistance, and after-sales (e.g., complete or follow up with you about your order or maintenance, help with any delivery issues, handle returns, and other issues related to your purchase of BRP products)
- Manage your BRP products registration, warranty, security, safety recall, and dispute resolution (e.g. to offer warranty and after-sales service to you, protect your security and safety, perform safety recalls)
- Send you commercial communications about our products and services (e.g. inform you about new BRP products, services or features; share news about contests, promotions, and events or discuss products or services offered by BRP that may be of interest to you)

- Offer you personalized experience, content, or offers and services based on profiling or geolocation technologies (e.g. to notify you when your vehicle may need servicing, to locate your nearest dealership)
- Perform data analytics and statistics data that no longer identifies you personally, for business intelligence and have insights on how to improve our products and services
- Prevent, detect, and control fraud and any unauthorized or illegal activities (e.g., to detect and control fraud in relation to BRP products or services purchase; manage illegal or unauthorized activities and cyberthreats)
- Comply with applicable laws and regulations.

Your personal information may be disclosed to the following: BRP, BRP's authorized dealerships, distributors, service providers, advertising & market research partners and other authorized third parties.

Depending on the circumstances, your personal information may be communicated outside the region where you reside. Your personal information is retained only for as long as necessary for the purpose for which we obtained it and according to our retention policies.

To exercise your data privacy rights (e.g. right of access, right of rectification), to withdraw your consent in order to be removed from the address list for marketing purposes or for the satisfaction survey or for general data privacy questions, please contact BRP's Data Protection Officer at or by mail at privacyofficer@brp.com or by mail at: BRP Legal Service, 726 St-Joseph, Valcourt, Quebec, Canada, J0E 2L0.

When BRP processes your personal information, they do so in compliance with its Privacy Policy available at:

[HTTPS://BRP.COM/EN/
PRIVACY-POLICY.HTML](https://brp.com/en/privacy-policy.html)



CONTACT US

www.brp.com

Asia Pacific

BRP Asia

107D and 107E, 17/F, Tower 1,
Grand Century Place, Mongkok,
Kowloon, Hong Kong

Australia

Level 26
477 Pitt Street
Sydney, NSW 2020

China

上海市徐汇区衡山路10号6号楼301
Rm 301, Building 6,
No.10 Heng Shan Rd,
Shanghai, China

Japan

21F Shinagawa East One Tower
2-16-1 Konan, Minato-ku-ku,
Tokyo 108-0075

Europe, Middle East and Africa

Belgium

Oktrooiplein 1
9000 Gent

Czech Republic

Stefanikova 43a
Prague 5
150 00

Germany

Alte Papierfabrik 16
D-40699 Erkrath

Finland

Isoaavantie 7
PL 8040
96101 Rovaniemi

France

Arteparc Bâtiment B
Route de la côte d'Azur, Le Canet
13 590 Meyreuil

Norway

Ingvald Ystgaards veg 15

N-7484 Trondheim

Sweden

Spinnvägen 15
903 61 Umeå

Switzerland

Avenue d'Ouchy 4-6
1006 Lausanne

Latin America

Brazil

Rua Odila Maia Rocha Brito, 25
Edifício Beaumont, andar 1 ao 5
CEP 13092-110 Campinas -SP

Mexico

Av. Ferrocarril 202
Parque Industrial Querétaro
Santo Rosa Jauregui, Querétaro
C.P. 76220

North America

Canada

3200A, rue King Ouest,
Suite 300
Sherbrooke (Québec) J1L 1C9

United States of America

10101 Science Drive
Sturtevant, Wisconsin
53177

CHANGE OF ADDRESS AND OWNERSHIP

If your address has changed or if you are the new owner of the vehicle, be sure to notify BRP by either:

- Notifying an authorized Can-Am dealer.
- **North America Only:** calling at 1 888 272-9222.
- Mailing one of the change of address cards on the following pages at one of the BRP addresses indicated in the *Contact Us* section of this guide.

In case of change of ownership, please join a proof that the former owner agreed to the transfer.

Notifying BRP, even after the expiration of the limited warranty, is very important as it enables BRP to reach the vehicle owner if necessary, like when safety recalls are initiated. It is the owner's responsibility to notify BRP.

STOLEN UNITS: If your personal vehicle is stolen, you should notify BRP or an authorized Can-Am dealer. We will ask you to provide your name, address, phone number, the vehicle identification number and the date it was stolen.

This page is
intentionally blank

This page is
intentionally blank

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

NOTE: _____

Model No. _____

VEHICLE

IDENTIFICATION NUMBER (V.I.N.) _____

ENGINE

IDENTIFICATION NUMBER (E.I.N.) _____

Owner: _____

NAME

No.

STREET

APT

CITY

STATE/PROVINCE

ZIP/POSTAL CODE

Purchase Date _____

YEAR

MONTH

DAY

Warranty Expiry Date _____

YEAR

MONTH

DAY

To be completed by the dealer at the time of the sale.

DEALER IMPRINT AREA

WARNING

This Can-Am On-road product is a different type of vehicle. It requires special skills and knowledge. Learn how this product is different.

- BEFORE YOU OPERATE THIS VEHICLE, READ THIS OPERATOR'S GUIDE, ALL ON PRODUCT SAFETY LABELS AND WATCH THE SAFETY VIDEO.



- COMPLETE a training course (if available), practice, become proficient with the controls, and get a proper license.
- REFER to the Safety Card before riding.

- ALWAYS WEAR A HELMET AND RIDING GEAR. With this type of vehicle, riders are exposed to more road risks than in a car. Even skilled operators can be struck by other vehicles or lose control. This vehicle will not protect you in a crash.

- HANDLING LIMITS AND ROAD CONDITIONS. The Vehicle Stability System (VSS) cannot stop you from losing control, flipping over, or falling off if you exceed this vehicle's limits. Know the limits for different road conditions. Do not ride on ice, snow, or off road. Avoid puddles and running water. This type of vehicle can hydroplane on water and slip on gravel, dirt and sand covered roads. If you must go through these road conditions, slow down.

®TM and the BRP logo are trademarks of BOMBARDIER RECREATIONAL PRODUCTS INC. or its affiliates.

©2026 BOMBARDIER RECREATIONAL PRODUCTS INC. ALL RIGHTS RESERVED.

www.brp.com



ski-doo ***LYNX*** ***SEA-DOO*** ***can-am*** ***ROTAX***

219002580