


1985

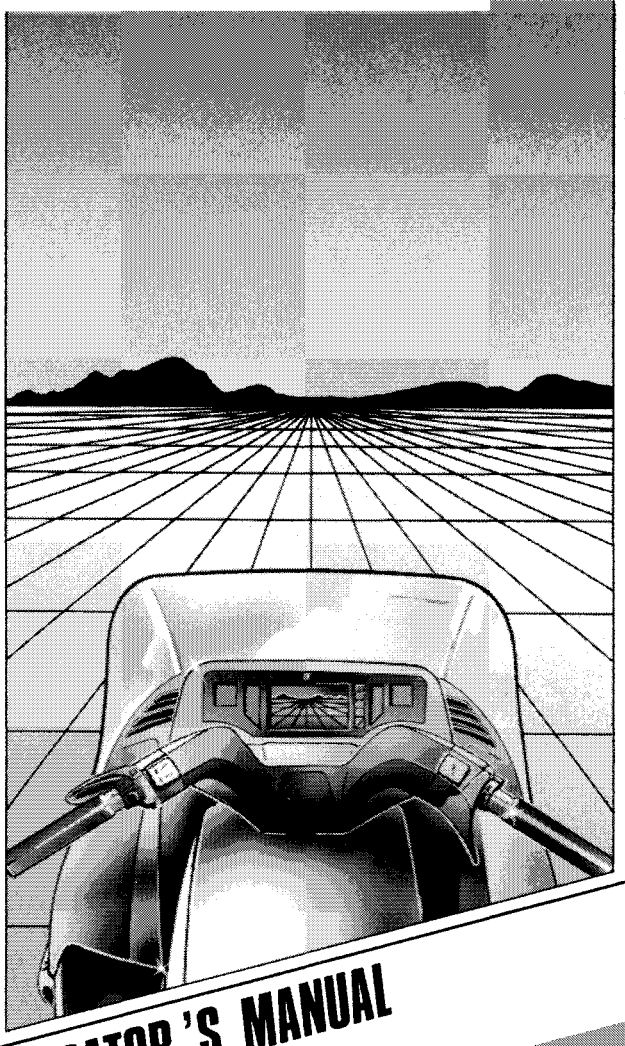

**OPERATOR'S MANUAL**

**Citation**  
LS, LSE

**Tundra / It**

414 5232 00

model \_\_\_\_\_

V.I.N. \_\_\_\_\_

purchase date \_\_\_\_\_

warranty expiry date \_\_\_\_\_

To be completed by dealer at time of sale

DEALER IMPRINT AREA

AFTER SALES SERVICE  
BOMBARDIER INC.  
VALCOURT, QUEBEC  
CANADA, JOE 2L0



The following are trademarks of Bombardier Inc.

|                    |           |             |
|--------------------|-----------|-------------|
| BOMBARDIER         | EVEREST   | MOTO-SKI®   |
| SKI-DOO®           | CITATION  | FUTURA      |
| ALPINE             | OLYMPIQUE | SPIRIT      |
| BLIZZARD           | T'NT      | NUVIK       |
| CARRY-BOOSE        |           | MIRAGE      |
| ELAN               | SKANDIC   | SUPER SONIC |
| ELITE              | SAFARI    | ULTRA SONIC |
| GRAND PRIX SPECIAL |           | SONIC       |
| FORMULA            |           |             |


# FOREWORD


---


The operator manual and the Snowmobile Safety Handbook have been prepared to acquaint the owner / operator of a new snowmobile with the various vehicle controls, maintenance and safe operating instructions. Each is indispensable for the proper use of the product, and should be kept with the vehicle at all times.

Should you have any questions pertaining to the warranty and its application, please consult the "Often Asked Question" section of this manual, or your selling dealer.


This manual uses the following symbols.

 **WARNING:** Identifies an instruction which, if not followed, could cause personal injury.

 **CAUTION:** Denotes an instruction which, if not followed, could severely damage vehicle components.

 **NOTE:** Indicates supplementary information needed to fully complete an instruction.

Although the mere reading of such information does not eliminate the hazard, your understanding of the information will promote its correct use.

 **WARNING:** The engines and the corresponding components identified in this manual should not be utilized on product(s) other than those mentioned on the cover page of this manual.

Most specifications are given in both metric and customary units. Where precise accuracy is not required, some conversions are rounded to even numbers for easier use.

A shop manual can be obtained for complete service, maintenance and repair information.

# SAFETY IN MAINTENANCE

---

## Observe the following precautions:

- Throttle mechanism should be checked for free movement before starting engine.
- Engine should be running only when belt guard and/or pulley guard is secured in place.
- Never run the engine without drive belt installed. Running an unloaded engine can prove to be dangerous.
- Never run the engine when the track is raised off the ground.
- It can be dangerous to run engine with the hood removed.
- Gasoline is flammable and explosive under certain conditions. Always manipulate in a well ventilated area. Do not smoke or allow open flames or sparks in the vicinity. If gasoline fumes are noticed while driving, the cause should be determined and corrected without delay.
- Maintain your vehicle in top mechanical condition at all times.
- Your snowmobile is not designed to be driven or operated on black top, bare earth, or other abrasive surfaces. On such surfaces abnormal and excessive wear of critical parts is inevitable.
- Your snowmobile is not designed to be operated on public streets, road or highways. In most States and Provinces, it is considered an illegal operation.
- Installation of other than standard equipment, including ski-spreaders, bumpers, pack racks, etc., could severely affect the stability and safety of your vehicle. Avoid adding on accessories that alter the basic vehicle configuration.
- The snowmobile engine can be stopped by activating the emergency cut-out switch, tether switch or by turning off the key.
- Whenever the vehicle is parked outdoors, overnight or for a long period, it is suggested to protect it against the inclemency of the weather with a snowmobile cover.
- Do not lubricate throttle and/or brake cables and housings.
- Only perform procedures as detailed in this manual. Unless otherwise specified, engine should be turned OFF for all lubrication and maintenance procedures.
- Clean and check operation of the headlight, taillight and brake light.
- These vehicles are designed for the driver only. No provisions have been made for a passenger.
- Should removal of a nylon lock nut be required when undergoing repairs/disassembly, always replace by new ones. Tighten as specified in the applicable Shop Manual.

---

PLEASE READ AND UNDERSTAND ALL WARNINGS AND CAUTIONS IN THIS MANUAL AND ON THE VEHICLE.

---

This vehicle is built with parts dimensioned in the metric system. All fasteners are metric and must not be replaced by customary fasteners. Mismatched or incorrect fasteners could cause damage to the vehicle or possible personal injury.

**THIS MANUAL SHOULD REMAIN WITH THE VEHICLE AT THE TIME OF RESALE.**

# INDEX

---

|   |           |
|---|-----------|
| <b>THE 1985 "LIMITED WARRANTY"</b> .....  | <b>4</b>  |
| <b>OFTEN ASKED QUESTIONS</b> .....  | <b>6</b>  |
| <b>LISTING OF AREA DISTRIBUTORS</b> .....   | <b>8</b>  |
| <b>HOW TO IDENTIFY YOUR SNOWMOBILE</b> .....  | <b>9</b>  |
| <b>CONTROLS/INSTRUMENTS</b><br>Throttle lever, brake lever, ignition/light switch, headlamp dimmer switch, emergency cut-out switch, tether cut-out switch, rewind starter handle, primer, adjustable steering handle, fuel gauge/tank cap, hood opening, tool box, fuse holder, hitch . . .  | <b>10</b> |
| <b>BREAK-IN PERIOD</b><br>Break-in, 10 hour-inspection checklist .....  | <b>13</b> |
| <b>FUEL</b><br>Recommended gasoline, recommended oil, oil injection system .....  | <b>15</b> |
| <b>PRE-START CHECK</b><br>Check points .....  | <b>15</b> |
| <b>STARTING PROCEDURE</b><br>Manual starting, before riding, emergency starting .....   | <b>16</b> |
| <b>LUBRICATION</b><br>Frequency, steering mechanism, drive axle, slide suspension, chaincase oil level, oil injection system, drive pulley .....  | <b>18</b> |
| <b>MAINTENANCE</b><br>Chart, belt guard removal, drive belt removal, drive belt condition, new drive belt, brake condition, brake adjustment, brake light switch adjustment, spark plug, battery, suspension condition, stopper strap condition, suspension adjustment, track condition, track tension and alignment, drive pulley, steering mechanism, steering adjustment, muffler attachment, engine mount nuts, carburetor adjustment, oil injection system, fan belt, headlamp beam aiming, bulb replacement, general inspection | <b>19</b> |
| <b>STORAGE</b><br>Track, suspension, ski, controls, chaincase, drive pulley, engine and primer lubrication, fuel tank and carburetor, battery, chassis, general inspection, suspension stopper strap .....  | <b>30</b> |
| <b>PRE-SEASON PREPARATION</b><br>Pre-season preparation chart, .....  | <b>33</b> |
| <b>TROUBLE SHOOTING GUIDE</b> .....   | <b>34</b> |
| <b>TOOLS</b> .....  | <b>36</b> |
| <b>SPECIFICATIONS</b> .....   | <b>37</b> |
| <b>WIRING DIAGRAMS</b> .....  | <b>39</b> |
| <b>SI METRIC INFORMATION GUIDE</b> .....  | <b>41</b> |
| <b>CHANGE OF ADDRESS OR OWNERSHIP</b> .....   | <b>43</b> |

# THE 1985 LIMITED WARRANTY \_\_\_\_\_

## 1 - PERIOD

BOMBARDIER® INC. as manufacturer, warrants FROM THE DATE OF FIRST CONSUMER SALES, every 1985 BOMBARDIER® snowmobile, sold as NEW AND UNUSED, by an authorized BOMBARDIER dealer for a period of:

- 12 consecutive months.

## 2 - WHAT BOMBARDIER WILL DO

BOMBARDIER will repair and/or replace, at its option, components defective in material and/or workmanship (under normal use and service,) with a genuine BOMBARDIER component without charge for parts or labour, at any authorized BOMBARDIER dealer during said warranty period.

## 3 - CONDITION TO HAVE WARRANTY WORK PERFORMED

Present to the servicing dealer, the hard copy of the BOMBARDIER Warranty Registration card received by the customer from the selling dealer at time of purchase.

## 4 - WARRANTY TRANSFER

This warranty is transferable to subsequent owner(s) for remainder of warranty period from original date of sale.

## 5 - EXCLUSIONS - ARE NOT WARRANTED

- Normal wear on all items such as, but not limited to:
  - drive belts
  - slider shoes
  - spark plugs
  - bulbs
  - runners on skis
- Replacement parts and/or accessories which are not genuine BOMBARDIER parts and/or accessories.
- Damage resulting from installation of parts other than genuine BOMBARDIER parts.
- Damage caused by failure to provide proper maintenance as detailed in the Operator Manual. The labour, parts and lubricants costs of all maintenance services, including tune-ups and adjustments will be charged to the owner.
- Wet cells battery.
- Vehicles designed and/or used for racing purposes.
- All optional accessories installed on the vehicle.  
(The normal warranty policy for parts and accessories, if any, applies).
- Damage resulting from accident, fire or other casualty, misuse, abuse or neglect.
- Damage resulting from operation of the snowmobile on surfaces other than snow.

- 
- Damage resulting from modification to the snowmobile not approved in writing by BOMBARDIER.
  - Losses incurred by the snowmobile owner other than parts and labour, such as, but not limited to, transportation, towing, telephone calls, taxis, or any other incidental or consequential damages.

## **6 - BATTERY WARRANTY:**

- 12 consecutive months. (Pro-rated.)

100% warranty coverage will start on the date the snowmobile was purchased and run to the following April 30th. The remainder of the 12 months period will be pro-rated as follows:

- 50% from April 30th to December 1st.
- 40% from December 1st to December 31st.
- 30% from January 1st to end of warranty.

## **7 - EXPRESSED OR IMPLIED WARRANTIES**

**This warranty gives you specific rights, and you may also have other legal rights which may vary from state to state, or province to province. Where applicable this warranty is expressly in lieu of all other expressed or implied warranties of BOMBARDIER, its distributors and the selling dealer, including any warranty of merchantability of fitness for any particular purpose; otherwise the implied warranty is limited to the duration of this warranty. However, some states or provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply.**

**Neither the distributor, the selling dealer, nor any other person has been authorized to make any affirmation, representation or warranty other than those contained in this warranty, and if made, such affirmation, representation or warranty shall not be enforceable against BOMBARDIER or any other person.**

**Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply.**

**BOMBARDIER INC. reserves the right to modify its warranty policy at any time, being understood that such modification will not alter the warranty conditions applicable to vehicles sold while the above warranty is in effect.**

## **8 - CONSUMER ASSISTANCE**

If a servicing problem or other difficulty occurs, we suggest the following:

1. Try to resolve the problem at the dealership with the Service Manager or Owner.
2. If this fails, contact your area distributor listed in the Operator Manual.
3. Then if your grievance still remains unsolved, you may write to us:

Bombardier Inc.  
Service Department  
Recreational Products Division  
Valcourt, Quebec, Canada, JOE 2LO

February 1984  
Bombardier Inc.  
Valcourt, Quebec, Canada, JOE 2LO

®\*Trademarks of Bombardier Inc.

## OFTEN ASKED QUESTIONS

---

Q: Why must my snowmobile be registered? After all I do have my original invoice as proof of when I purchased my snowmobile.

*A: Your warranty is valid at any authorized dealer of the product. Your registration is the key element in providing the servicing dealer with the necessary data to complete warranty claim forms. This information is also used to notify owners in the event of a safety recall.*

Q: I bought my snowmobile in O'King County but I snowmobile in Washington County. Can the dealer in Washington County accept to perform warranty work on my snowmobile?

*A: Yes, any authorized dealer in North America can perform warranty repairs, providing the customer warranty registration card is presented.*

Q: Where can I find information on the lubrication and maintenance of my snowmobile?

*A: In this Operator Manual provided with the vehicle at the time of first sale.*

Q: Will the entire warranty be void or cancelled, if I do not operate or maintain my new snowmobile exactly as specified in the Operator's Manual?

*A: The warranty of the new snowmobile cannot be "Voided" or "Cancelled". However, if a particular failure is caused by operation or maintenance other than is shown in the Operator Manual, THAT failure may not be covered under warranty. This includes service work performed by the customer, especially the critical adjustments to ignition, timing, carburation and oil injection/or oil mixture.*

Q: Would you give some examples of abnormal use or strain, neglect or abuse?

*A: These terms are general and overlap each other in areas. Some specific examples may include: running the machine out of oil, chain failure caused by a lack of lubrication, operating the machine with a broken or damaged part which causes another part to fail, and so on. If you have any specific questions on operation or maintenance, please contact your dealer for advice.*

Q: What costs are my responsibility during the warranty period?

*A: The customer's responsibility includes all costs of normal maintenance services, non-warranty repairs, accidents and collision damage, as well as oils, and spark plugs, and incidental or consequential damages costs as explained in the warranty.*



---

Q: Are "Genuine" Bombardier replacement parts used in warranty repairs covered by warranty?

*A: Yes. When installed by an authorized dealer, any "genuine" Bombardier part used in warranty repairs assumes the remaining warranty that exists on the machine.*

Q: If I sell my snowmobile within the warranty period, will the new owner qualify for the balance of the warranty?

*A: Yes, provided the unit has already been registered with the manufacturer. Note that the change of ownership card in this manual should be completed and sent to Bombardier Inc.*

Q: How can I receive the best owner assistance?

*A: The satisfaction and goodwill of the owners of Bombardier products are of primary concern to your dealer and Bombardier Inc. Normally, any problems that arise in connection with the sales transaction or the operation of your snowmobile will be handled by your Dealers Sales or Service Departments. It is recognized, however, that despite the best intentions of everyone concerned, misunderstandings will sometimes occur. If you have a problem that has not been handled to your satisfaction through normal channels, we suggest that you discuss your problem with a member of dealership management. Frequently, complaints are the result of a breakdown in communications and can quickly be resolved by a member of the dealership management. If the problem already has been reviewed with the Sales Manager or Service Manager, contact the Dealer himself or the General Manager.*

# LISTING OF AREA DISTRIBUTORS

---

## CANADIAN DISTRIBUTORS

BOMBARDIER INC.  
EASTERN CANADA DISTRIBUTION DIVISION  
Atlantic Branch  
P.O. Box 670  
Shediac, New Brunswick, E0A 3G0  
(506) 386-6117  
**Magdalen Island, Nova Scotia, New Brunswick, Prince Edward Island**

Quebec Branch  
1350 Nobel Boulevard  
Boucherville, Quebec, J4B 1A1  
(514) 655-6121  
**Province of Quebec**

Ontario Branch  
230 Bayview Drive  
Barrie, Ontario, L4N 4Y8  
(705) 728-8600  
**Province of Ontario**

BROOKS EQUIPMENT LIMITED  
1616 King, Edward Street  
P.O. Box 985  
Winnipeg, Manitoba, R3C 2V8  
(204) 633-7247  
**British Columbia, Manitoba, Saskatchewan, Alberta, Yukon**

CHARLES R. BELL LIMITED  
**Newfoundland, Labrador**  
Offices  
- Riverside Drive  
P.O. Box 1050  
Corner Brook, Newfoundland, A2H 6J3  
(709) 634-3533  
- 81 Kenmount Road  
P.O. Box 8127  
St-John's, Newfoundland, A1B 3N1  
(709) 722-6700

HUDSON'S BAY CO. LTD.  
165 Hymus Blvd  
Pointe-Claire, Quebec, H9R 1G2  
(514) 697-8500  
**North-West Territories, Franklin District & Keewatin**

## AMERICAN DISTRIBUTORS

BOMBARDIER CORPORATION  
**All States (excluding Alaska)**

SERVICE OFFICES  
- East Main Street Road  
Malone, New York 12953  
(518) 483-4411

- 4505 West Superior Street  
P.O. Box 6106  
Duluth, Minnesota 55806  
(218) 628-2881

- P.O. Box 1569  
Idaho Falls, Idaho, 83401  
(208) 529-9510


NATIONAL SALES OFFICE  
- O'Hare Lake Plaza  
2350 Devon Avenue  
Suite 150  
Des Plaines, Illinois 60018  
(312) 298-9540

MILLER EQUIPMENT AND RECREATIONAL CENTER  
1049 Whitney Road  
Anchorage, Alaska 99501  
(907) 274-9513  
**Alaska**


# HOW TO IDENTIFY YOUR SNOWMOBILE

The main components of your snowmobile (engine, track(s) and frame) are identified by different serial numbers. It may sometimes become necessary to locate these numbers for warranty purposes or to trace your snowmobile in the event of theft.

ENGINE SERIAL NUMBER

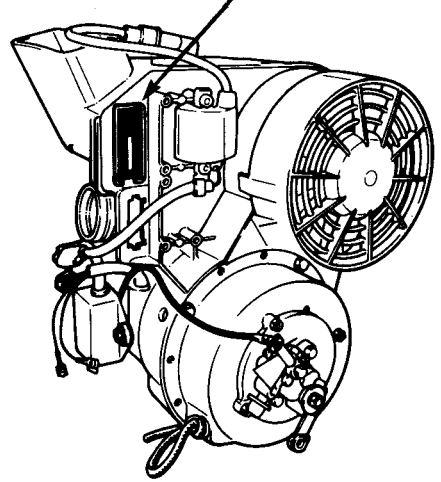


TRACK SERIAL NUMBER

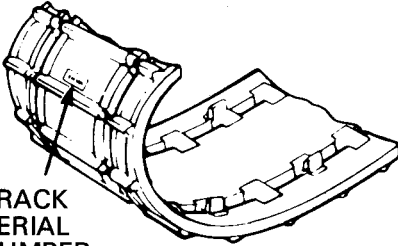


VEHICLE SERIAL NUMBER

CITATION LS

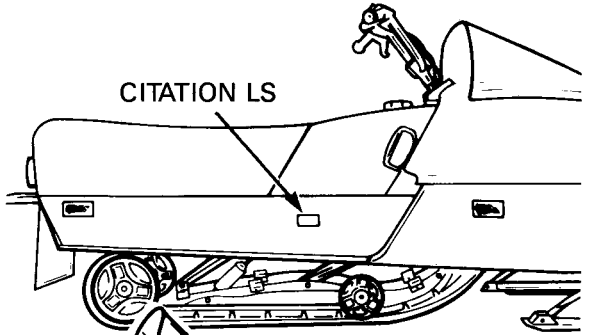


TUNDRA & TUNDRA LT

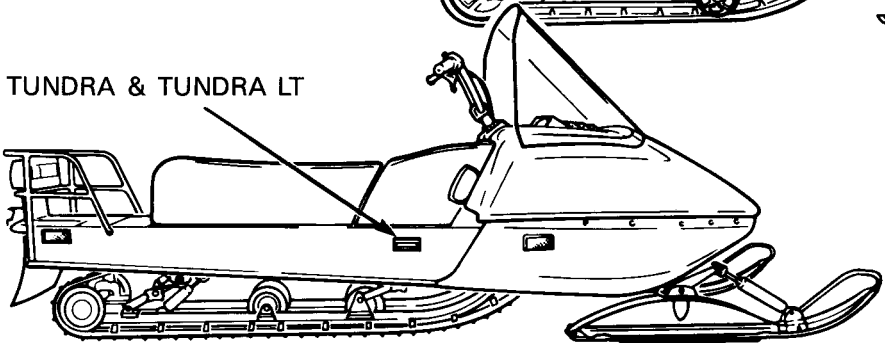

○ NOTE: We strongly recommend that you take note of all the serial numbers on your vehicle and supply them to your insurance company. It will surely help in the event a snowmobile is stolen.

# CONTROLS/INSTRUMENTS

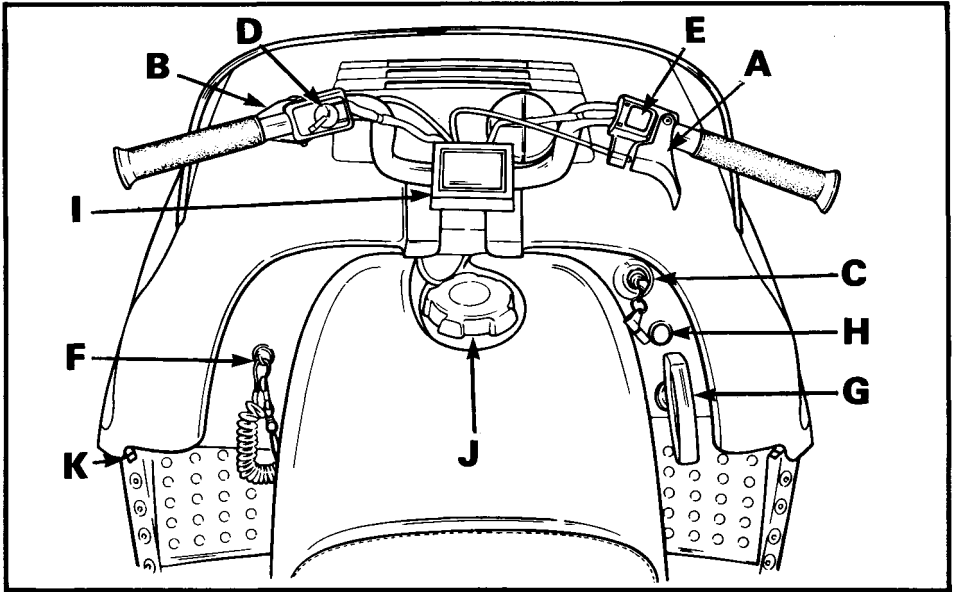

- A) Throttle Control Lever
- B) Brake Control Lever
- C) Ignition/Light Switch
- D) Headlamp Dimmer Switch
- E) Emergency Cut-Out Switch
- F) Tether Cut-Out Switch

- G) Rewind Starter Handle
- H) Primer
- I) Adjustable steering handle
- J) Fuel gauge/tank cap
- K) Hood Opening

## A) Throttle Lever

Located on right side of handlebar. When compressed, it controls the engine speed and the engagement of the transmission. When released, engine speed returns automatically to idle.


## B) Brake Lever

Located on the left side of handlebar. When compressed, the brake is applied. When released, it automatically returns to its original position. Braking effect is proportionate to the pressure applied on the lever and to the type of terrain and its snow coverage.

## C) Ignition/Light Switch


The lights are automatically ON whenever the engine is running.

### Manual starting

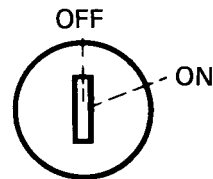

Key operated, 2 position switch. To start engine, first turn key fully clockwise to ON position. To stop engine, turn key counter-clockwise to OFF position.

## Electric starting

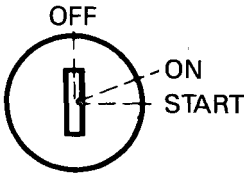

Key operated, 3 position switch. To start engine, turn key fully clockwise to START position and hold. Return key to ON position immediately when engine has started. To stop engine, turn key counter-clockwise to OFF position.


**CAUTION:** Holding key in START position when engine has started could damage starter mechanism.

## D) Headlamp Dimmer Switch

The dimmer switch, located on left side of handlebar, allows correct selection of headlamp beam. To obtain high or low beam simply flick switch.

## E) Emergency Cut-Out Switch

A push pull type switch located on the right side of the handlebar. To stop the engine in an emergency, push the button to the lower off position and simultaneously apply the brakes. To start engine, button must be at the upper ON position.

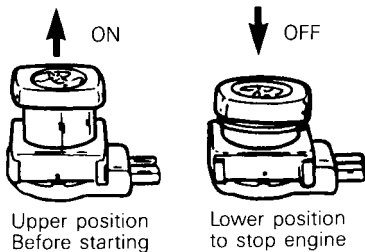


The driver of this vehicle should familiarize himself with the function of this device by using it several times on first outing. Thereby being mentally prepared for emergency situations requiring its use.

**WARNING:** If the switch has been used in an emergency situation the source of malfunction should be determined and corrected before re-starting engine.

## F) Tether Cut-Out Switch

Attach tether cord to wrist or other convenient location then snap tether cut-out cap over receptacle before starting engine.

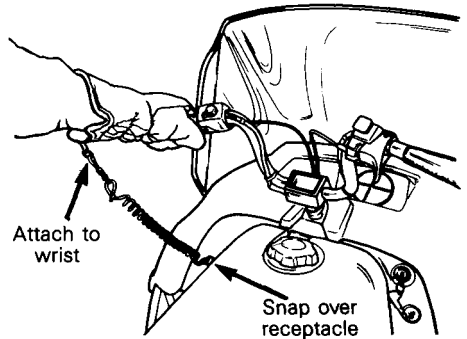

If emergency engine "shut off" is required, completely pull cap from safety switch and engine power will be automatically shut "off".

**NOTE:** The cap must be installed on the safety switch at all times in order to operate the vehicle.

**WARNING:** If the switch is used in an emergency situation the source of malfunction should be determined and corrected before re-starting engine.

## G) Rewind Starter Handle

Auto rewind type located on right hand side of vehicle. To engage mechanism, pull handle.

## H) Primer

A push-pull button. Pull and push button (2-3 times) to activate primer. The primer should always be used for cold engine starts. After engine is warm however, it is not necessary to use primer when starting.

## I) Adjustable Steering Handle

- Remove steering cover.
- Loosen the four (4) retaining screws.
- Adjust the handle to the desired position.

◆ **WARNING:** Do not adjust too high as the brake lever may contact the windshield when turning.

- Lock the steering handle in place by tightening the four (4) retaining screws to 26 N•m (19 lbf•ft).
- Reinstall steering cover.

## J) Fuel Gauge/Tank Cap

Unscrew fuel tank cap and withdraw dipstick to check fuel level.

◆ **WARNING:** Never use a lit match or open flame to check fuel level.

## K) Hood Opening

Pull down the latches to unlock the hood from the anchor.

○ **NOTE:** Always lift hood gently up until stopped by restraining device.


◆ **WARNING:** It is dangerous to run an engine with the hood open unfastened or removed. Personal injury could result.

## Tool Box


Located under the hood. To gain access, tilt hood. Ideal location for spare rope, first aid kit, etc...

## Fuse Holder (Electric starting only)

Starting system is protected with a 30 amperes rated fuse. Fuse holder is located close to the battery. If starter does not work, check fuse condition and if required replace with one of the same value.

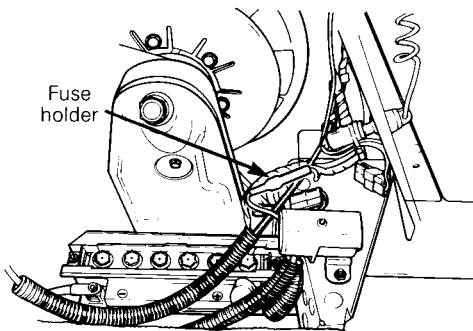

## Hitch (Tundra models only)

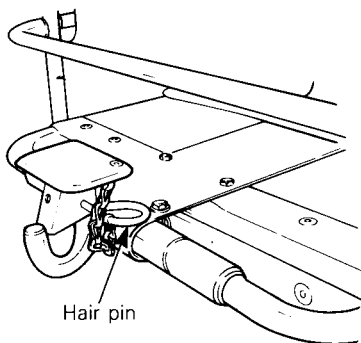

◆ **WARNING:** When towing a sled or trailer, always ensure to lock the hook or plate type attachment with the hair pin.


Trailers or sleds towed behind a snowmobile should always be loaded in a way to obtain the lowest possible center of gravity. Use a rigid tow bar when pulling a tow sled behind your snowmobile. When you are pulling passengers in a trailer or tow sled, use moderate speed and avoid rough terrain for their safety. Also, have all passengers get out of a towed vehicle and walk across all roads.

# BREAK-IN PERIOD


---

## Engine

This Bombardier-Rotax snowmobile engine, has a critical break-in period requirement before running the vehicle at full throttle. Engine manufacturer strongly recommends 10 to 15 operating hours. Maximum throttle should not exceed  $3/4$ , however, brief full acceleration and speed variations contribute to a good break-in. Continued wide open throttle accelerations, prolonged cruising speeds, and lugging are detrimental during the break-in period.

 **NOTE:** For the break-in period only, 450 ml (16 oz) of Bombardier Snowmobile Injection oil should be added to the first full fuel tank filling.

This will assure additional protection during the initial engine break-in.

 **CAUTION:** Remove and clean spark plugs after engine break-in.

## Belt

- A new drive belt requires a break-in period of 15-25 km (10-15 miles).


## 10-HOUR INSPECTION

As with any precision piece of mechanical equipment, we suggest that after the first 10 hours of operation or 30 days after the purchase, whichever comes first, that your vehicle be checked by your dealer. This inspection will give you the opportunity to discuss the unanswered questions you may have encountered during the first hours of operation. Remember that it is easier to remedy at this time than to allow the snowmobile to operate until a possible failure occurs.

---

The 10 hour inspection is at the expense of the vehicle owner.

---

| <b>10-HOUR INSPECTION CHECKLIST</b>  |  |
|--|---|
| Engine timing  |   |
| Fan belt tension   |   |
| Spark plug condition: (Remove and clean)   |   |
| Carburetor adjustment  |   |
| Oil injection pump adjustment  |   |
| Battery electrolyte level (electric starting only)   |   |
| Engine mount nuts  |   |
| Muffler attachment   |   |
| Chaincase oil level  |   |
| Injection system oil level   |   |
| Brake operation and lining condition   |   |
| Ski alignment (runners condition)  |   |
| Steering arm, retorque to 61 N•m (45 lbf•ft)   |   |
| Handlebar bolts, retorque to 26 N•m (19 lbf•ft)  |   |
| Pulley alignment and drive belt condition  |   |
| Track condition, tension and alignment   |   |
| Lubrication (steering, suspension, drive axle)   |   |
| Electrical wiring (loose connections, stripped wires, damaged insulation), tighten all loose bolts, nuts and linkage         |   |
| Operation of lighting system (HI / LO beam, brake light, etc.), test operation of emergency cut-out switch and tether switch |   |

**We recommend that you have your dealer sign this inspection list.**

\_\_\_\_\_  
Date of 10 hour inspection

\_\_\_\_\_  
Dealer signature



# FUEL

---

## Recommended Gasoline

Use regular leaded or unleaded gasoline available from all service stations.

▼ **CAUTION:** Never experiment with different fuel or fuel ratios. Never use naphtha, methanol, gasohol or similar products.

◆ **WARNING:** Never "top up" the gas tank before placing the vehicle in a warm area. At certain temperatures, gasoline will expand and overflow. Always wipe off any gasoline spillage from the snowmobile.

## Recommended Oil

Use "Bombardier Snowmobile Injection Oil" (P/N 496 0133 00 - 1 liter) available from your dealer. This type of oil will flow at temperatures as low as minus 40°C (-40°F).


It is a blend of specially selected base oils and additives which provides outstanding lubrication, engine cleanliness and minimum spark plug fouling.

If "Bombardier Snowmobile Injection Oil" is unavailable, substitute with BLIZZARD oil (P/N 496 0135 00).

▼ **CAUTION:** Never use outboard or straight mineral oils.

## Oil Injection System

Always maintain a sufficient amount of Bombardier Snowmobile injection oil in the injection oil tank.

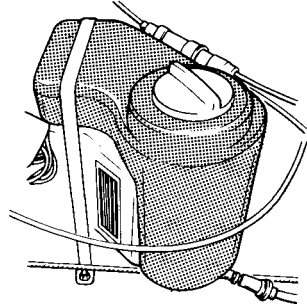

▼ **CAUTION:** Check level and refill every time you refuel.

○ **NOTE:** For the break-in period only, 450 ml (16 oz.) of Bombardier Snowmobile injection oil should be added to the first full fuel tank filling. This will assure additional protection during the initial engine break-in.

# PRE-START CHECK

---


## Check Points

- ACTIVATE THE THROTTLE CONTROL LEVER SEVERAL TIMES to check that it operates easily and smoothly. The throttle control lever must return to idle position when released.
  - Check fuel level.
  - Check injection oil level.
  - Check that the skis and the track are not frozen to the ground or snow surface and that steering operates freely.
  - Activate the brake control lever and make sure the brake fully applies before the brake control lever touches the handlebar grip.
  - Verify that the path ahead of the vehicle is clear of bystanders and obstacles.
- ◆ **WARNING:** Only start your snowmobile once all components are checked and functioning properly.

# STARTING PROCEDURE


Test throttle control lever.

Check that the emergency cut-out switch is in the ON position.

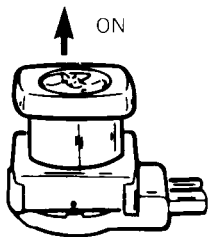

Upper position  
before starting engine

Ensure the tether cut-out cap is in position and that the cord is attached to your clothing.

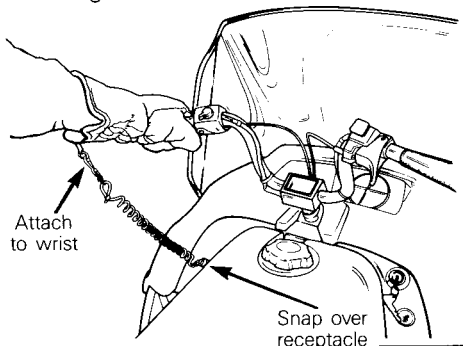

Activate the primer (2 or 3 times).

○ **NOTE:** The use of the primer is not necessary when the engine is warm.

## Manual Starting

Insert the key in the ignition and turn to ON position.

Grasp manual starter handle firmly and pull slowly until a resistance is felt then pull vigorously. Slowly release the re-wind starter handle.

◆ **WARNING:** Do not apply throttle while starting.

## Electric Starting

▼ **CAUTION:** Never operate your snowmobile with the battery removed or disconnected.

Insert key in ignition switch.

Turn ignition key clockwise until starter engages.

▼ **CAUTION:** To avoid starter overheating, the cranking period should never exceed 30 seconds and a rest period should be observed between the cranking cycles to let starter cool down.

Release key immediately when engine has started. If engine does not start on first try, key must be turned fully back to OFF each time.

## Before Riding

Check operation of the emergency cut-out switch, and tether switch. Restart engine.

◆ **WARNING:** If engine does not shut-off when applying the emergency cut-out switch and or when pulling the tether cut-out cap, stop the engine by turning off the ignition key. Do not operate the vehicle further, see your dealer.

Allow the engine to warm before operating at full throttle.

---


## Emergency Starting

Should the rewind starter rope fray and break, the engine can be started with an emergency starter rope.


◆ **WARNING:** Do not start the vehicle by the drive pulley unless it is a true emergency situation, have the vehicle repaired as soon as possible.

Remove the belt guard from vehicle. (See "Maintenance section").

Assemble the handle to the emergency starting rope and wind the rope tightly around the drive pulley.

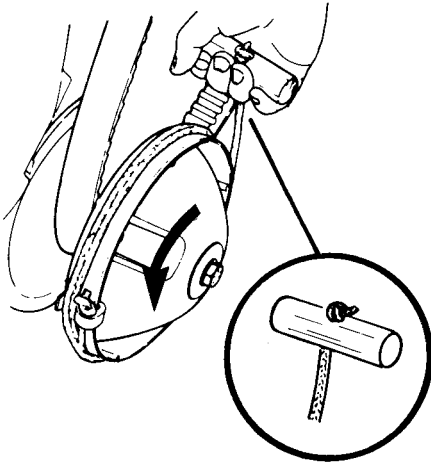



◆ **WARNING:** Do not wind starting rope around your hand. Hold rope by the handle only.

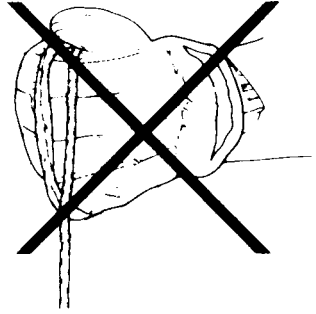

Start as per manual starting procedure.

◆ **WARNING:** When starting the vehicle in an emergency situation by the drive pulley, do not reinstall the belt guard.

# LUBRICATION

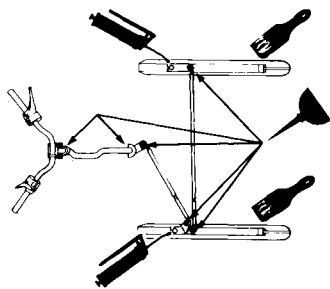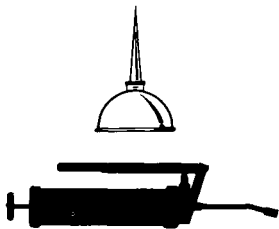

## Frequency

Routine maintenance is necessary for all mechanized products, and the snowmobile is no exception. A weekly vehicle inspection contributes to the life span of the snowmobile as well as retains safe and dependable operation.

◆ **WARNING:** Only perform such procedures as detailed in this manual. It is recommended that dealer assistance be periodically obtained on other components/systems not covered in this manual. Unless otherwise specified, engine should be turned OFF for all lubrication and maintenance procedures.


It is recommended that the steering system and suspension be lubricated monthly or every 40 hours of operation. If the vehicle is operated in wet snow or in severe conditions these items should be lubricated more frequently.

## Steering Mechanism

◆ **WARNING:** Do not lubricate throttle and/or brake cables and housings.


Lubricate the ski legs at grease fittings until new grease appears at joints. Coat spring slider cushion with grease.

Oil spring coupler bolts, ball joints and steering column bushings.

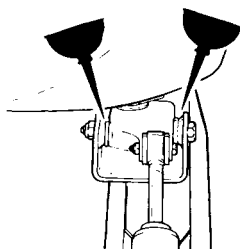



## Drive Axle

Lubricate at grease fitting using low temperature grease.

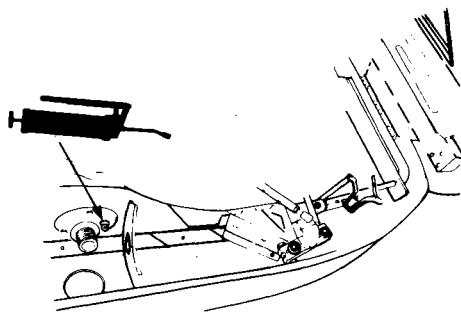


▼ **CAUTION:** When lubricating the drive axle bearing, do not apply excessive grease as the seal will be pushed out of its housing.

Check seal position with finger.

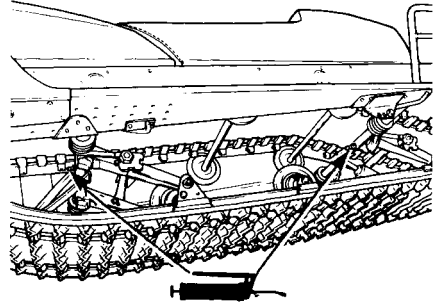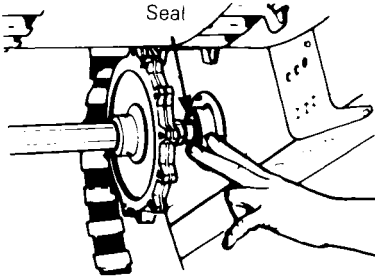

## Chaincase Oil Level

Check the oil by removing the chaincase plug.

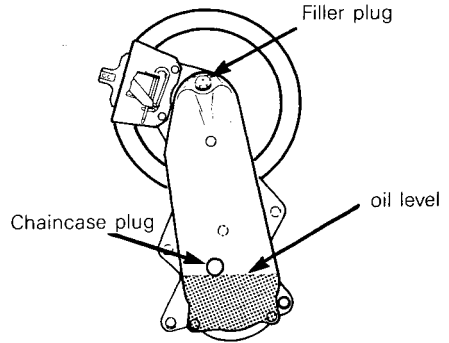

The oil should be level with the bottom of the oil level orifice.

○ **NOTE:** The chaincase oil capacity is approximately 200 ml (7 oz.).

## Oil Injection System

Always maintain a sufficient amount of Bombardier Snowmobile Injection Oil in the injection oil tank.


▼ **CAUTION:** Check level and refill every time you refuel.

## Drive Pulley

Designed with karlon bushings, no lubrication is required.

## Slide Suspension


### Citation LS & LSE

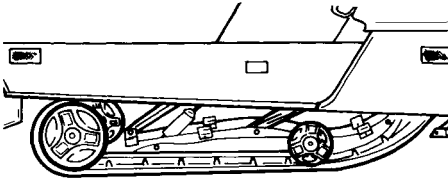

This suspension type does not require any lubrication.

### Tundra & Tundra LT

Lubricate idler wheels at grease fittings until grease appears at joints. Use low temperature grease only.

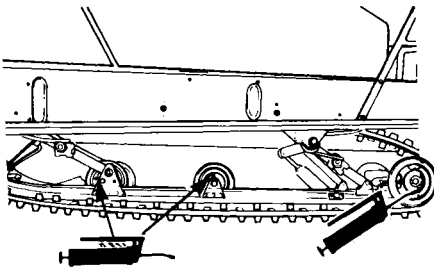

Also lubricate front & rear arms at grease fittings.

# MAINTENANCE

The following Maintenance Chart indicates regular servicing schedules to be performed by you or your servicing dealer. If these services are performed as suggested, your snowmobile will give you many years of low-cost use.

**WARNING:** Only perform such procedures as detailed in this manual. It is recommended that dealer assistance be periodically obtained on other components/systems not covered in this manual. Unless otherwise specified, engine should be turned OFF for all lubrication and maintenance procedures.



| <b>MAINTENANCE CHART</b>           | Weekly or every 240 km (150 m) | Monthly or every 800 km (500 m) | Once a year or every 3200 m (2000 m) | Refer to page |
|------------------------------------|--------------------------------|---------------------------------|--------------------------------------|---------------|
| Drive belt condition               | •                              |                                 |                                      | 22            |
| Brake condition                    | •                              |                                 |                                      | 22            |
| Brake adjustment                   |                                | •                               |                                      | 22            |
| Spark plug                         |                                | •                               |                                      | 23            |
| Battery (electric starting)        | •                              |                                 |                                      | 23            |
| Suspension condition               |                                | •                               |                                      | 24            |
| Suspension stopper strap condition |                                |                                 | •                                    | 24            |
| Suspension adjustment              |                                | (as required)                   |                                      | 24            |
| Track condition                    |                                | •                               |                                      | 25            |
| Track tension and alignment        |                                | •                               |                                      | 25            |
| Drive pulley                       |                                |                                 | •                                    | 26            |
| Steering mechanism                 |                                | •                               |                                      | 26            |
| Steering adjustment                |                                | •                               |                                      | 26            |
| Muffler attachment                 |                                | •                               |                                      | 27            |
| Engine mount nuts                  |                                |                                 | •                                    | 27            |
| Carburator adjustment              |                                |                                 | •                                    | 27            |
| Injection oil filter condition     |                                | •                               |                                      | 28            |
| Oil injection pump adjustment      |                                |                                 | •                                    | 28            |
| Fan belt                           |                                |                                 | •                                    | 28            |
| Headlamp beam aiming               |                                |                                 | •                                    | 28            |
| General inspection                 |                                | •                               |                                      | 30            |

○ **NOTE:** The ten hour inspection is a very important part of proper service and maintenance.


## Belt Guard Removal

◆ **WARNING:** Belt guard should always be in place when engine is running.


- A. Raise the hood and pull both retaining pins out.
- B. Pull the guard out of the center retaining bolt.
- C. Remove the guard.

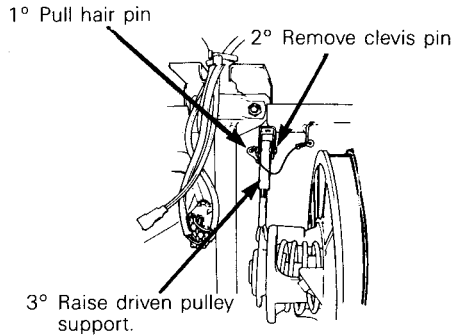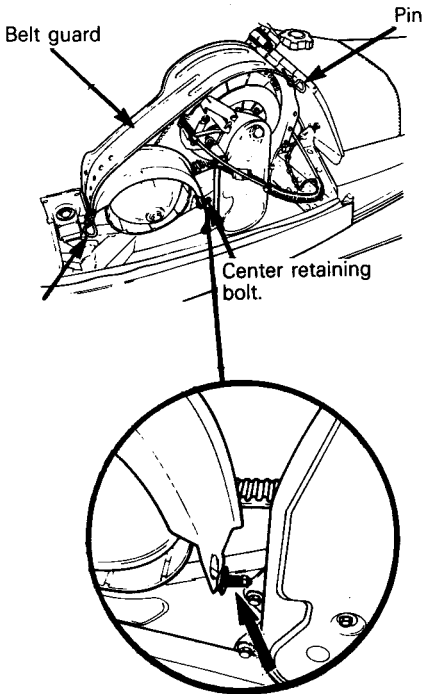

3. Open the driven pulley by twisting and pushing the sliding half. Hold in fully open position.

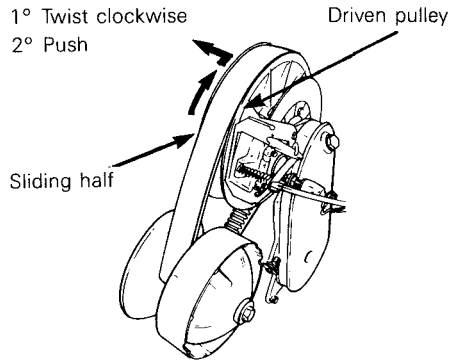


4. Slip the belt over the top edge of the sliding half.

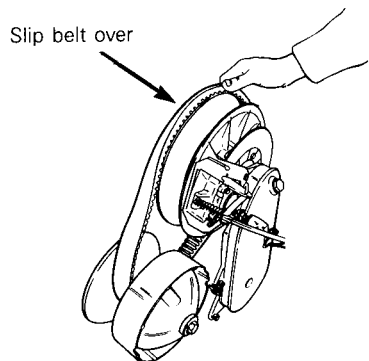

## Drive Belt Removal Installation

1. Remove the belt guard.
2. Unlock and raise driven pulley support.

- Slip the belt out from the drive pulley and remove completely from vehicle.

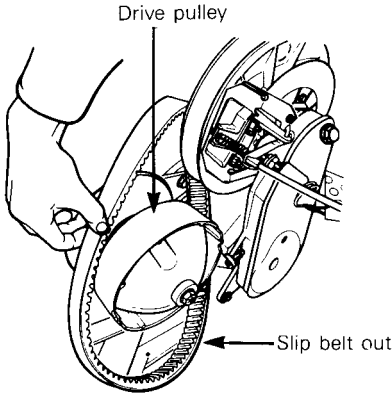

To install the drive belt, reverse the procedure.

### Drive Belt Condition

Inspect belt for cracks, fraying or abnormal wear (uneven wear, wear on one side, missing cogs, cracked fabric). If abnormal wear is noted, probable cause could be pulley misalignment, excessive R.P.M. with frozen track, fast starts without warm-up period, burred sheave, oil on belt or distorted spare belt. Contact your dealer.

Check the drive belt width. If less than 30 mm (1 3/16 in), replace the drive belt.

### New Drive Belt


When installing a new drive belt, break-in period of 25 km (15 miles) is strongly recommended.

**NOTE:** Always store a spare belt in a manner to allow its natural shape to be maintained.

### Brake Condition

The brake mechanism on your snowmobile is an essential safety device. Keep this mechanism in proper working condition. Above all, do not operate your snowmobile without an effective brake system.


**WARNING:** Brake pads must be replaced as soon as only 1 mm (1/32'') of the fixed lining is still projected out of caliper. Replacement must be performed by an authorized dealer.

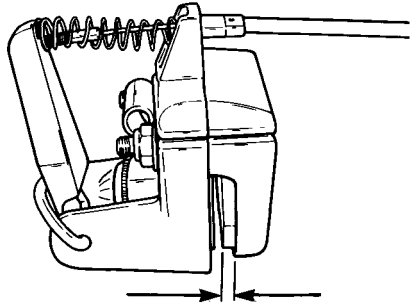

Minimum projection of fixed pad: 1 mm (1/32'')


### Brake Adjustment

The brake mechanism is a self-adjusting type. If a quicker brake response is desired, strongly pull the brake lever several times, this will actuate the self adjusting mechanism.

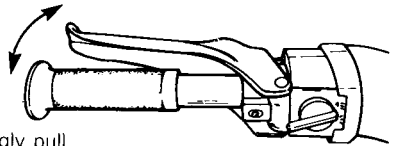

Strongly pull

After the adjustment, brake should apply fully when lever is approximately 13 mm (1/2'') from handlebar grip. If not, do not tamper with the brake, contact your servicing dealer.

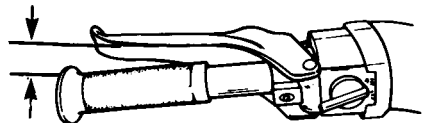

13 mm (1/2'') approx.




## Brake Light Switch Adjustment

To check operation:

Pull the brake lever to hold the pads on the disc. Check that a light resistance is felt while rotating the driven pulley. This is the position where the switch should have lit the brake light.

To adjust:

- Loosen the brake switch lock nut while restraining the other one.
- By turning adjusting nut, pull outward the switch to turn the light on or push inward to turn it off.

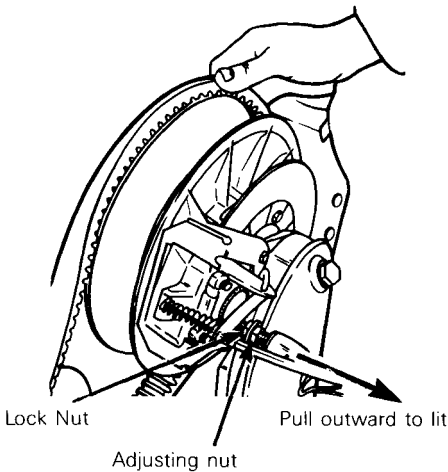


- Tighten the lock nut while restraining the other one. Recheck brake light operation.

## Spark Plug


Disconnect the spark plug wire and remove the spark plug.

Check the condition of the plug.


- A brownish tip reflects ideal conditions. (Carburetor adjustments, spark plug heat range, etc., are correct.)
- A black insulator tip indicates fouling caused by: carburetor idle speed mixture and/or high speed mixture too rich, incorrect fuel mixture ratio, wrong type of spark plug (heat range), or excessive idling.
- A light grey insulator tip indicates a lean mixture caused by: carburetor high speed mixture adjusted too lean, wrong spark plug heat range, incorrect fuel mixture ratio, or a leaking seal or gasket.



Overheated  
(light grey)



Normal  
(brownish)



Fouled  
(black)

**CAUTION:** If spark plug condition is not ideal, contact your authorized dealer.


Check spark plug gap using a wire feeler gauge.

Reinstall plug and connect wire.

## Battery

### (Electric starting only)


Check electrolyte level weekly. Electrolyte level must be at upper level line on battery casing.

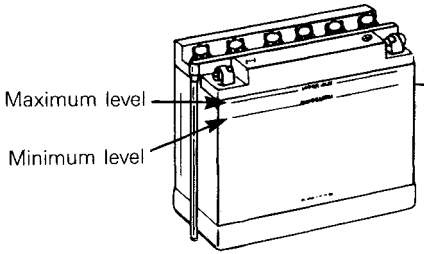

If necessary add distilled water. Battery connections must also be free of corrosion. If cleaning is necessary remove corrosion using a stiff brush then clean with a solution of baking soda and water. Rinse and dry well.

**CAUTION:** Do not allow cleaning solution to enter battery. It will destroy the chemical properties of the electrolyte.

After reconnecting battery, coat battery terminals and connectors with petroleum jelly to prevent corrosion. Check that battery is well secured and that battery vent tube is not kinked or blocked.

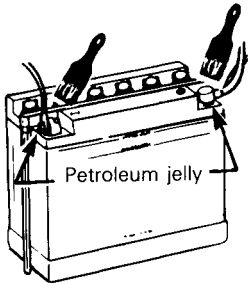

**WARNING:** Vent tube must be free and open. If not, it will restrict ventilation and create a gas accumulation that could result in an explosion. Avoid skin contact with electrolyte.

**CAUTION:** Prior to charging the battery, always remove it from the vehicle to prevent electrolyte spillage.

**NOTE:** always keep battery fully charged. (To charge, refer to "Battery" in "Storage" section).

### Suspension Condition

Visually inspect all suspension components including slider shoes, springs, wheels, etc...

**NOTE:** During normal driving, snow will act as a lubricant and coolant for the slider shoes. Extensive riding on ice or sanded snow, will create excessive heat build-up and cause premature slider shoe wear.

### Stopper Strap Condition

Inspect strap for wear and cracks, bolt and nut for tightness. If loose inspect holes for deformation. Replace as required. Torque nut to 9 N•m (7 lbf•ft).


### Suspension Adjustment

#### Citation LS & LSE


These models do not have any adjustment on the suspension.

#### Tundra & Tundra LT

The suspension is adjustable, the front adjustment for surface condition, the rear for driver's weight.

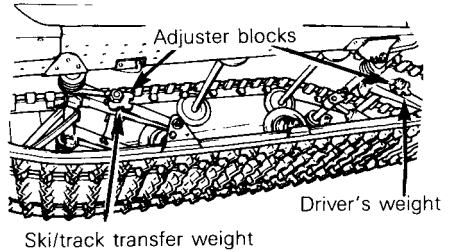

When the front adjuster blocks are at the lowest elevation more weight is distributed on the skis.

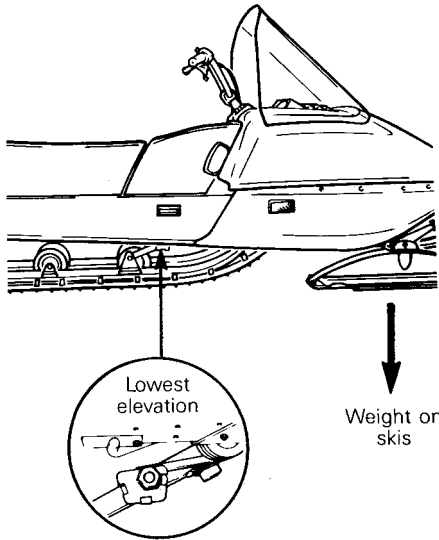

At the highest position the weight is transferred from the skis to the track. The rear adjuster blocks should be adjusted to suit the driver's preference.

▼ **CAUTION:** Always turn the left side adjuster blocks in a clockwise direction, the right side blocks in a counter-clockwise direction. Left and right adjuster blocks of each adjustment must always be set at the same elevation.

○ **NOTE:** For deep snow condition or hill climbing, it is recommended to place the front adjuster blocks on the highest position.

## Track Condition


Lift the rear of the vehicle and support it off the ground. With the engine off, rotate the track by hand, and inspect condition. If worn or cut, or if track fibers are exposed, or if missing or defective inserts or guides are noted; contact your dealer.

◆ **WARNING:** Do not operate a snowmobile with a cut, torn or damaged track.

## Track Tension and Alignment

### Tension:

Lift the rear of vehicle and support with a mechanical stand. Allow the slide to extend normally. The gap should be 13 mm (1/2") between the slider shoe and the bottom inside of the track. If the track tension is too loose, the track will have a tendency to thump.

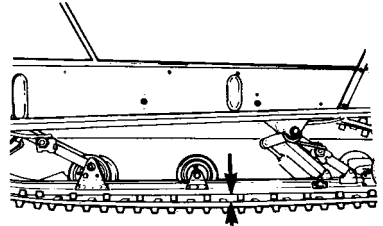


13 mm (1/2")

▼ **CAUTION:** Too much tension will result in power loss and excessive stresses on suspension components.

To adjust tension:

- Loosen the rear idler wheel retaining screw (on the Tundra & Tundra LT only).
- Loosen the adjuster bolt lock nuts then turn adjuster bolts to adjust.



If correct tension is unattainable, contact your dealer.

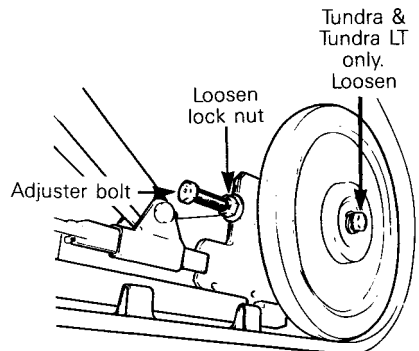

○ **NOTE:** Track tension and alignment are inter-related. Do not adjust one without the other.


### Alignment

Start the engine and accelerate slightly so that track turns **slowly**. Check that the track is well centered; equal distance on both sides between edges of track guides and slider shoes.

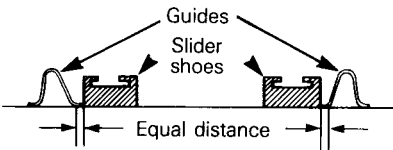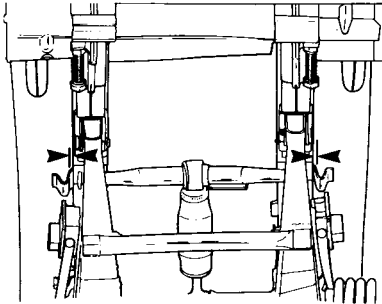


◆ **WARNING:** Before checking track alignment, ensure that the track is free of all particles which could be thrown out while track is rotating. Keep hands, tools, feet and clothing clear of track. Ensure no-one is standing in close proximity to the vehicle.

To correct, stop the engine: Loosen the lock nuts and tighten the adjuster bolt on side where the slider shoe is the farthest to the track insert guides.

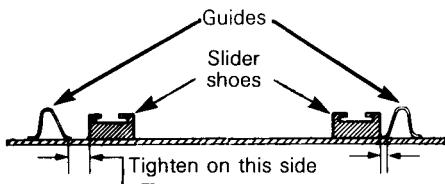

Tighten lock nuts and recheck the alignment.

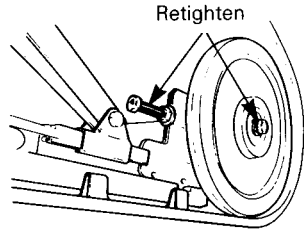


### Drive Pulley

Designed with karlon bushings, no lubrication is required. Should be inspected annually by an authorized dealer.

### Steering Mechanism

Inspect the steering mechanism for tightness of components (steering arms, tie rods, ball joints, spring coupler bolts, etc.). If necessary, replace or retighten.

Torque steering arm bolts as shown:

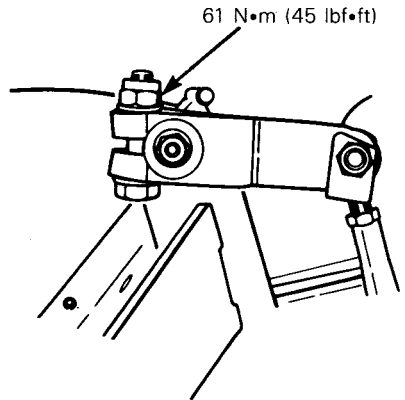

Check the condition of the skis and the ski runners. Replace if more than half worn.

### Steering Adjustment


Skis should have a toe out of 3 mm (1/8"). To check, measure the distance between each ski at the front and rear

of the leaf springs. The front distance should be 3 mm (1/8") more than the rear when the handlebar is horizontal.

**IMPORTANT:** Close the front of the skis manually to eliminate all slack from the steering mechanism.

If adjustment is required:

Loosen the lock nuts of the longest tie rod. Turn the tie rod manually until the skis are properly aligned. Firmly re-tighten the lock nuts.

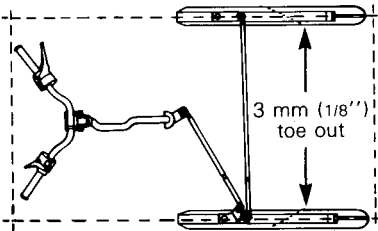


The handlebar should also be horizontal when the skis are pointed toward the front.

To adjust:

Loosen the lock nuts of the shortest tie rod. Turn the tie rod manually until the handlebar is horizontal. Retighten the lock nuts firmly.

**WARNING:** The ball joint socket must run parallel with the steering arm. The tie rod must be restrained when tightening the tie rod end lock nuts.

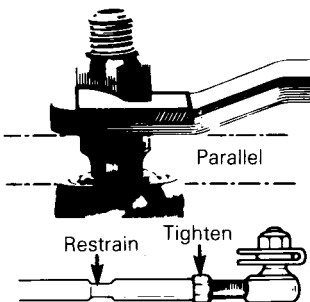

## Muffler Attachment


The engine/exhaust system parts are vital toward efficient muffler function. Check all attachments. Replace the springs and/or tighten if necessary.

## Engine Mount Nuts

Check the engine mount nuts for tightness. Retorque if required to 55 N•m (41 lbf•ft).

## Carburetor Adjustment

**CAUTION:** Never operate your snowmobile with the air intake silencer disconnected. Serious engine damage will occur if this notice is disregarded.

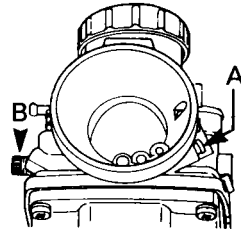

### A) Air Screw Adjustment

Completely close the air screw (until a slight reseating resistance is felt) then back off screw: 1 turn.

### B) Idle Speed Adjustment

Turn the idle speed screw clockwise until it contacts the throttle slide then continue turning two (2) additional turns. This will provide a preliminary idle speed setting. Start engine and allow it to warm then adjust the idle speed 1100-1300 R.P.M. by turning the idle speed screw clockwise or counter-clockwise.

**CAUTION:** Do not attempt to set the idle speed by using the air screw. Severe engine damage can occur. If idle speed is unattainable contact your authorized dealer.

## Oil Injection System

### Injection Oil Filter Condition

Inspect oil filter at least once a month. Insure that filter is not obstructed by foreign particles; if so, see your dealer.

▼ **CAUTION:** An obstructed injection oil filter will cause oil starvation resulting in serious engine damage.


○ **NOTE:** After a storage period, it is important that your dealer replaces the injection oil filter and that he verifies the oil flow of the injection pump.

### Injection Pump Adjustment

Proper oil injection pump adjustment is very important. Any delay in the opening of the pump can result in serious engine damage.


To check adjustment: eliminate the throttle cable free-play by pressing the throttle lever until a light resistance is felt then hold in place. The aligning marks on the pump casting and lever must align perfectly. If not, contact your dealer.

Injection pump should be adjusted by your dealer.

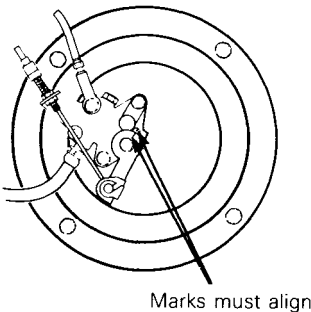

## Fan Belt

Inspect belt for cracks, uneven wear, etc. Check fan belt tension, 10 mm (3/8") should exist when deflection is correct.

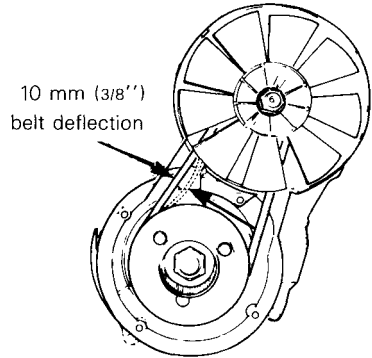


If belt seems damaged or if tension is incorrect, contact your dealer immediately.


◆ **WARNING:** If fan protector is removed, always reinstall after servicing.

## Headlamp Beam Aiming


The angle of the headlamp beam has been pre-adjusted prior to delivery. Should you wish re-adjustment, place the vehicle on a flat surface 7.6 m (25') from a wall or screen.

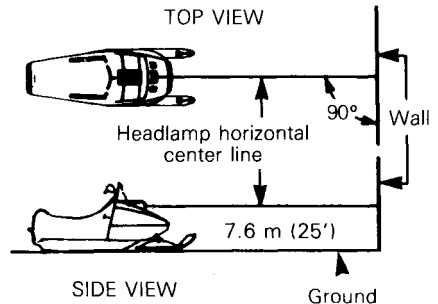

With the suspension correctly adjusted, (if applicable) the rider seated on the vehicle and the high beam ON check that the center of high intensity zone of high beam is 50 mm (2") below horizontal line of headlamp height.

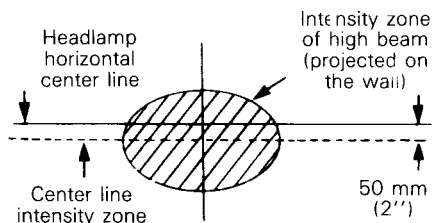


To adjust, remove the four caps, turn upper or lower adjusting screws to obtain desired beam position.

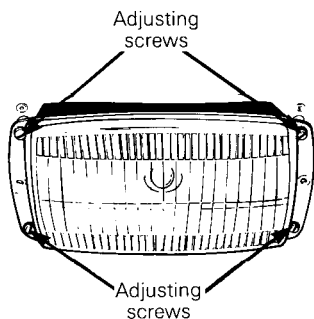

## Bulb Replacement

If the headlamp bulb is burnt, tilt hood, unplug the connector from the headlamp. Remove the rubber boot and unfasten bulb retainer clips. Detach the bulb and replace.

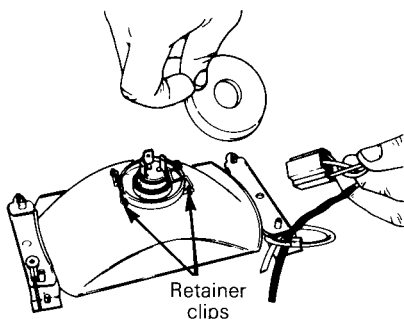

If taillight bulb is burnt, expose the bulb by removing the red plastic lens. To remove, unfasten the two (2) screws.

◆ **WARNING:** Always check light operation after bulb replacement.

## General Inspection

Check the electrical wiring and components, retighten loose connections. Check for stripped wires or damaged insulation. Thoroughly inspect the vehicle and tighten loose bolts, nuts and linkage. Inspect skis and ski runners for wear.

# STORAGE

---

It is during summer, or when a vehicle is not in use for any length of time that proper storage is a necessity. Storage of the snowmobile during long period of inactivity consists of checking and replacing missing, broken or worn parts, proper lubrication and treatment to insure that parts do not become rusted; cleaning items such as carburetor of oil mixtures, to prevent gum varnish formation within the carburetor; and in general, preparing the vehicle so that when the time comes to use the snowmobile again it will be in top condition.

◆ **WARNING:** Only perform such procedures as detailed in this manual. It is recommended that dealer assistance be periodically obtained on other components/systems not covered in this manual. Unless otherwise specified, engine should be turned OFF for all lubrication and maintenance procedures.

## Track

Inspect the track for wear, cuts, missing track guides and broken rods. Make any necessary replacement.

◆ **WARNING:** Do not operate a snowmobile with a cut, torn or damage track.

Lift the rear of vehicle until track is clear of the ground then support with a brace or trestle. The snowmobile should be stored in such a way that the track does not stay in contact with the cement floor or bare ground.

○ **NOTE:** The track should be rotated periodically, (every 40 days). Do not release track tension.


▼ **CAUTION:** To prevent track damage, temperature in the storage area must not exceed 38°C (100°F).

## Suspension

Remove any dirt or rust. Grease idler wheels at grease fittings. (If applicable). Wipe off surplus. Replace worn slider shoes.

## Skis

Wash or brush all dirt or rust accumulation from the skis and springs. Grease the ski legs at the grease fittings. Check the condition of the skis, ski runners and leaf springs. Replace if weak or worn more than half.

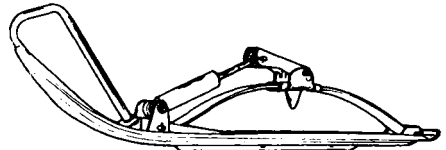

Ski runner

## Controls

Lubricate the steering mechanism. Inspect all components for tightness, (spring coupler bolts, steering arm locking bolts, tie rods, ball joints, etc.) Tighten if necessary. Oil metal moving joints of the brake mechanism.

◆ **WARNING:** Do not lubricate the throttle and/or brake cables and housings. Avoid getting oil on the brake pads.

Coat all electrical connections and switches with a greaseless metal protector. If unavailable, use petroleum jelly.

## Chaincase

Drain the chaincase and refill to proper level, using fresh chaincase oil (P/N 413 8019 00). To drain, remove the chaincase cover.

## Drive Pulley

The drive pulley should be inspected by an authorized dealer.

## Engine and Primer Lubrication

Engine internal parts must be lubricated to protect them from possible rust formation during the storage period.




To perform the storage procedures (engine and primer valve) proceed as follows:

1. Lift the rear of the vehicle and support it off the ground.

**WARNING:** Ensure the track is free of all particles which could be thrown out while it is rotating. Keep hands, tools, feet and clothing clear of track. Ensure no-one is standing in close proximity to the vehicle.

2. Start the engine and allow it to run at idle speed until the engine reaches its operational temperature.
3. Stop the engine.
4. Disconnect the inlet primer hose from the primer valve.

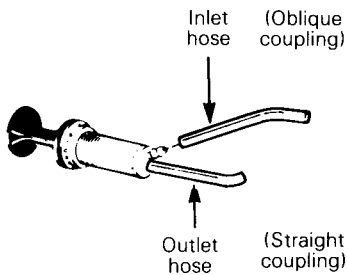

5. Plug inlet primer hose to prevent gasoline from draining.
6. Using an appropriate hose, connect one end of the hose to the inlet of the primer valve and place the other end in a Bombardier Snowmobile Injection Oil container.
7. Activate the primer in order to fill it with oil.
8. Restart engine and run at idle.
9. Using the primer valve, inject oil until the engine dies or until a sufficient quantity of oil has entered the engine (approximately 25 complete strokes of the primer).

10. The engine stopped, remove the spark plug and pour approximately 85 ml (3 fl. oz. Imp.) of oil into the cylinder.
11. Crank the engine to allow the crankshaft to turn 2 or 3 revolutions.
12. Reinstall the spark plug and the inlet primer hose.

Do not run engine during storage period.


## Fuel Tank and Carburetor

Remove the cap then using a syphon, remove the gasoline from tank.

**WARNING:** Gasoline is flammable and explosive under certain conditions. Always manipulate in a well ventilated area. Do not smoke or allow open flames or sparks in the vicinity.

Carburetor must be dried out completely to prevent gum formation during the storage period.

Once the fuel tank is emptied, remove the float chamber drain plug from carburetor. Drain carburetor.

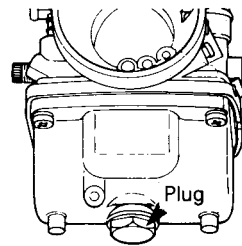

Reinstall plug.


Check all fuel lines, replace if necessary.

## Battery

1. Disconnect the battery cables and remove the battery retainer cover.

**CAUTION:** Be careful not to ground positive terminal with

the chassis. Always disconnect black negative cable first.

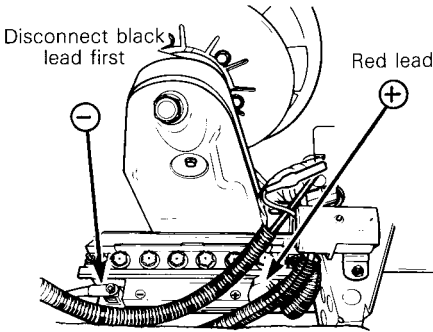

2. Remove the battery vent tube from the vent hole.
3. Lift out the battery.
4. Clean outside surface of battery with solution of baking soda and water. Remove all deposits from posts then rinse with clear tap water.

▼ **CAUTION:** Do not allow cleaning solution to enter battery interior since it will destroy the electrolyte.

5. Check electrolyte level. Refill if necessary with distilled water. Fully charge battery at a maximum rate of 2.0 amps.

◆ **WARNING:** Gases given off by a battery being charged are highly explosive. Always charge in a well ventilated area. Keep battery away from cigarettes or open flames. Avoid skin contact with electrolyte.

6. Coat electrical connections and switches with a greaseless metal projector, if unavailable, use petroleum jelly.
7. Store unit in a cool, dry place.

▼ **CAUTION:** Prior to charging the battery, always remove it from the vehicle to prevent electrolyte spillage.

○ **NOTE:** To prevent battery from discharging, store it on a wooden shelf away from moisture. A stored battery must be recharged at least every 40 days.

## Chassis

Clean the vehicle thoroughly, removing all dirt and grease accumulation.

▼ **CAUTION:** Plastic alloy components such as fuel tank, windshield, controls, etc., can be cleaned using mild detergents or isopropyl alcohol. Do not use strong soaps, degreasing solvents, abrasive cleaners, paint thinners, etc.

Inspect the hood and repair any damage. Clean the frame.

Touch up all metal spots where paint has been scratched off. Spray all bare metal parts with metal protector. Wax the hood and the painted portion of the frame for better protection.

○ **NOTE:** Apply wax on glossy finish only. Protect the vehicle with a cover to prevent dust accumulation during storage.

▼ **CAUTION:** If for some reason the snowmobile has to be stored outside it is necessary to cover it with an opaque tarpaulin. This caution will prevent the sun rays and the grime from affecting the plastic components and the vehicle finish.

## General Inspection

Check the electrical wiring and components, retighten loose connections. Check for stripped wires or damaged insulation.

Thoroughly inspect the vehicle and tighten loose bolts, nuts and linkage.

○ **NOTE:** Leave the drive belt off the pulleys for the entire storage period.

## Suspension Stopper Strap

Replace annually and/or as condition dictates. Torque nut to 9 N•m (7 lbf•ft)

# PRE-SEASON PREPARATION

To simplify the pre-season preparation we have drawn up a small chart. The chart indicates servicing points to be performed by you and your servicing dealer. If these services are performed as suggested, your vehicle will give you many hours of fun and low cost use.

**IMPORTANT:** Observe all Warnings and Cautions mentioned throughout this manual which are pertinent to the item being checked. When component conditions seem less than satisfactory, replace with genuine Bombardier parts or suitable equivalents.

| <b>PRE-SEASON PREPARATION CHART</b>                       | TO BE PERFORMED BY DEALER | ● |
|---|---------------------------|---|
|   | TO BE PERFORMED BY OWNER  | ○ |
| Change spark plug   |                           | ○ |
| Check chaincase oil level                                 |                           | ○ |
| Replace fuel filter (located inside fuel tank)            |                           | ○ |
| Check track tension and alignment                         |                           | ○ |
| Lubricate suspension                                      |                           | ○ |
| Inspect drive belt and install                            |                           | ○ |
| Check throttle cable for damage and free operation        |                           | ○ |
| Check steering alignment and ski runner condition         |                           | ○ |
| Inspect seals for possible cuts or leaks                  |                           | ○ |
| Check electrical wiring (broken wire, damaged insulation) |                           | ○ |
| Reinstall battery (electric starting model)               |                           | ○ |
| Inspect condition of starting rope                        |                           | ○ |
| Check tightness of all bolts, nuts and linkage            |                           | ○ |
| Refill gas tank   |                           | ○ |
| Replace injection oil filter                              |                           | ● |
| Refill injection oil tank                                 |                           | ● |
| Inspect brake condition and operation                     |                           | ● |
| Set engine timing   |                           | ● |
| Check pulleys, verify components and clean                |                           | ● |
| Adjust carburetor   |                           | ● |
| Adjust oil injection pump                                 |                           | ● |
| Check fan belt condition and adjust tension               |                           | ● |



\*NOTE: Before installing new spark plug, it is suggested to burn the excess storage oil by starting the engine, using the old spark plug.



CAUTION: Only perform this procedure in a well ventilated area.

# TROUBLE SHOOTING GUIDE

○ NOTE: The possible causes have been listed in an order of frequency. Therefore, items should be checked out in the same order as mentioned in the trouble shooting guide.

| SYMPTOMS   | POSSIBLE CAUSES                      | WHAT TO DO  |
|--|--------------------------------------|---|
| Engine turns over but fails to start or starts with difficulty | 1. No fuel to the engine             | Check the tank level. Check for possible clogging of fuel line, item 4.   |
|  | 2. Flooded engine                    | Remove wet spark plugs, turn ignition to OFF and crank engine several times. Install clean dry spark plugs. Start engine following usual starting procedure. If engine continues to flood, see your dealer.   |
|  | 3. Spark plug/ignition               | Check for fouled or defective spark plug. Disconnect spark plug wire, unscrew plug and remove from cylinder head. Reconnect wire and ground exposed plug on engine cowl, <b>being careful to hold away from spark plug hole.</b> Follow engine starting procedure and check for spark. If no sparks appear, replace spark plug. If trouble persists, contact your dealer. |
|  | 4. Clogged fuel line (water or dirt) | Remove and clean the fuel filter. Change filter cartridge if necessary. Check condition and connections of fuel lines. Check the cleanliness of fuel tank.  |
|  | 5. Carburetor                        | Contact your dealer for repair.   |
|  | 6. Too much oil in fuel              | Contact your dealer.  |
|  | 7. Engine timing                     | Engine timing may be incorrect or out of adjustment. Contact your dealer.   |
|  | 8. Engine compression                | Running with a lean fuel mixture may produce excessive engine wear resulting in poor engine compression. If this occurs, contact your dealer at once.   |
| Engine will not turn manually                                  | 1. Seized engine                     | In the case of a seized engine contact your dealer.   |


| <b>SYMPTOMS</b>                    | <b>POSSIBLE CAUSES</b>               | <b>WHAT TO DO</b>   |
|------------------------------------|--------------------------------------|---|
| Engine lacks acceleration or power | 1. Fouled or defective spark plug    | Check item 3 of "Engine turns over but fails to start or starts with difficulty"  |
|                                    | 2. Clogged fuel line (water or dirt) | Check fuel line condition. (See item 4 of "Engine turns over but fails to start or starts with difficulty").  |
|                                    | 3. Carburetors                       | Contact your dealer.  |
|                                    | 4. Ignition                          | First check item 3 of "Engine turns over but fails to start or starts with difficulty". If the ignition system still seems faulty, contact your dealer. |
|                                    | 5. Engine                            | If unable to locate specific symptoms, contact your dealer.   |
| Engine continually backfires       | 1. Faulty spark plug                 | Check item 3 of "Engine turns over but fails to start or starts with difficulty".   |
|                                    | 2. Overheating                       | Carburetor set too lean. Contact your dealer.   |
|                                    | 3. Engine timing incorrectly set     | Contact your dealer.  |
| Snowmobile cannot reach full speed | 1. Drive Belt                        | Check for damaged or worn drive belt. Replace if necessary.   |
|                                    | 2. Incorrect track adjustment        | Check track tension and alignment. Readjust to specifications. (See Maintenance Section).   |
|                                    | 3. Engine                            | Check item 1 to 5 of "Engine lacks acceleration or power."  |
|                                    | 4. Pulley misaligned                 | Contact your dealer.  |

# TOOLS

---

As standard equipment each new snowmobile is supplied with basic tools such as screwdriver, wrenches, emergency starter rope, etc...

## Standard Tools

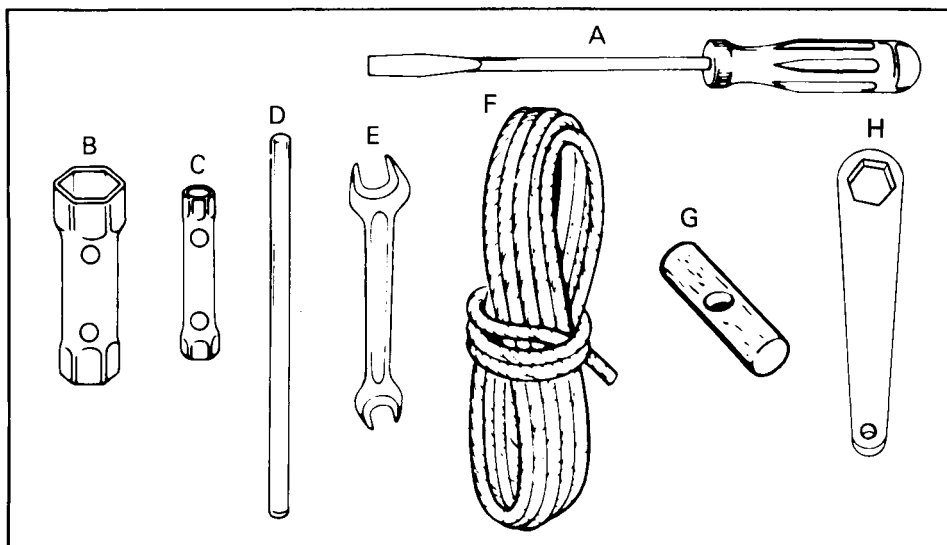

- A. Screwdriver
- B. Socket 21/26 mm
- C. Socket 10/13 mm
- D. Socket handle
- E. Fork wrench 10/13 mm
- F. Starter rope
- G. Emergency starter rope handle
- H. Suspension key (Tundra models only)

# SPECIFICATIONS

|  | <b>CITATION LS<br/>&amp; LS ELECTRIC</b>                 | <b>TUNDRA</b>                                   | <b>TUNDRA LT</b>                                |
|--|--|---|---|
| <b>ENGINE</b>                                |  |   |   |
| Type   |  | 253   |   |
| No. of cylinders                             |  | 1   |   |
| Bore   |  | 72.0 mm (2.835'')                               |   |
| Stroke                                       |  | 61.0 mm (2.402'')                               |   |
| Displacement                                 |  | 248.4 cm <sup>3</sup> (15.16 in <sup>3</sup> )  |   |
| Compression ratio<br>(effective)             |  | 6.25 : 1  |   |
| Maximum R.P.M                                |  | 7500  |   |
| Carburetor type                              |  | VM 34-319                                       |   |
| Carburetor adjustment:                       |  |   |   |
| — air screw                                  |  | 1 turn  |   |
| — idle speed                                 |  | 1100 - 1300 R.P.M.                              |   |
| Fan belt deflection                          |  | 10 mm (3/8'')                                   |   |
| Torque:                                      |  |   |   |
| — engine head cylinder nuts                  |  | M8: 21 N•m (15 lbf•ft)                          |   |
| — crankcase screws                           |  | M6: 9 N•m (7 lbf•ft)                            |   |
| — magneto ring nut                           |  | 85 N•m (63 lbf•ft)                              |   |
| — fan nut                                    |  | 55 N•m (41 lbf•ft)                              |   |
| — crankcase engine support<br>nuts or screws |  | 21 N•m (15 lbf•ft)                              |   |
| — electrical starter bolts                   |  | M5: 3.3 N•m (29 lbf•in)                         |   |
| <b>CHASSIS</b>                               |  |   |   |
| Overall length                               | 242 cm (95.3'')  | 272 cm (107.1'')                                | 287 cm (113'')                                  |
| Overall width                                | 84.5 cm (33.3'')   | 84.5 cm (33.3'')                                | 84.5 cm (33.3'')                                |
| Overall height                               | 91.5 cm (36'')   | 111 cm (43.7'')                                 | 111 cm (43.7'')                                 |
| Ski stance (center to<br>center)             | 72.5 cm (28.5'')   | 72.5 cm (28.5'')                                | 72.5 cm (28.5'')                                |
| Ski alignment (toe out)                      | 3 mm (1/8'')   | 3 mm (1/8'')                                    | 3 mm (1/8'')                                    |
| Torque:                                      |  |   |   |
| — steering arm/ski leg bolt                  | 61 N•m (45 lbf•ft)                                       | 61 N•m (45 lbf•ft)                              | 61 N•m (45 lbf•ft)                              |
| — steering column/<br>handlebar              | 26 N•m (19 lbf•ft)                                       | 26 N•m (19 lbf•ft)                              | 26 N•m (19 lbf•ft)                              |
| Weight                                       | 133.8 kg (295 lb)<br>manual, 150 kg<br>(324 lb) electric | 148.8 kg (328 lb)                               | 162.4 kg (358 lb)                               |
| Bearing area                                 | 4748 cm <sup>2</sup><br>(736 in <sup>2</sup> )           | 6600 cm <sup>2</sup><br>(1023 in <sup>2</sup> ) | 7581 in <sup>2</sup><br>(1175 in <sup>2</sup> ) |
| Ground pressure                              | 2.81 kPa<br>(.401 lb/in <sup>2</sup> )                   | 3.16 kPa<br>(.440 lb/in <sup>2</sup> )          | 2.14 kPa<br>(.30 lb/in <sup>2</sup> )           |


|                          | <b>CITATION LS<br/>&amp; LS ELECTRIC</b>                           | <b>TUNDRA</b>                | <b>TUNDRA LT</b> |
|--------------------------|--|------------------------------|------------------|
| <b>POWER TRAIN</b>       |  |                              |                  |
| Track:                   |  |                              |                  |
| —width                   | 38.1 cm (15")  | 38.1 cm (15")                | 38.1 cm (15")    |
| —length                  | 260 cm (102")  | 315 cm (124")                | 353 cm (139")    |
| —tension                 | 13 mm (1/2") gap between slider shoe and bottom inside of track    |                              |                  |
| —alignment               | Equal distance between edge of track guides and slider shoes       |                              |                  |
| Standard gear ratio      | 15/27  | 12/27                        | 12/27            |
| Drive belt:              |  |                              |                  |
| —number                  |  | 414 5234 00                  |                  |
| —max. width              |  | 33.3 mm (1 5/16")            |                  |
| —min. width              |  | 30 mm (1 3/16")              |                  |
| Chaincase oil            |  | 200 ml (7 oz)                |                  |
| <b>ELECTRICAL</b>        |  |                              |                  |
| Lighting system (output) |  | 160 W                        |                  |
| Bulb:                    |  |                              |                  |
| —headlamp                |  | 60/60 W                      |                  |
| —tail/stop               |  | 5/21 W                       |                  |
| Fuse:                    |  |                              |                  |
| —starter solenoid        |  | 30 A                         |                  |
| Spark plug               |  |                              |                  |
| —type                    |  | NGK BR9ES                    |                  |
| —gap                     |  | 0.4 mm (.016")               |                  |
| Ignition timing:         |  |                              |                  |
| —timing mark (B.T.D.C.)  |  | 2.31 mm (.091") (20°)        |                  |
| —stroboscopic timing     |  | 6000 R.P.M.                  |                  |
| <b>FUEL</b>              |  |                              |                  |
| Gas type                 |  | regular leaded or unleaded   |                  |
| Fuel tank capacity       |  |                              |                  |
| —SI                      |  | 26 L                         |                  |
| —Imp.                    |  | 5.7 Gal                      |                  |
| —U.S.                    |  | 6.9 Gal                      |                  |
| Injection oil            |  |                              |                  |
| Type                     |  | Bombardier oil injection oil |                  |
| —SI                      |  | 1.5 L                        |                  |
| —Imp.                    |  | 53 oz                        |                  |
| —U.S.                    |  | 51 oz                        |                  |
| <b>BRAKE</b>             |  |                              |                  |
| Type                     |  | Disc self-adjusting          |                  |
| Lining minimum thickness | when only 1 mm (1/32") of fixed pad is projected out of caliper    |                              |                  |
| Control lever adjustment | 13 mm (1/2") minimum distance from handlebar grip when fully apply |                              |                  |

*Bombardier Inc. reserves the right to make changes in design and specifications and/or to make additions to, or improvements in its product without imposing any obligation upon itself to install them on its products previously manufactured.*



# WIRING DIAGRAM

## Electric starting

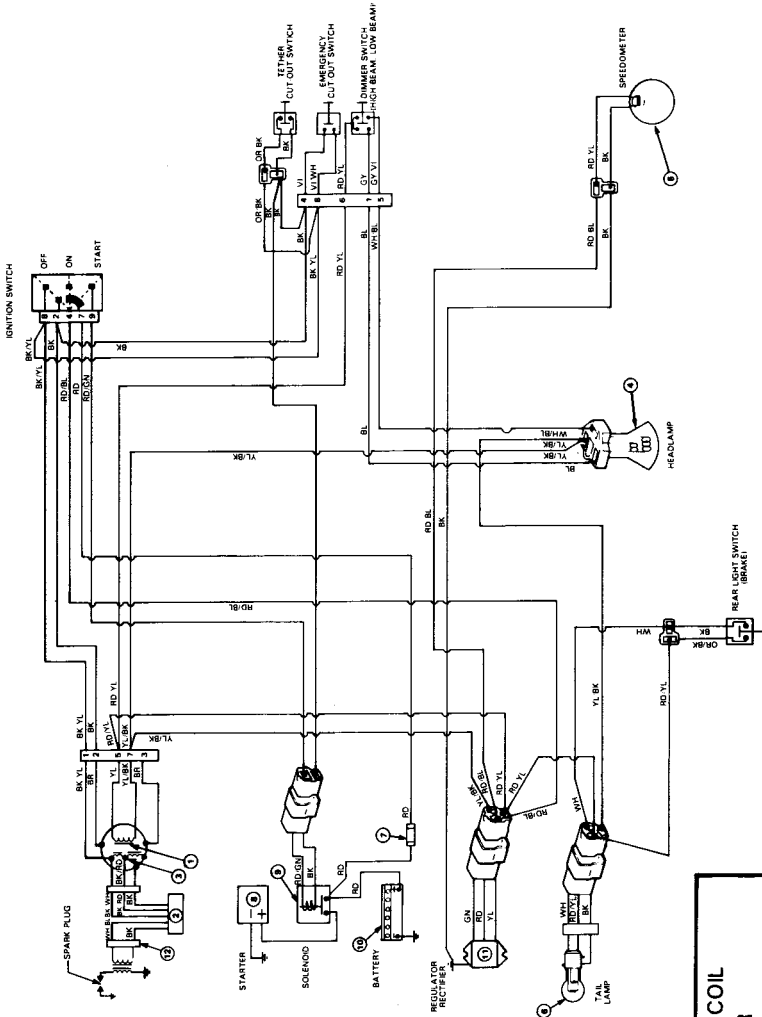


| COLOUR CODE |        |
|-------------|--------|
| BK          | BLACK  |
| WH          | WHITE  |
| RD          | RED    |
| BL          | BLUE   |
| YL          | YELLOW |
| GN          | GREEN  |
| GY          | GREY   |
| VI          | VIOLET |
| OR          | ORANGE |
| BR          | BROWN  |

**WARNING:** Ensure all terminals are properly crimped on the wires and all connector housings are properly fastened.

- |   |                    |
|---|--------------------|
| ① | LIGHTING COIL      |
| ② | AMPLIFIER          |
| ③ | GENERATOR COIL     |
| ④ | HEADLAMP (60/60 W) |
| ⑤ | LIGHT (5 W)        |
| ⑥ | REAR LAMP (5-21 W) |
| ⑦ | VOLTAGE REGULATOR  |
| ⑧ | IGNITION COIL      |

# WIRING DIAGRAM

## Manual starting

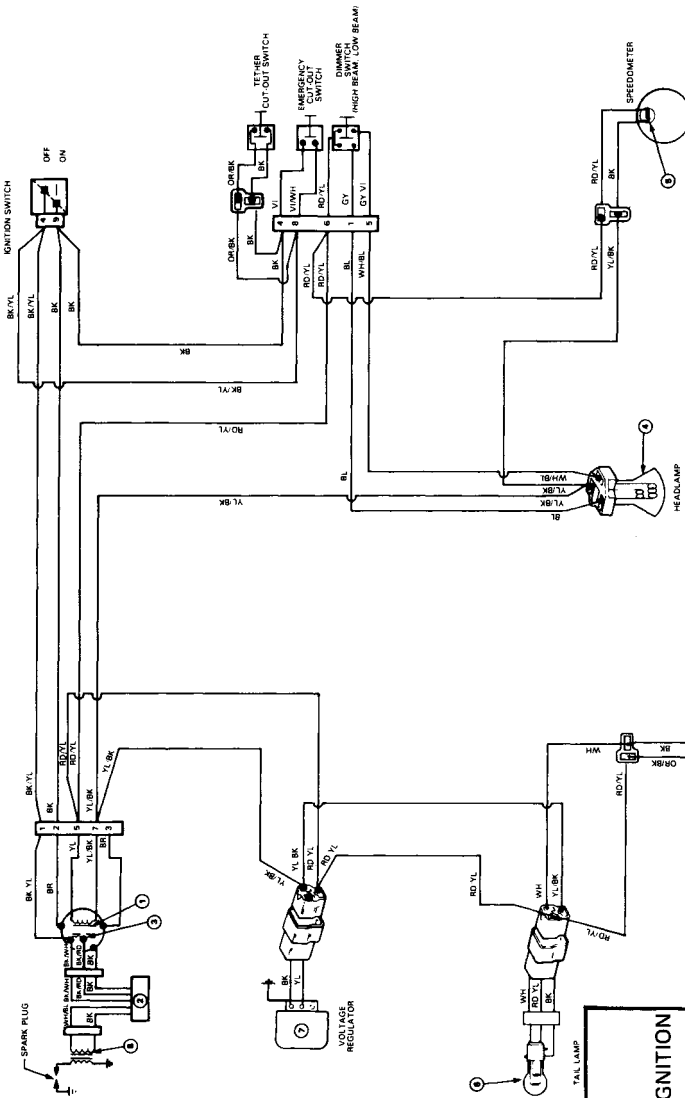

**COLOUR CODE**

|    |   |        |    |   |        |
|----|---|--------|----|---|--------|
| BK | — | BLACK  | GN | — | GREEN  |
| WH | — | WHITE  | GY | — | GREY   |
| RD | — | RED    | VI | — | VIOLET |
| BL | — | BLUE   | OR | — | ORANGE |
| YL | — | YELLOW | BR | — | BROWN  |

**WARNING:** Ensure all terminals are properly crimped on the wires and all connector housings are properly fastened.

- |    |                         |
|----|-------------------------|
| 1  | LIGHTING COIL           |
| 2  | AMPLIFIER               |
| 3  | GENERATOR COIL IGNITION |
| 4  | BULB (60/60 W)          |
| 5  | BULB (5 W)              |
| 6  | REAR BULB (5-21 W)      |
| 7  | FUSE (30 A)             |
| 8  | SOLENOID                |
| 9  | BATTERY (24 A)          |
| 10 | REGULATOR RECTIFIER     |
| 11 | IGNITION COIL           |
| 12 |                         |

# SI \* INFORMATION GUIDE

---

## BASE UNITS

| DESCRIPTION | UNIT               | SYMBOL |
|-------------|--------------------|--------|
| length      | meter              | m      |
| mass        | kilogram           | kg     |
| liquid      | liter              | L      |
| temperature | celsius            | °C     |
| pressure    | kilopascal         | kPa    |
| torque      | Newton meter       | N•m    |
| speed       | kilometer per hour | km/h   |

---

## PREFIXES

| PREFIX | SYMBOL | MEANING             | VALUE |
|--------|--------|---------------------|-------|
| kilo   | k      | one thousand        | 1,000 |
| centi  | c      | one hundredth of a  | 0.01  |
| milli  | m      | one thousandth of a | 0.001 |

\* THE INTERNATIONAL SYSTEM OF UNITS (SYSTEME INTERNATIONAL) ABBREVIATES "SI" IN ALL LANGUAGES.

# NOTES

---

# CHANGE OF ADDRESS OR OWNERSHIP

Any change in address or ownership should be brought to the attention of the manufacturer by completing and sending out the card supplied below.

NOTICE TO ALL NEW OWNERS: Make sure to receive the warranty registration card from the previous owner, at the time the ownership is transferred. Also enclose a photocopy of this registration card when informing of a change of ownership.



## CHANGE OF ADDRESS

VEHICLE IDENTIFICATION NUMBER

|  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

OLD ADDRESS:

|       |                |                   |
|-------|----------------|-------------------|
| _____ |                |                   |
| NAME  |                |                   |
| _____ | _____          | _____             |
| NO    | STREET         | APT.              |
| _____ | _____          | _____             |
| CITY  | STATE/PROVINCE | ZIP / POSTAL CODE |

NEW ADDRESS:

|       |                |                   |
|-------|----------------|-------------------|
| _____ |                |                   |
| NAME  |                |                   |
| _____ | _____          | _____             |
| NO    | STREET         | APT.              |
| _____ | _____          | _____             |
| CITY  | STATE/PROVINCE | ZIP / POSTAL CODE |



## CHANGE OF OWNERSHIP

VEHICLE IDENTIFICATION NUMBER

|  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

The ownership of this vehicle is transferred

FROM:

|       |                |                   |
|-------|----------------|-------------------|
| _____ |                |                   |
| NAME  |                |                   |
| _____ | _____          | _____             |
| NO    | STREET         | APT.              |
| _____ | _____          | _____             |
| CITY  | STATE/PROVINCE | ZIP / POSTAL CODE |

TO:

|       |                |                   |
|-------|----------------|-------------------|
| _____ |                |                   |
| NAME  |                |                   |
| _____ | _____          | _____             |
| NO    | STREET         | APT.              |
| _____ | _____          | _____             |
| CITY  | STATE/PROVINCE | ZIP / POSTAL CODE |



---

**BOMBARDIER INC.**  
ATT.: WARRANTY DEPARTMENT  
VALCOURT, QUEBEC  
CANADA, JOE 2LO

**BOMBARDIER INC.**  
ATT.: WARRANTY DEPARTMENT  
VALCOURT, QUEBEC  
CANADA, JOE 2LO